

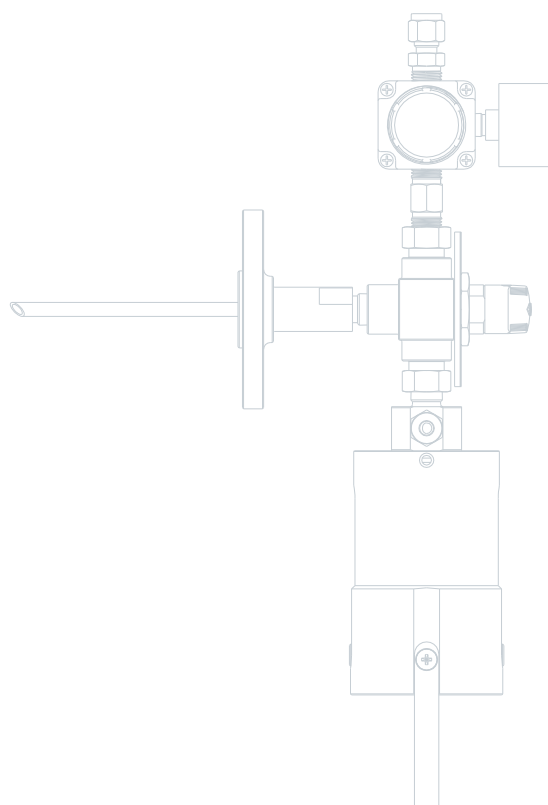
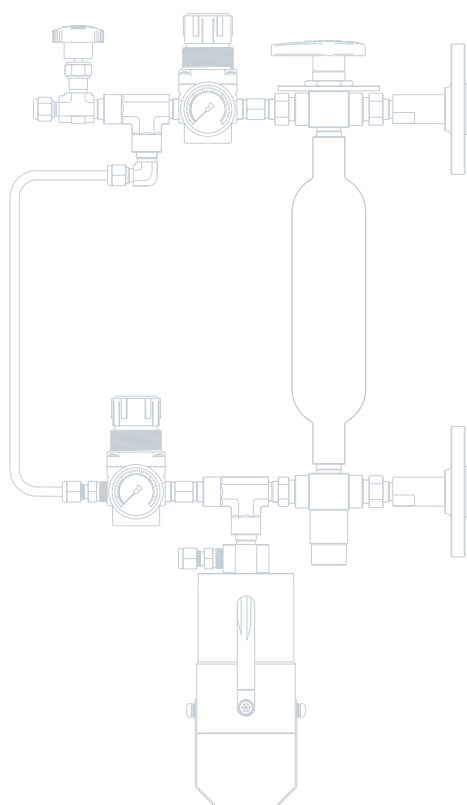

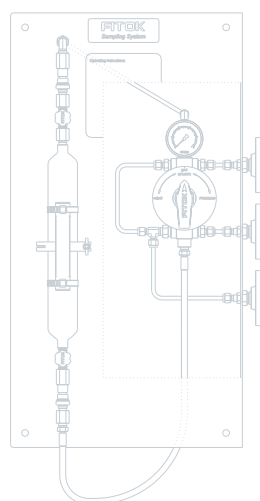




FITOK

Full Technical Catalog
for Sampling Systems

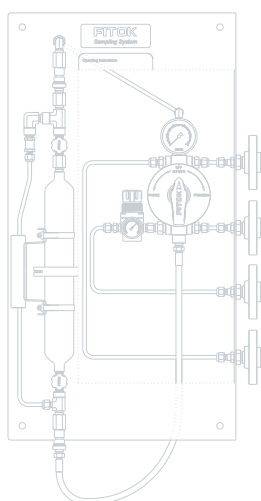

FITOK Full Technical Catalog

for Sampling Systems

Contents

Overview

1

BL - Bottle Configuration Sampling Systems for Liquids

3	A Series	BLA1 - On-off Type	3
		BLA2 - System Purge Type	5
		BLA3 - Back Purge Type	7
		BLA4 - Needle Purge Type	9
		BLA5 - Back and Needle Purge Type	11
		BLA6 - System Purge and Continuous Needle Purge Type	13
		BLA7 - In-line and Needle Purge Type	15
17	B Series	BLB1 - On-off Type with In-line Ball Valve	17
		BLB2 - On-off Type with In-line Needle Valve	19
		BLB3 - In-line and Continuous Needle Purge Type	21
23	C Series	BLC1 - Purge Type	23
		BLC2 - Fixed Volume and Purge Type	25
		BLC3 - Fixed Volume Type with Heating/Cooling Jacket	27
		BLC4 - Solvent Purge Type	29
31	D Series	BLD1 - Threaded Connection Type	31
		BLD2 - Continuous Needle Purge Type	33
		BLD3 - Heating/Cooling Type	35
		BLD4 - Sampling by Gravity Type	37
		BLD5 - Sampling by Gravity Type with Heating/Cooling Jacket	39
41	E Series	BLE1 - Back Purge Type with Vacuum Connection	41
		BLE2 - Back and Needle Purge Type with Vacuum Connection	43
		BLE3 - Back Purge Type with Venturi Unit	45
		BLE4 - Back and Needle Purge Type with Venturi Unit	47
		BLE5 - Overflow Type with Vacuum Connection	49
		BLE6 - Fixed Volume Type	51

CS - Cylinder Configuration Sampling Systems for Liquefied Gases

53	F Series	CSF1 - System Purge Type with Expansion Chamber	53
		CSF2 - Expansion Chamber Purge Type	55
		CSF3 - Bypass Purge Type with Expansion Chamber	57
		CSF4 - Vent to Flare Type with Expansion Chamber	59
		CSF5 - Outage Tube Type	61
		CSF6 - Bypass Purge Type with Outage Tube	63
		CSF7 - Vent to Flare Type with Outage Tube	65

CG - Cylinder Configuration Sampling Systems for Gases

67		G Series	CGG1 - System Purge Type	67
			CGG2 - Bypass and System Purge Type	69
			CGG3 - Vent to Flare Type	71

SR - Sample Handling Systems

73		R Series	SRB - Sample Recovery System for Bottle	73
			SRC - Sample Emptying System for Cylinder	75

Accessories

77		Sample Bottles	77
		Septa	77
		Caps	77
		Needle Assemblies	77
		Sleeves	77
		Valves	78
		Cylinders and Cylinder Assemblies	78
		Metal Hoses	78
		Quick-connects	78

Application Questionnaire for Selection of FITOK Sampling Systems				79
---	--	--	--	----

Overview

Sampling system, also known as sampler, is a kind of equipment used for representative sample collection from industrial processes. Due to the growing complexity of the industrial processes, the requirements for product analysis increase continuously, and the safety for sampling process is given more and more consideration. The simple and primitive sampling system has evolved into a safe and reliable closed-loop sampling system. FITOK offers two kinds of sampling systems, namely bottle configuration sampling systems and cylinder configuration sampling systems according to the difference of container. For bottle configuration sampling systems, the sample is drawn into the sample bottle at atmospheric pressure. For cylinder configuration sampling systems, however, the sample is drawn into the sample cylinder at process pressure.

Advantages of FITOK Sampling Systems

- ⦿ Safer for the operator
- ⦿ Safer for the sample
- ⦿ Safer for the environment
- ⦿ Ease of operation
- ⦿ Ease of maintenance
- ⦿ Economical
- ⦿ Customization

Bottle Configuration Sampling Systems

- ⦿ Configuration: The container consists of bottle, septum and cap. The sampler consists of tubing, valves and fittings.
- ⦿ Operating principle: During sampling, the sample can flow into the sample bottle through the process needle, while air and vapor in the bottle are vented through the vent needle. When the required amount has been taken, close the sampling system and take out the sample bottle from the sleeve to complete the sampling process.
- ⦿ Applicable process conditions: High-temperature, high-pressure, high-viscosity, corrosive, high-toxicity or environmentally hazardous liquids.
- ⦿ Mounting types: In-line mounted, wall-mounted and bracket-mounted.



Cylinder Configuration Sampling Systems

- ⦿ Configuration: The container consists of a cylinder at both ends equipped with a needle valve and a quick-connect. The sampler consists of tubing, valves and fittings.
- ⦿ Operating principle: During sampling, the sample can flow into the sample cylinder via the sampling loop. When sampling liquefied gases, a fixed amount of sample is transferred to the expansion chamber to make sure that the cylinder is not fully filled. Close the needle valves at both ends of the cylinder to depressurize the quick-connect through the vent. Remove the cylinder from the sampling system to complete the sampling process.
- ⦿ Applicable process conditions: High-temperature, high-pressure, corrosive, high-toxicity, high-volatility or environmentally hazardous liquefied gases, liquids and gases.
- ⦿ Mounting types: Wall-mounted and bracket-mounted.



Options

- ⦿ Panel
- ⦿ Enclosure
- ⦿ Pipe stand
- ⦿ Carbon canister
- ⦿ Spring return handle
- ⦿ Lockable handle
- ⦿ Connection type
- ⦿ Size and material

BL – Bottle Configuration Sampling Systems for Liquids


A Series

BLA1 - On-off Type

Features



- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)

Basic Configuration

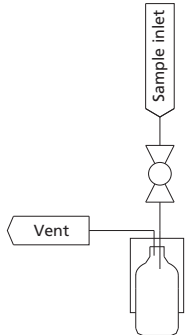Wetted Material	316 SS	
Sleeve Assembly	250 ml sleeve with bottle retaining clip	
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")	
Sampling Valve	BF Series 2-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)	
Connections	1/4" tube fitting	

Note: Products of other specifications are available upon request.


Typical Installation Mode

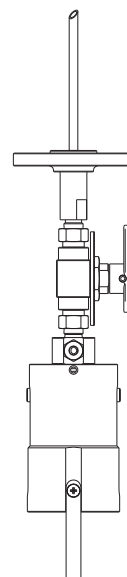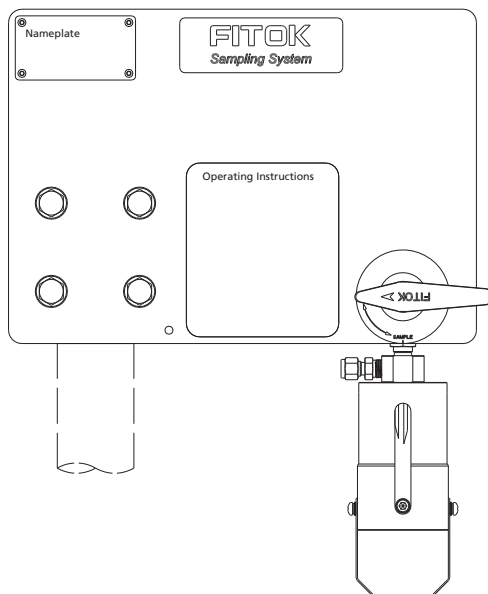

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip. Swing down the bottle retaining clip.

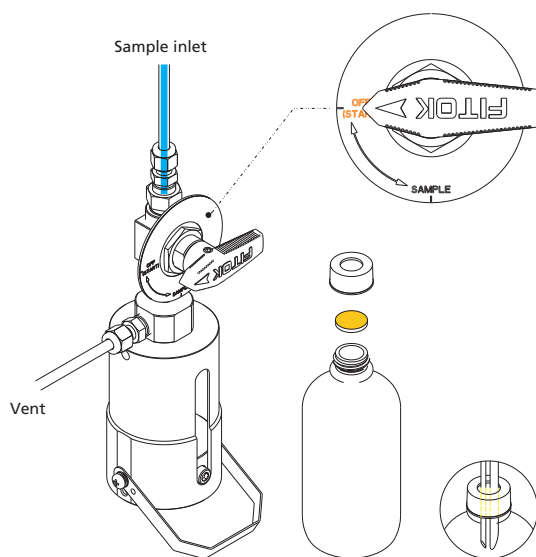


2 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

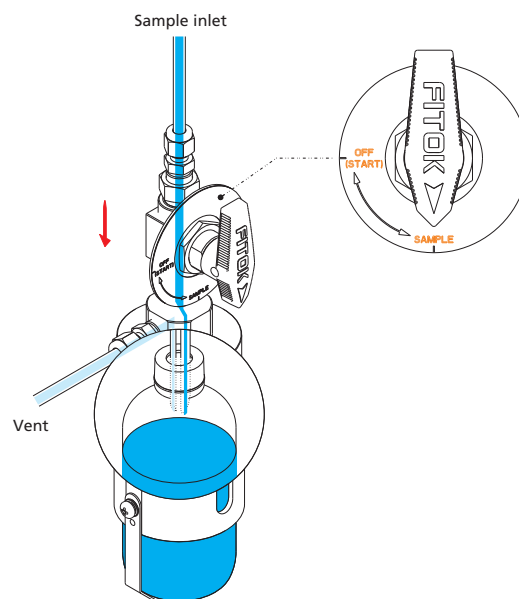

3 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

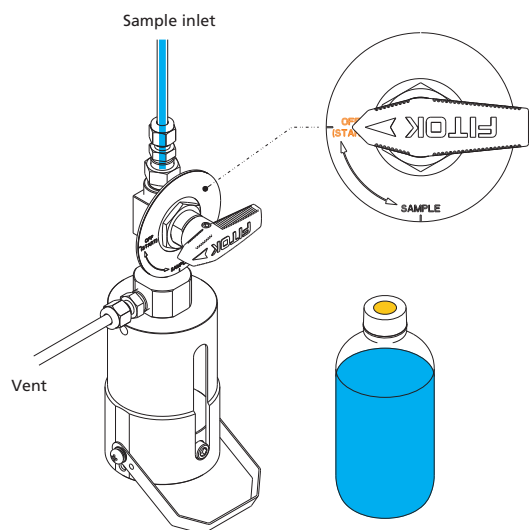


BLA2 - System Purge Type

Features



- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- System purge

Basic Configuration

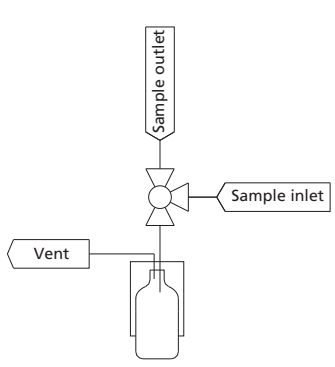Wetted Material	316 SS	
Sleeve Assembly	250 ml sleeve with bottle retaining clip	
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")	
Sampling Valve	BF Series 3-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)	
Connections	1/4" tube fitting	

Note: Products of other specifications are available upon request.


Typical Installation Mode

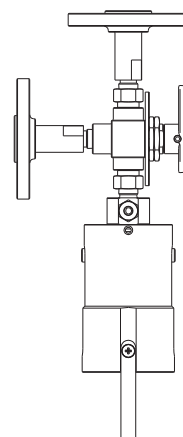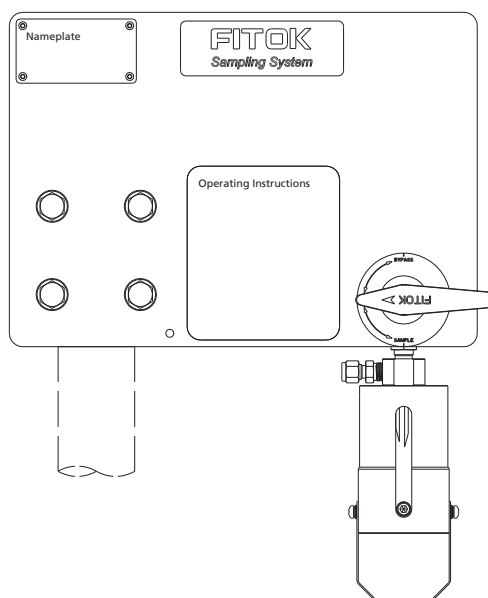

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

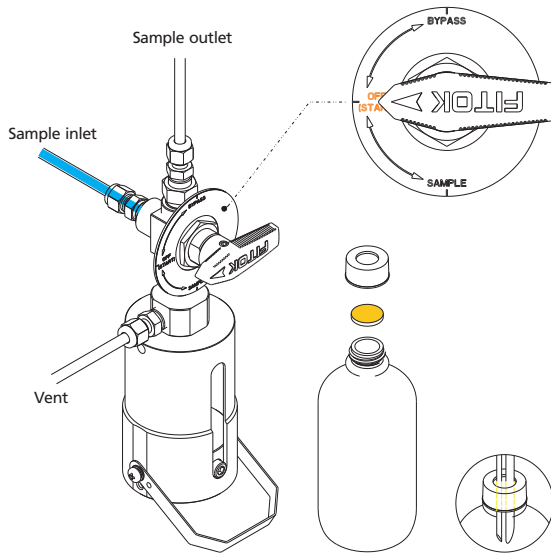


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the system and purge system to ensure representative sampling.

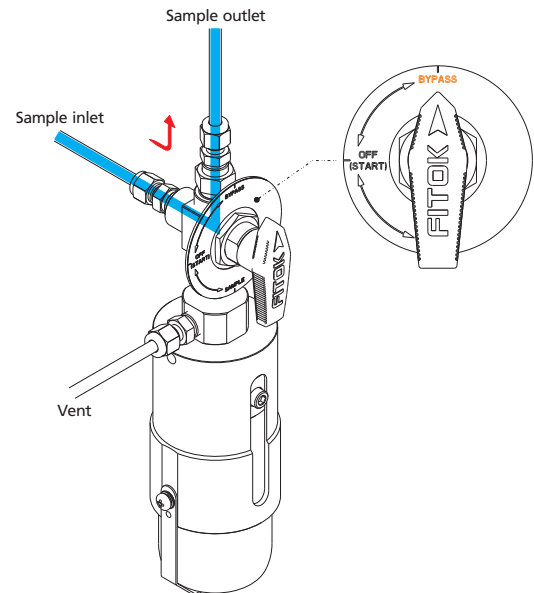


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

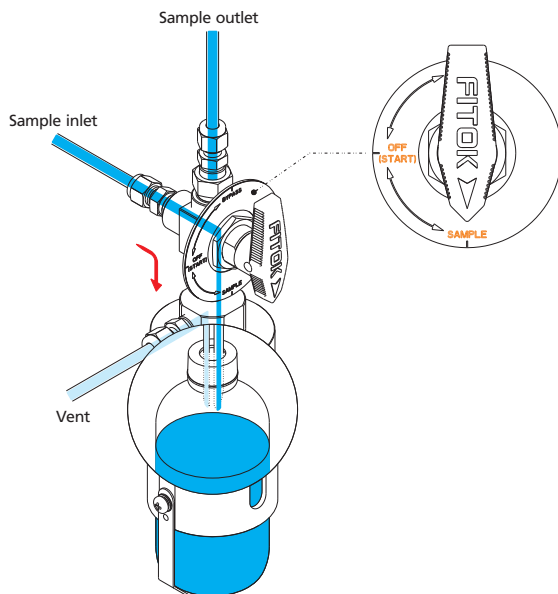

4 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

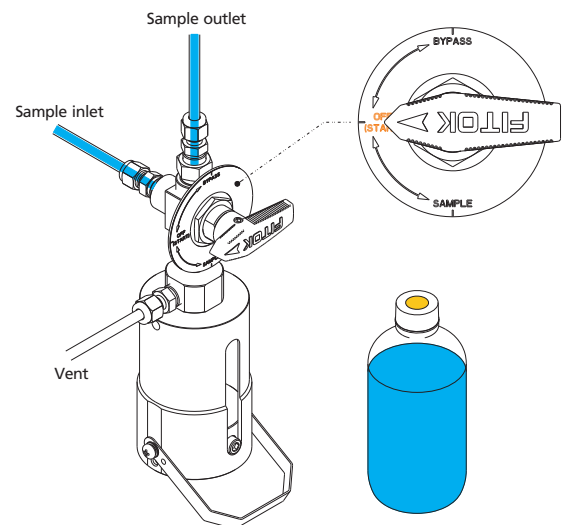


BLA3 - Back Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- Back purge



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting

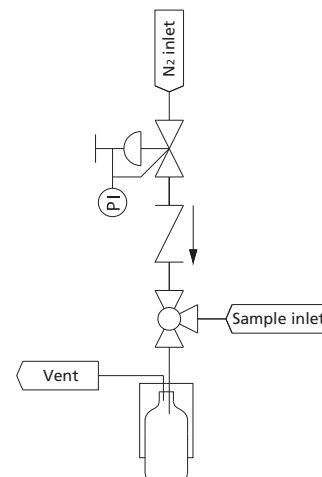

Note: Products of other specifications are available upon request.


Typical Installation Mode

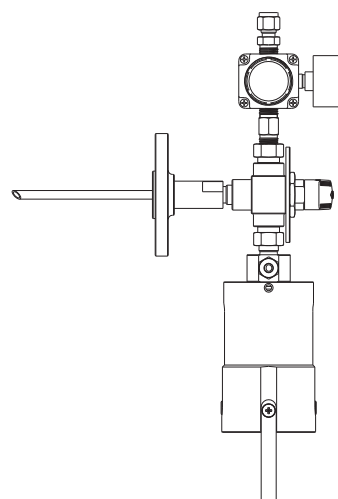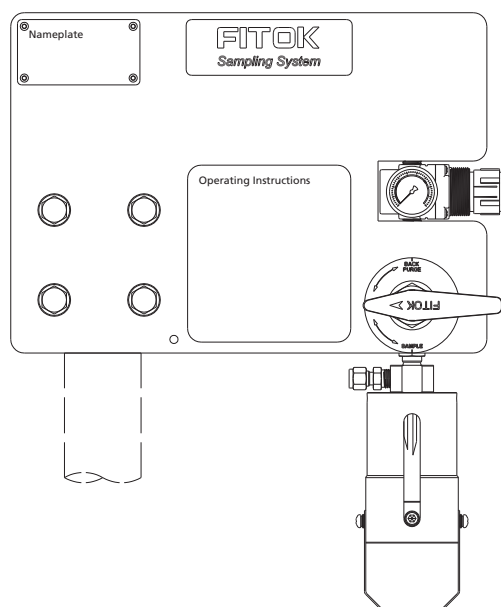

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

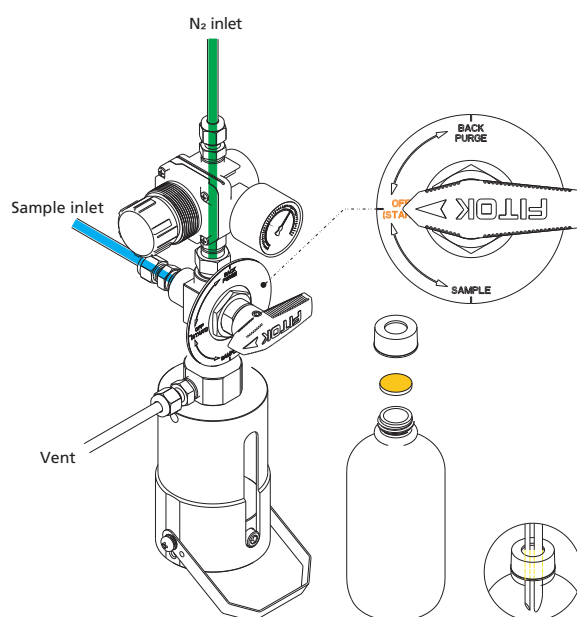


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

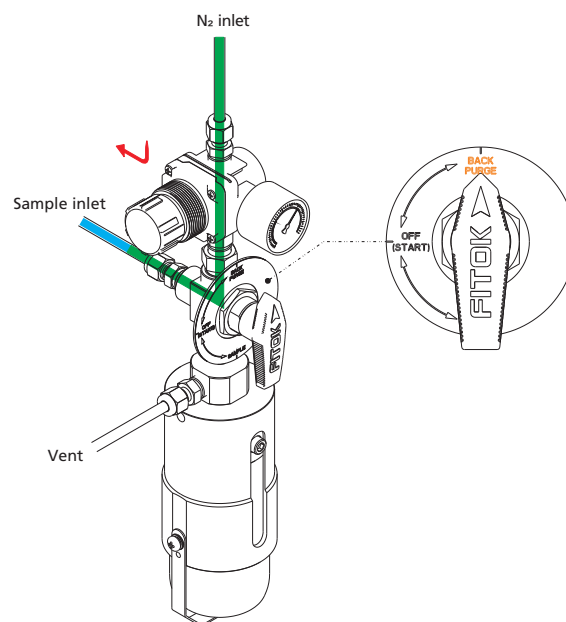


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

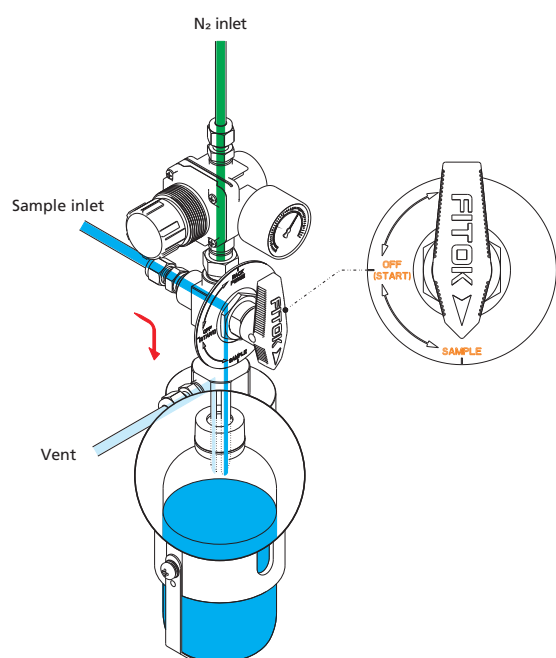

4 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

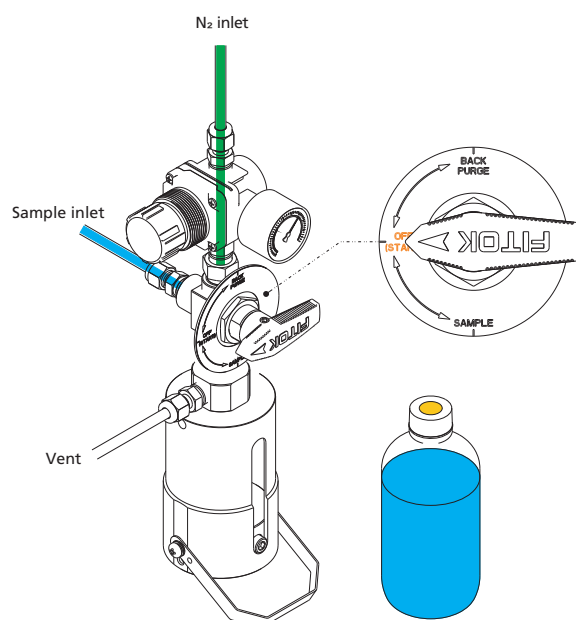


BLA4 - Needle Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- Needle purge



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting

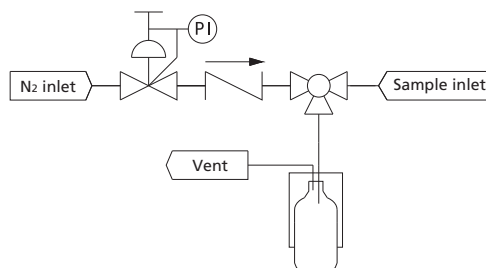

Note: Products of other specifications are available upon request.


Typical Installation Mode

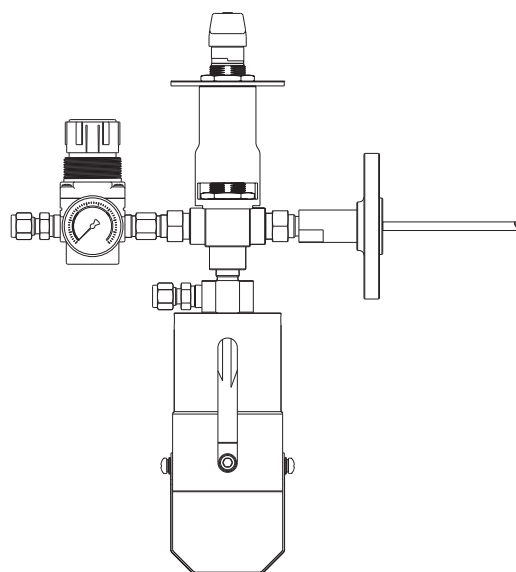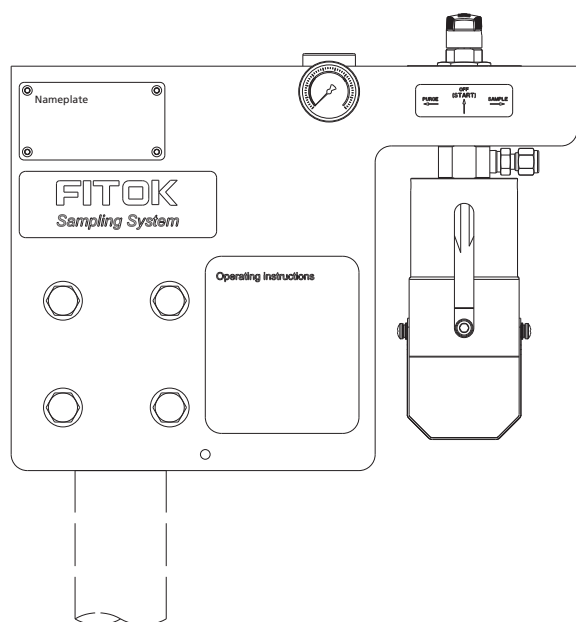

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

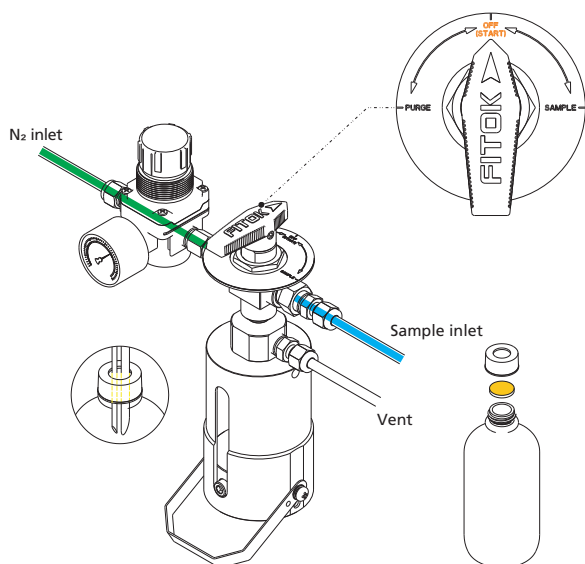


2 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

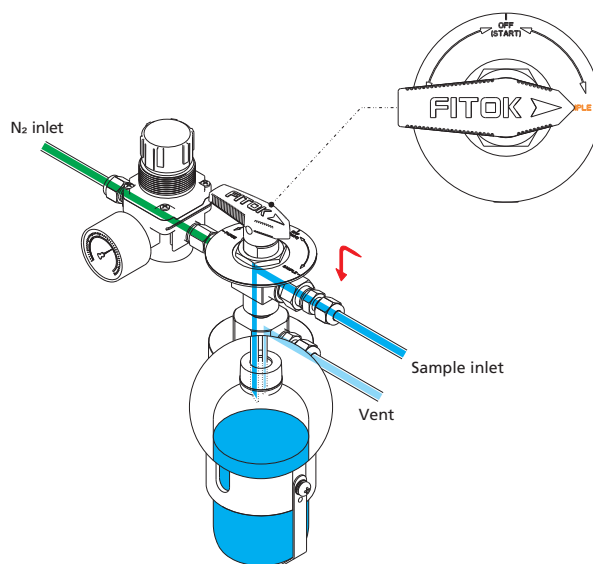


3 - Needle Purge

Turn the handle to the "PURGE" position, allowing Nitrogen to force the residual sample from the needle assembly into the bottle.

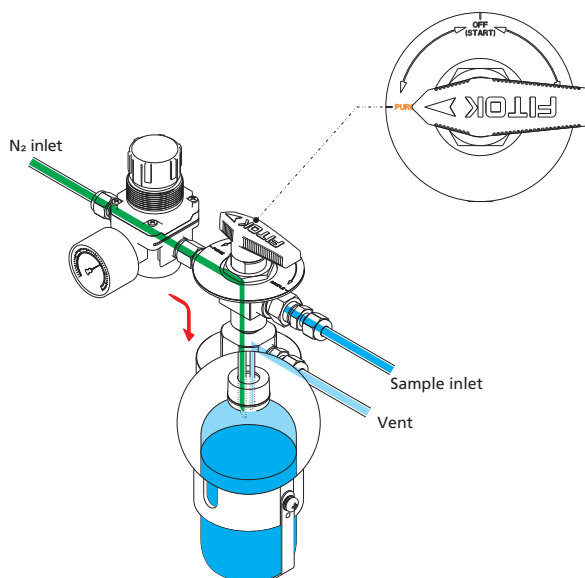

4 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

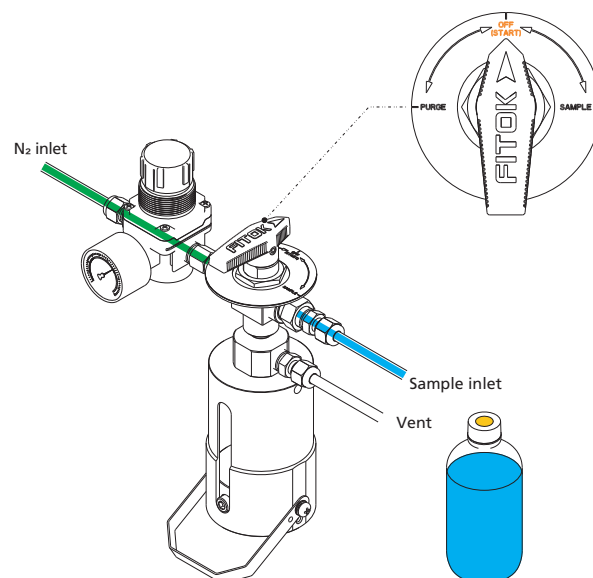


BLA5 - Back and Needle Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- Back purge and needle purge



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BO Series 4-way ball valves: PTFE seat Max. working pressure: 2500 psig @ 70°F (172 bar @ 20°C) Temperature range: 50°F to 140°F (10°C to 65°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting

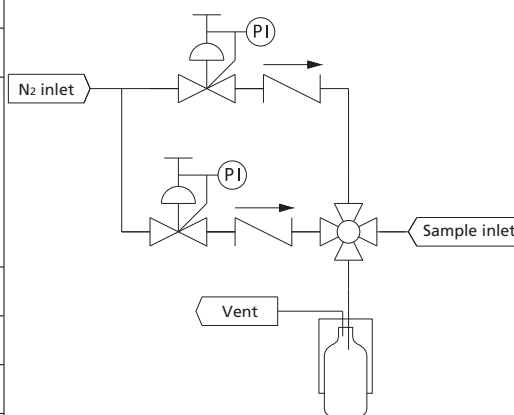

Note: Products of other specifications are available upon request.


Typical Installation Mode

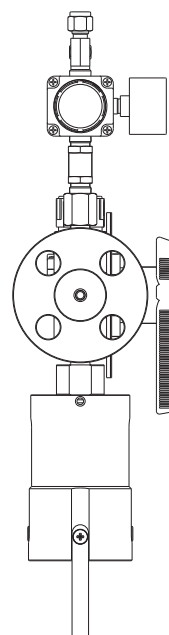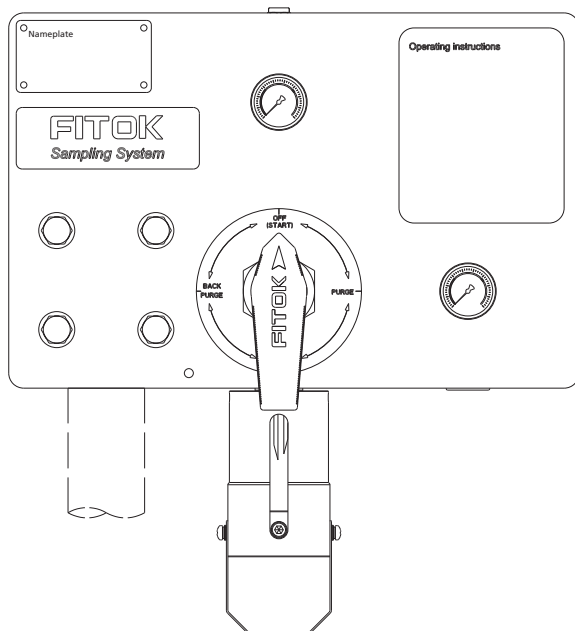

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

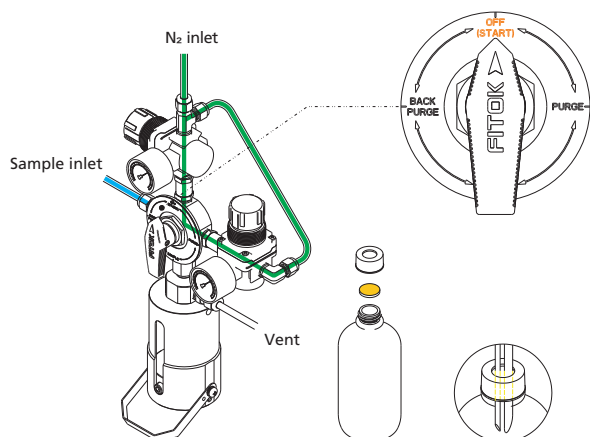


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

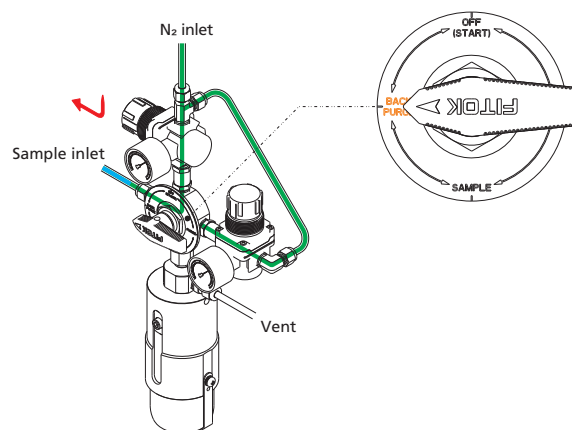


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle.

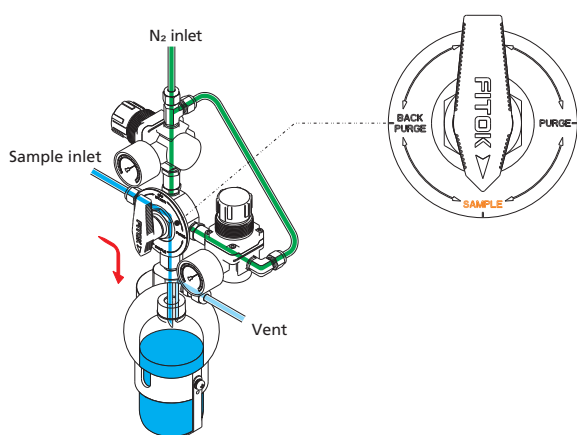


4 - Needle Purge

When the required amount has been taken, turn the handle to the "PURGE" position, allowing Nitrogen to force the residual sample from the needle assembly into the bottle.

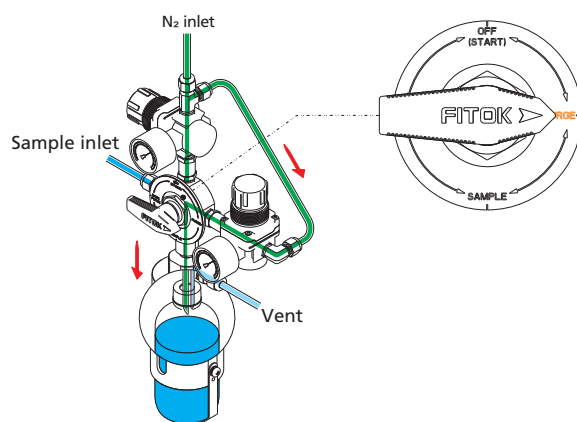

5 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

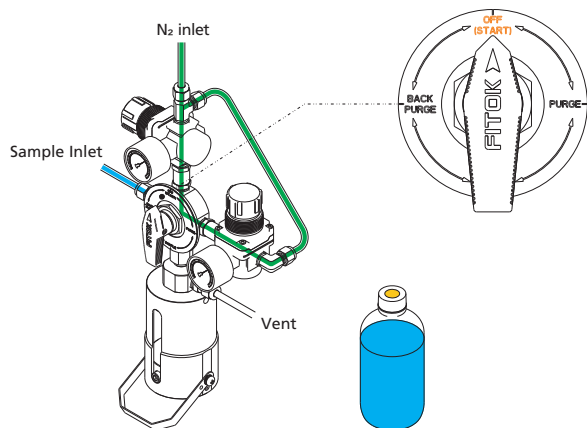


BLA6 - System Purge and Continuous Needle Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- System purge and continuous needle purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
	Pressure gauge
Connections	1/4" tube fitting

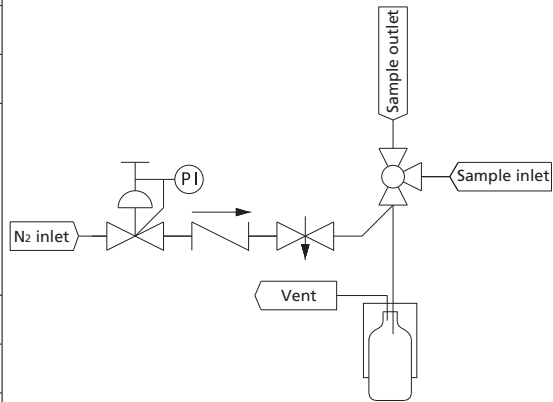

Note: Products of other specifications are available upon request.


Typical Installation Mode

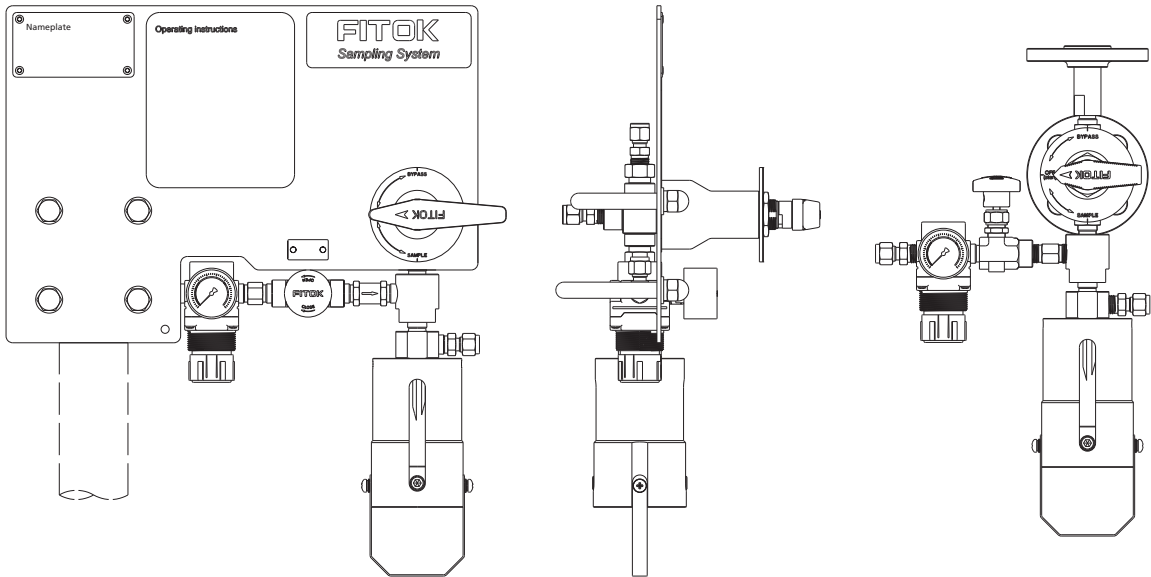

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

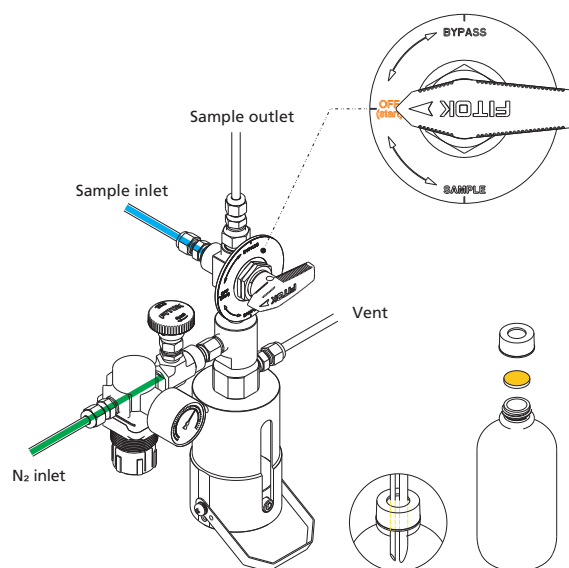


2 - Continuous Needle Purge and System Purge

Open the needle valve to purge the needle assembly and the bottle continuously with Nitrogen. Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the system and purge the system to ensure representative sampling.

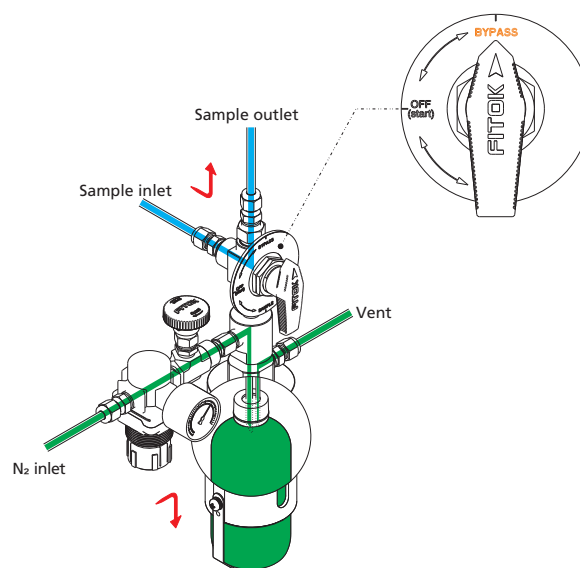


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

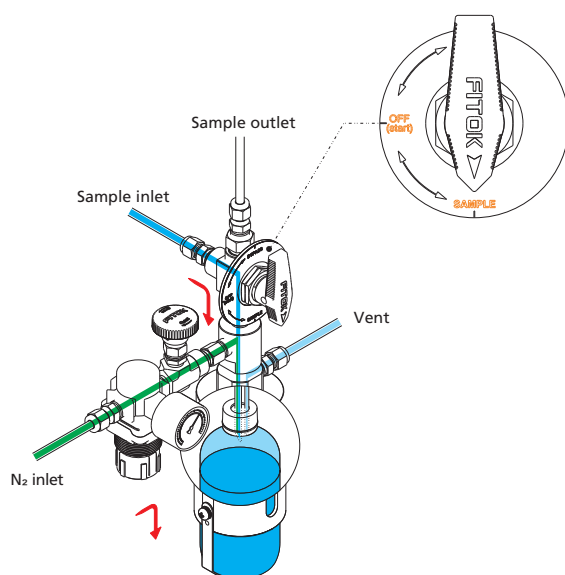

4 - Off

Close the needle valve. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

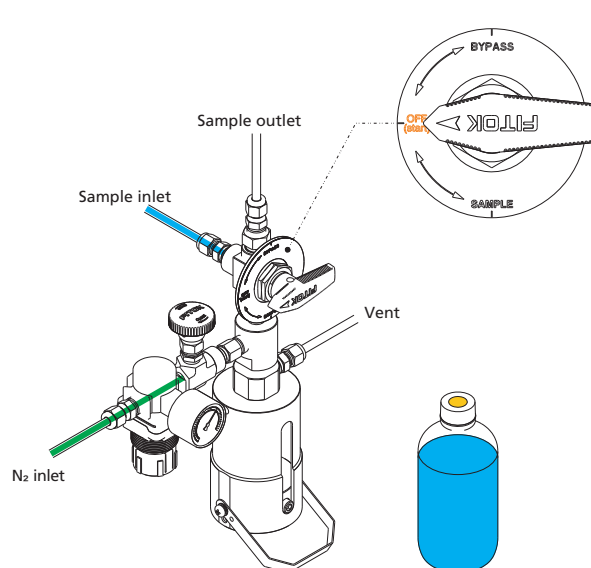


BLA7 - In-line and Needle Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- In-line sampling valve to save sampling time
- Needle purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	In-line valve: PTFE packing Max. working pressure: 3000 psig @ 70°F (206 bar @ 20°C) Temperature range: -4°F to 446°F (-20°C to 230°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
	Pressure gauge
Connections	Process: 1/4" FNPT
	Purge/vent: 1/4" tube fitting

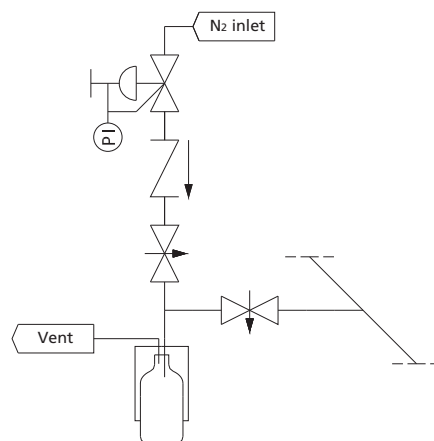

Note: Products of other specifications are available upon request.


Typical Installation Mode

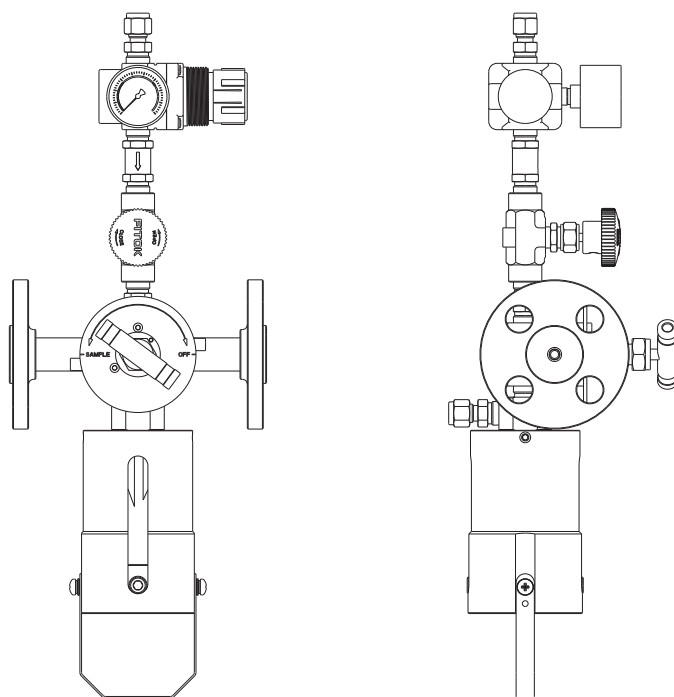

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

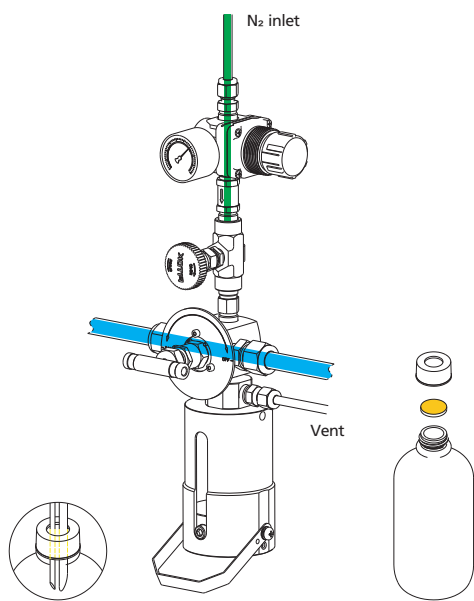


2 - Sampling

Turn the handle counterclockwise to open the sampling valve, allowing the sample to flow into the bottle. When the required amount has been taken, turn the handle clockwise to close the sampling valve.

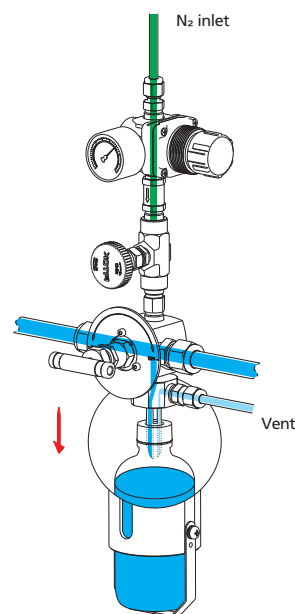


3 - Needle Purge

Open the valve on the Nitrogen branch, allowing Nitrogen to force the residual sample from the needle assembly and the valve into the bottle. Hold this position for a sufficient time.

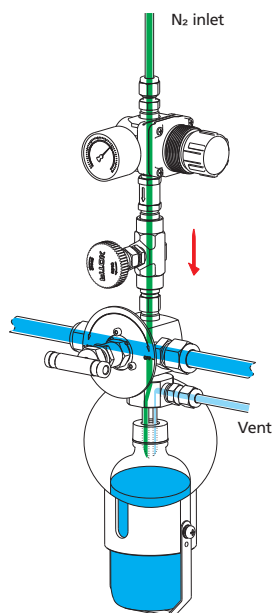

4 - Off

Close the valve on the Nitrogen branch. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

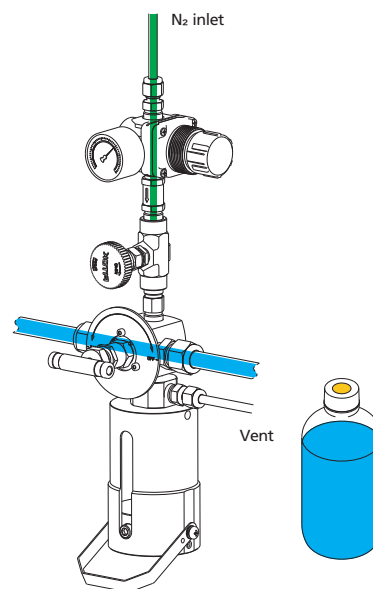

B Series


BLB1 - On-off Type with In-line Ball Valve

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- In-line sampling
- Fire safe and antistatic ball valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	In-line ball valve: PTFE seat, fire safe and antistatic Max. working pressure: 276 psig @ 70°F (19 bar @ 20°C) Temperature range: -18°F to 298°F (-28°C to 148°C)
Connections	Process: NPS 1/2, ANSI B16.5 Class 150 RF flange
	Vent: 1/4" tube fitting
Others	Spring return handle

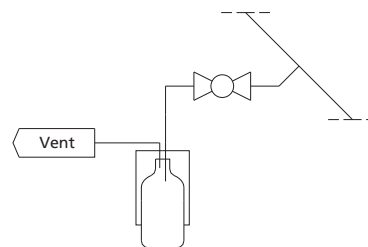

Note: Products of other specifications are available upon request.


Typical Installation Mode

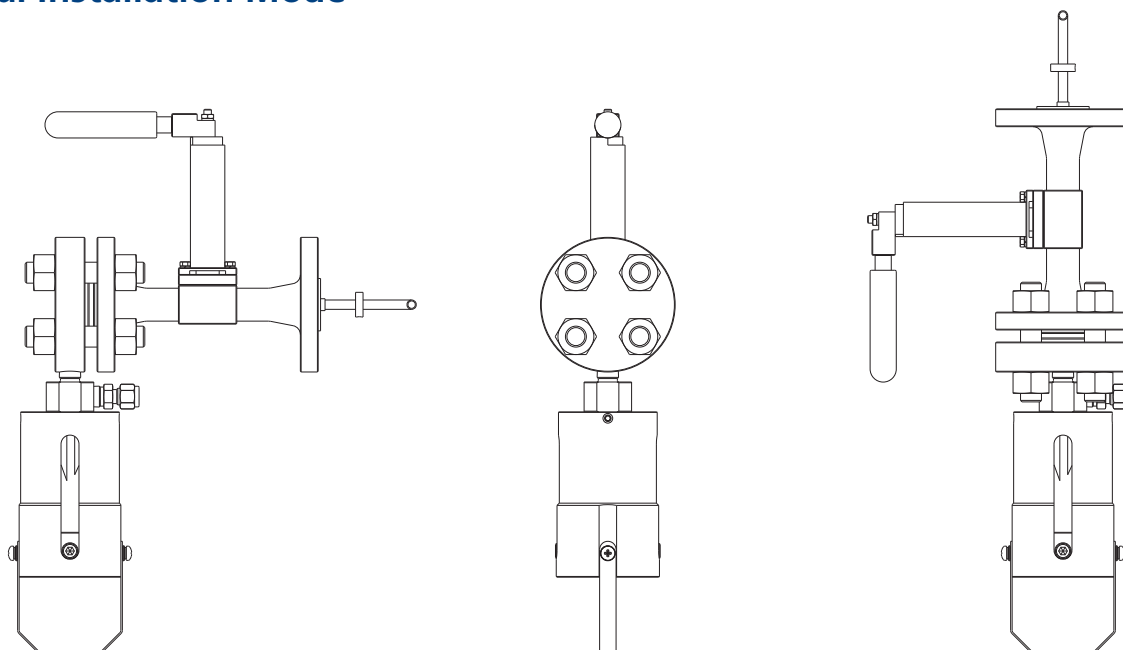

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

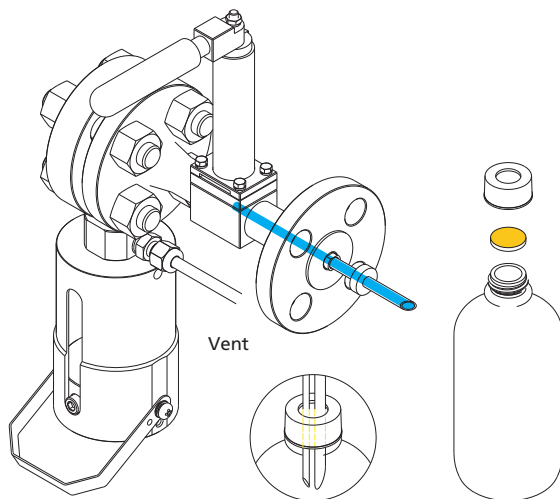


2 - Sampling

Open the in-line ball valve, allowing the sample to flow into the bottle. When the required amount has been taken, release the handle to close the valve automatically.

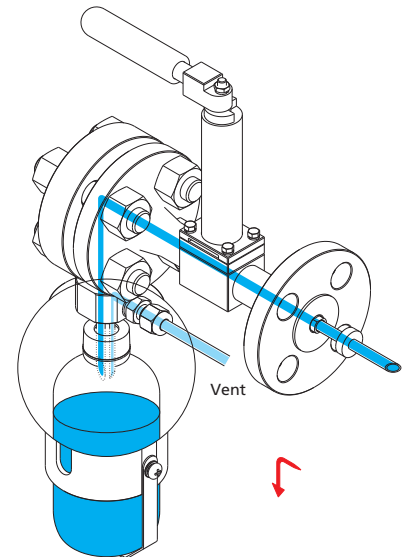

3 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

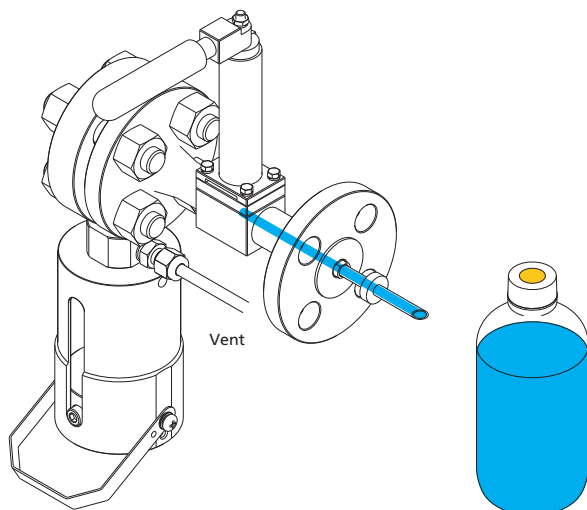


BLB2 - On-off Type with In-line Needle Valve

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- In-line sampling


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	In-line needle valve: PTFE packing and PCTFE seat Max. working pressure: 276 psig @ 70°F (19 bar @ 20°C) Temperature range: -18°F to 298°F (-28°C to 148°C)
Connections	Process: NPS 3/4, ANSI B16.5 Class 150 RF flange
	Vent: 1/4" tube fitting
Others	Spring return handle

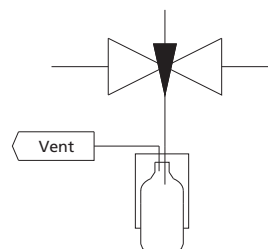

Note: Products of other specifications are available upon request.


Typical Installation Mode

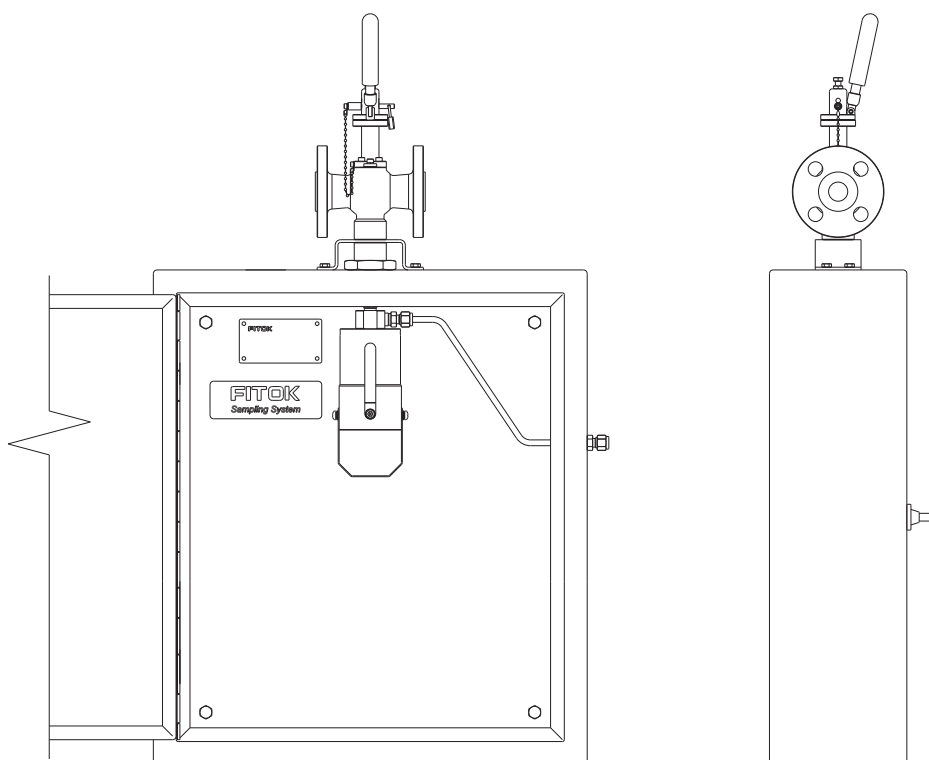

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

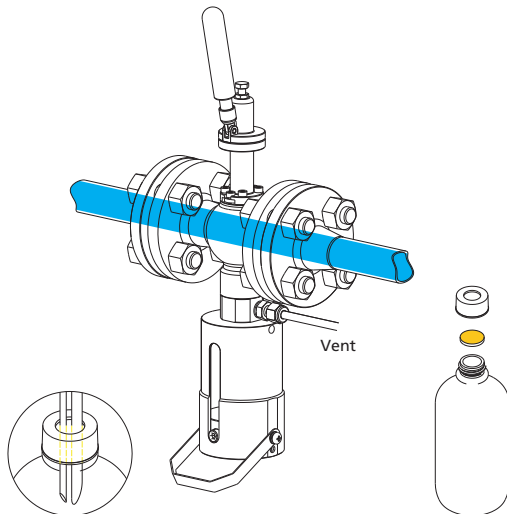


2 - Sampling

Open the in-line needle valve, allowing the sample to flow into the bottle. When the required amount has been taken, release the handle to close the valve automatically.

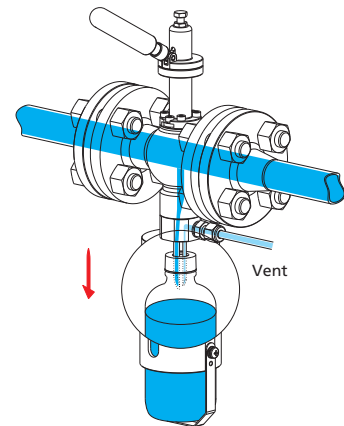

3 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

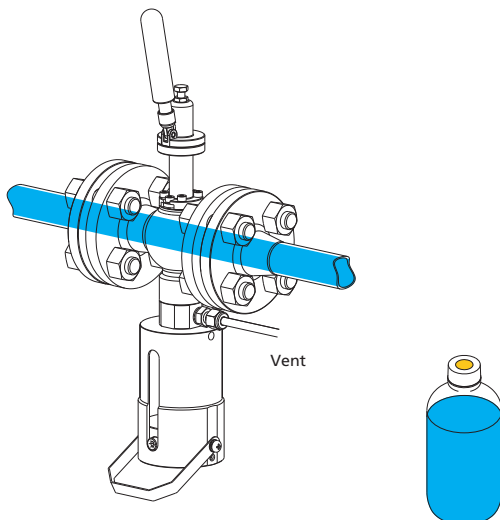


BLB3 - In-line and Continuous Needle Purge Type

Features

- Sampling from low pressure devices or process lines: 0-145 psig (0-10 bar)
- In-line sampling
- Sampling for viscous liquids
- Needle purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	In-line needle valve: PTFE packing and PCTFE seat Max. working pressure: 276 psig @ 70°F (19 bar @ 20°C) Temperature range: -18°F to 298°F (-28°C to 148°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
	Pressure gauge
Connections	Process: NPS 3/4, ANSI B16.5 Class 150 RF flange
	Vent/purge: 1/4" tube fitting
Others	Spring return handle, purge connection

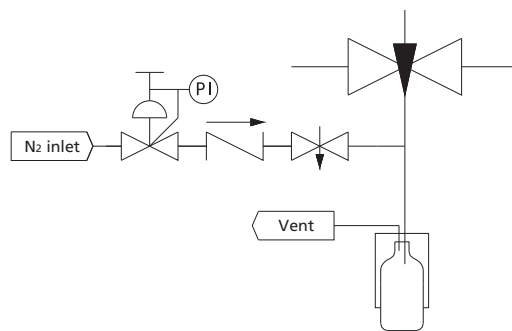

Note: Products of other specifications are available upon request.


Typical Installation Mode

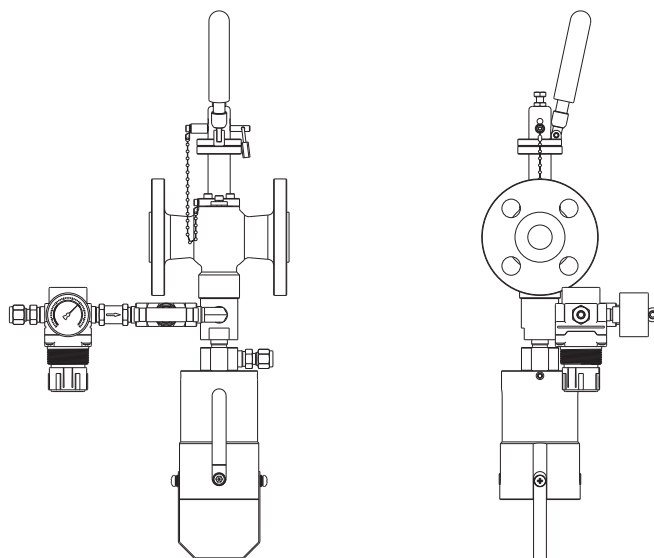

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

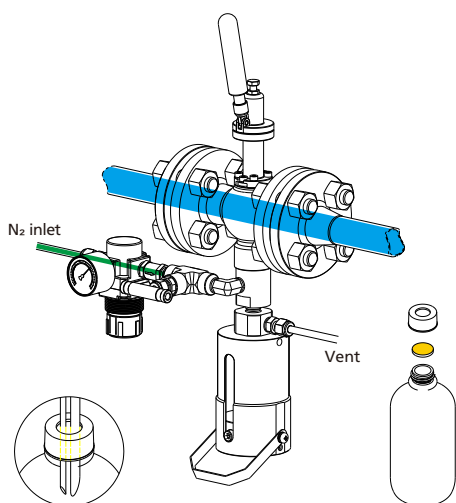


2 - Continuous Needle Purge

Open the needle valve, allowing Nitrogen to purge the needle assembly and bottle continuously.

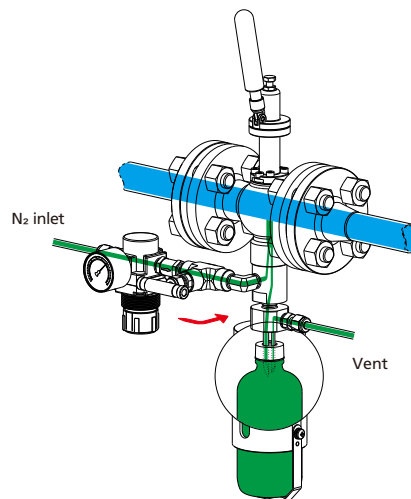


3 - Sampling

Open the in-line needle valve, allowing the sample to flow into the bottle. When the required amount has been taken, release the handle to close the valve automatically.

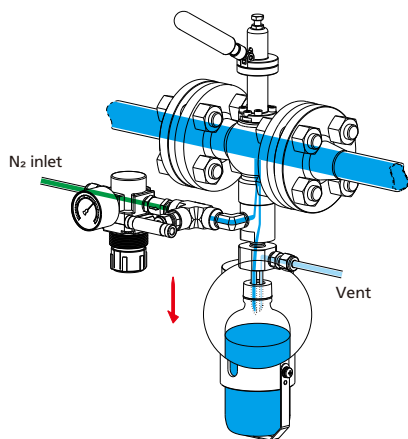

4 - Off

Close the valve on the Nitrogen branch. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

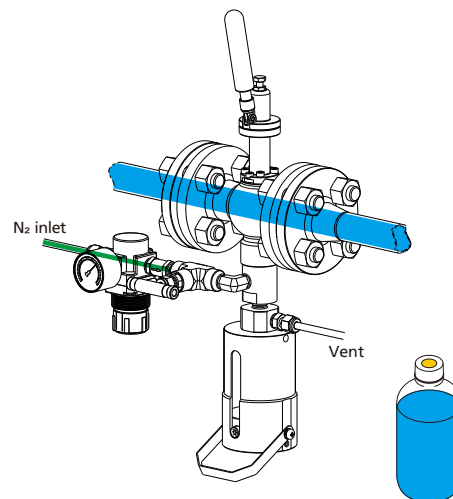

C Series


BLC1 - Purge Type

Features

- Sampling from vacuum, low or high pressure devices or process lines
- Sampling with a piston valve to ensure zero dead volume
- Sampling for highly viscous liquids
- Needle purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	Piston valve: PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
	Pressure gauge
Connections	Process: 1/2" MNPT
	Vent/purge: 1/4" tube fitting

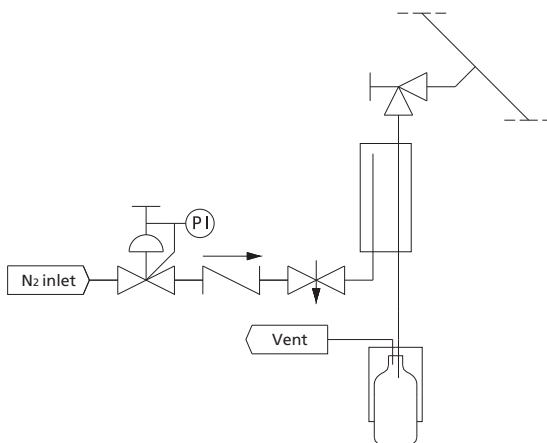

Note: Products of other specifications are available upon request.


Typical Installation Mode

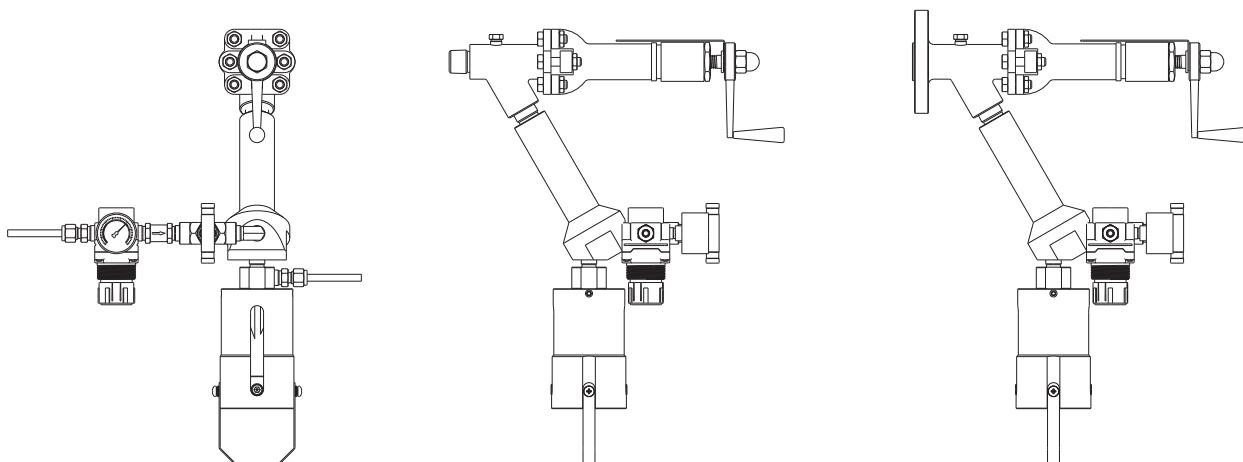

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

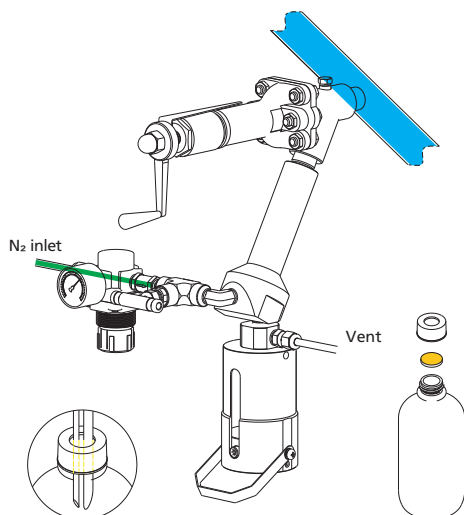


2 - Sampling

Open the piston valve, allowing the sample to flow into the bottle. When the required amount has been taken, close the piston valve.

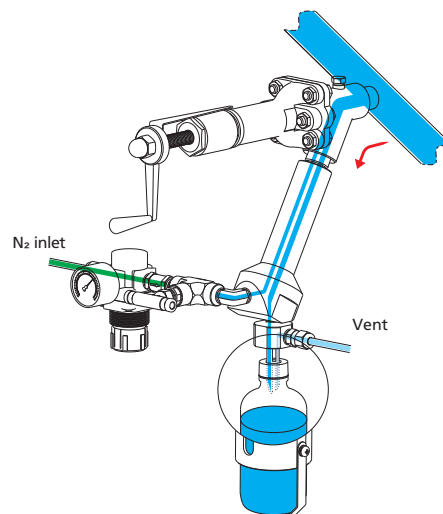


3 - Needle Purge

Open the valve on the Nitrogen branch, allowing Nitrogen to force the residual sample from the system into the bottle.

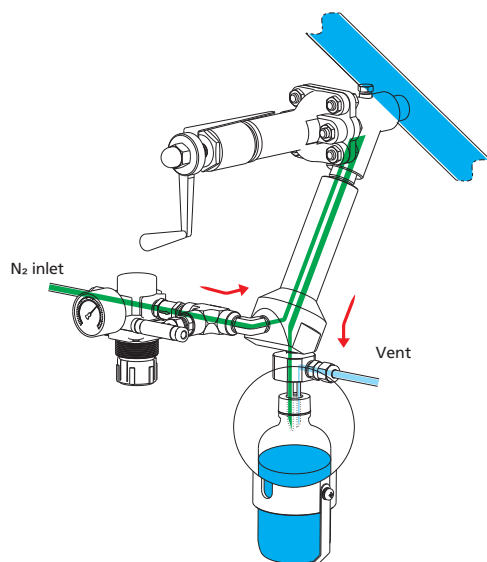

4 - Off

Close the valve on the Nitrogen branch. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

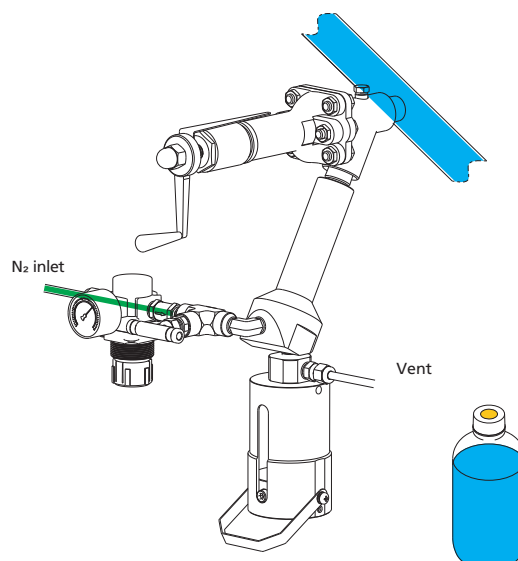


BLC2 - Fixed Volume and Purge Type

Features

- Sampling from vacuum, low or high pressure devices or process lines
- Fixed volume sampling
- Sampling with a piston valve to ensure zero dead volume
- Sampling for highly viscous liquids
- Needle purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	Piston valve: PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
Connections	Pressure gauge
	Process: 1/2" MNPT Vent/purge: 1/4" tube fitting

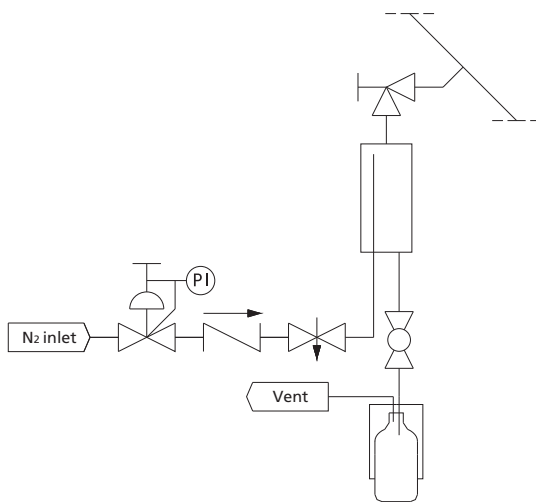

Note: Products of other specifications are available upon request.


Typical Installation Mode

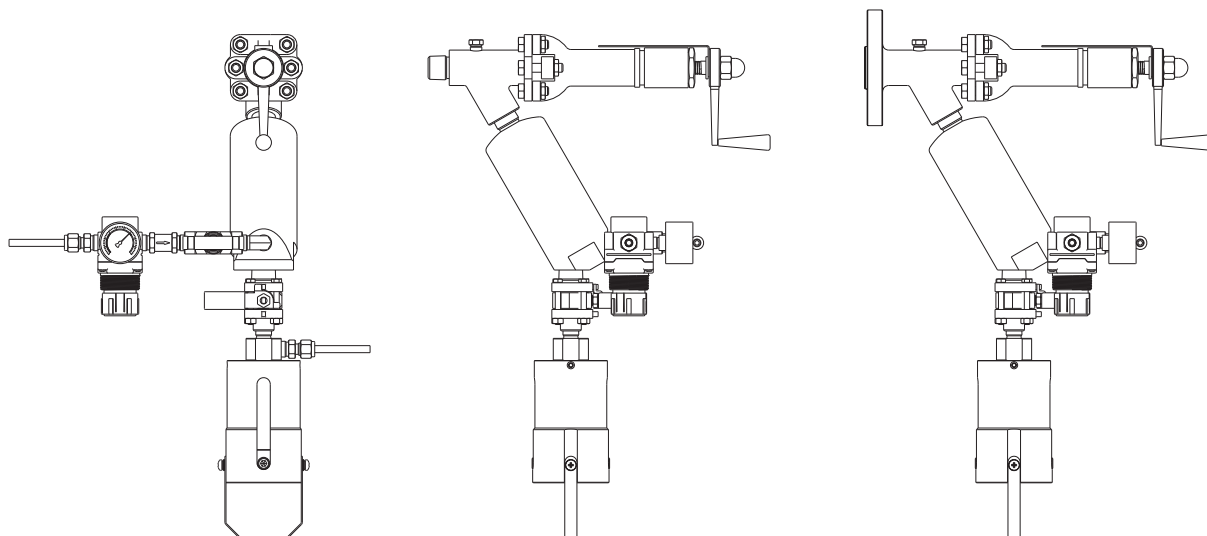

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

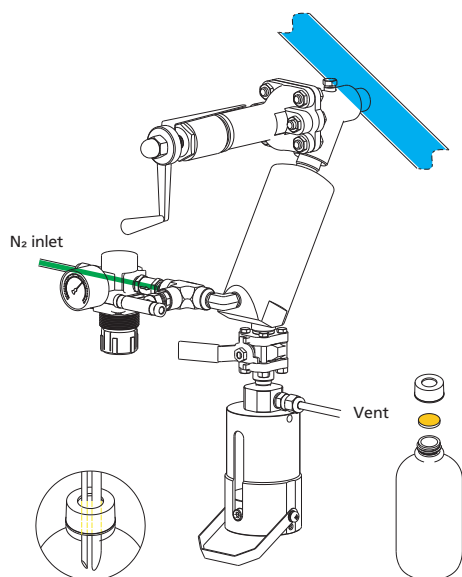


2 - Pre-sampling

Open the piston valve, allowing the sample to flow into the sample chamber. The amount of sample depends on the sample chamber volume and process pressure. Close the piston valve.

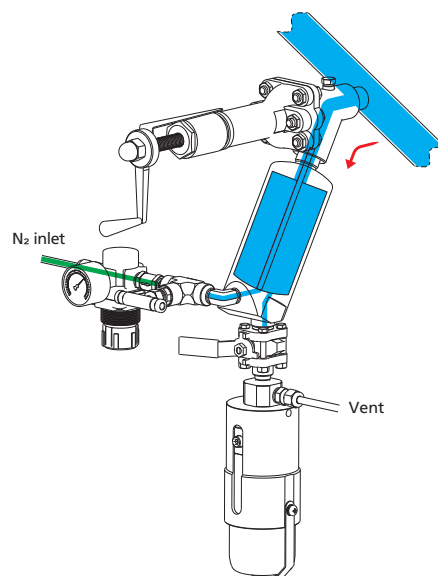


3 - Sampling

Open the valve on the Nitrogen branch and the valve above the needle assembly, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the system.

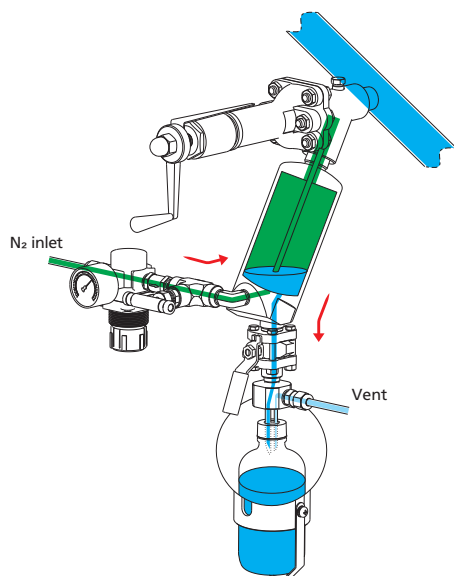

4 - Off

Close the valve on the Nitrogen branch and the valve above the needle assembly. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

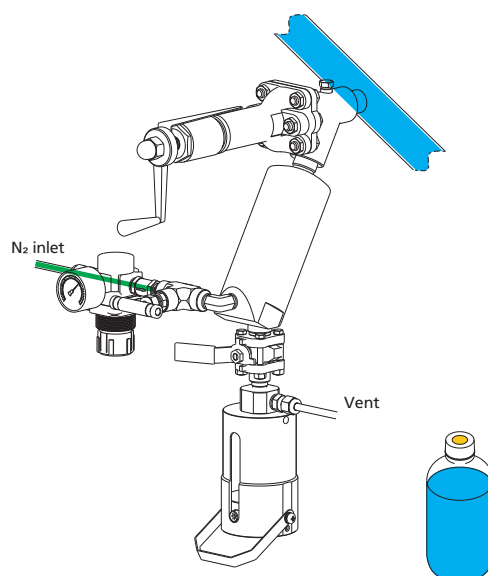


BLC3 - Fixed Volume Type with Heating/Cooling Jacket

Features

- Sampling from vacuum, low or high pressure devices or process lines
- Fixed volume sampling
- Sampling with a piston valve to ensure zero dead volume
- Sampling for highly viscous liquids
- Heating/cooling jacket to ensure sampling within a certain range of temperature
- Needle purge




Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	Piston valve: PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB Series needle valves
	Pressure gauge
Connections	Process: 1/2" MNPT
	Vent/purge: 1/4" tube fitting
	Heating/cooling: 3/8" FNPT
Others	Heating/cooling jacket, sample chamber (200 ml), thermometer, BH Series ball valves

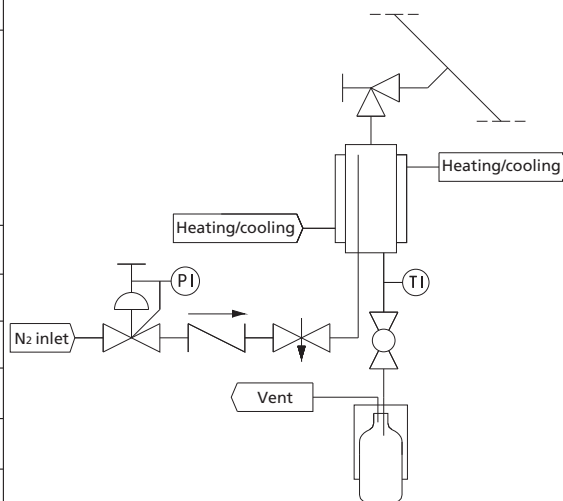

Note: Products of other specifications are available upon request.


Typical Installation Mode

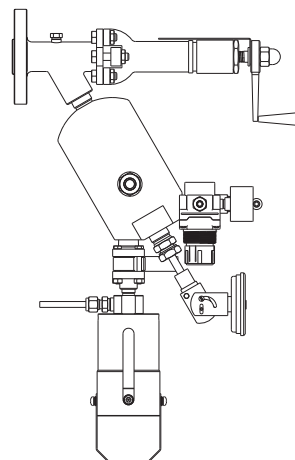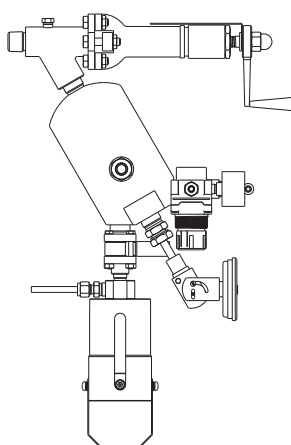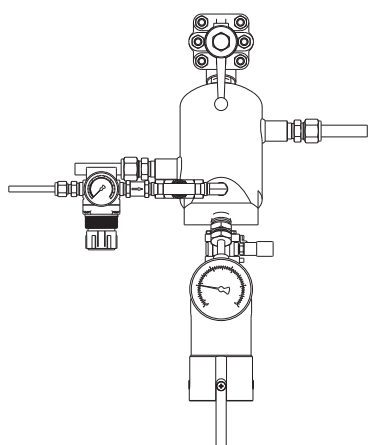

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

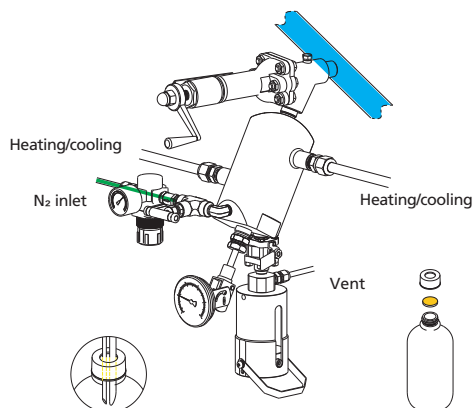


2 - Pre-sampling

Open the piston valve, allowing the sample to flow into the sample chamber. The amount of sample depends on the sample chamber volume and process pressure. Close the piston valve.

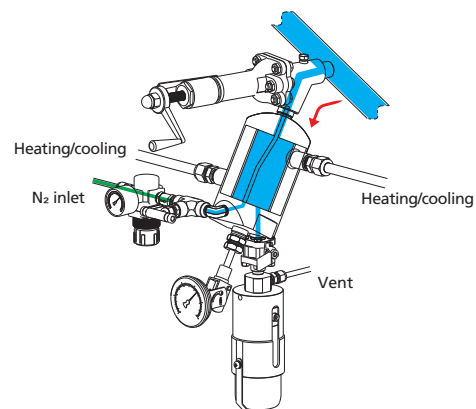


3 - Heating/cooling

Allow the heating/cooling fluid to flow through the heating/cooling jacket. Hold for a sufficient time until the sample reaches the required temperature.

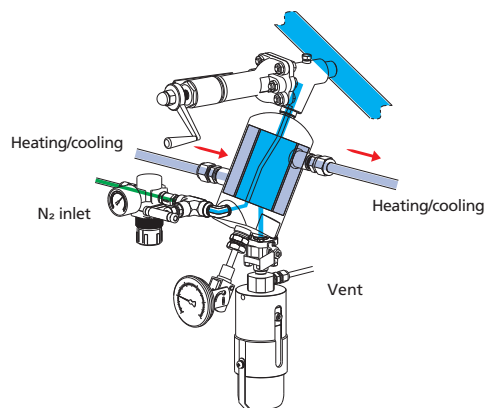


4 - Sampling

Open the valve on the Nitrogen branch and the valve above the needle assembly, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the system.

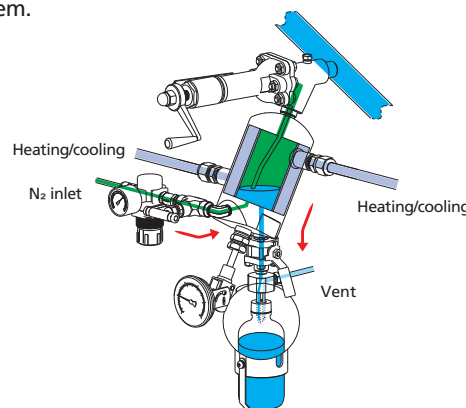

5 - Off

Close the valve on the Nitrogen branch and the valve above the needle assembly. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

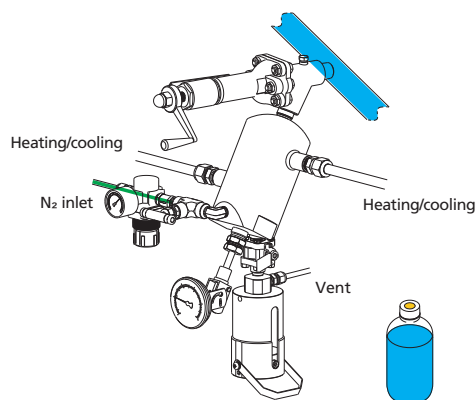


BLC4 - Solvent Purge Type

Features

- Sampling from vacuum, low or high pressure devices or process lines
- Sampling with a piston valve to ensure zero dead volume
- Sampling for highly viscous liquids
- Needle purge and solvent purge


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	Piston valve: PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Purge Branch	Nitrogen regulator
	CV Series check valves, BF Series 3-way ball valves
	Pressure gauge
Connections	Process: 1/2" MNPT
	Vent/purge/solvent: 1/4" tube fitting

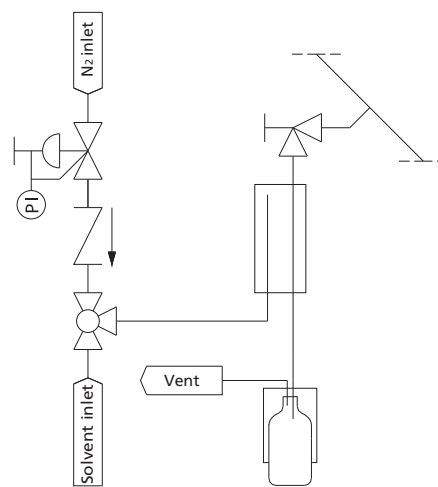

Note: Products of other specifications are available upon request.


Typical Installation Mode

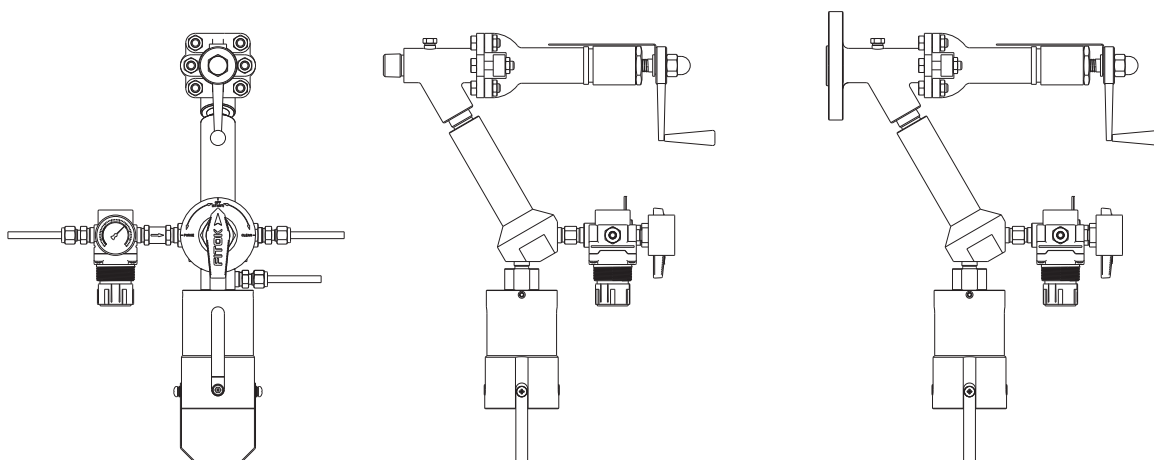

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

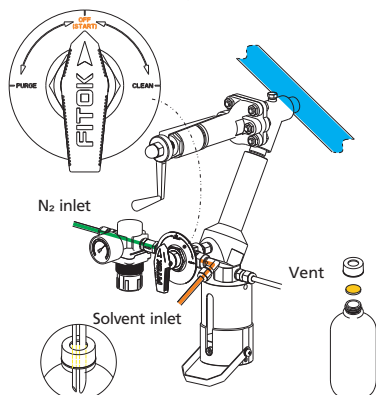


4 - Off

Turn the handle to the "OFF" position. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically.

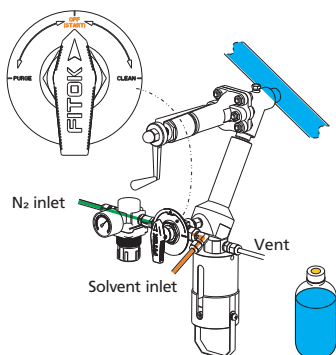


7 - Off

Turn the handle to the "OFF" position. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete solvent purging process.

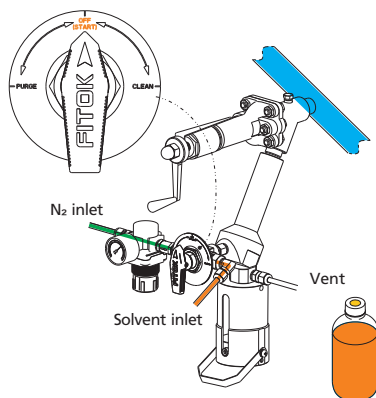


2 - Sampling

Open the piston valve, allowing the sample to flow into the bottle. When the required amount has been taken, close the piston valve.

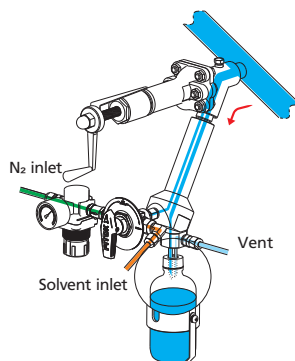


5 - Solvent Purge

Replace the bottle with a new one. Turn the handle to the "CLEAN" position, allowing the solvent to flow through the system into the bottle.

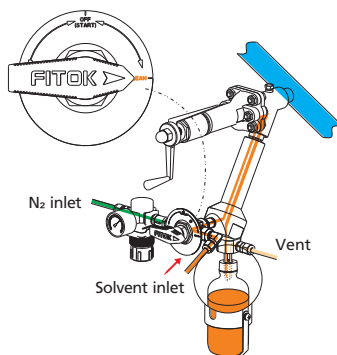


3 - Nitrogen Purge

Turn the handle to the "PURGE" position, allowing Nitrogen to force the residual sample from the system into the bottle.

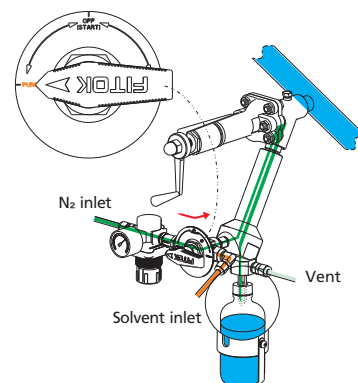

6 - Nitrogen Purge

Turn the handle to the "PURGE" position, allowing Nitrogen to force the residual solvent from the system into the sample bottle.

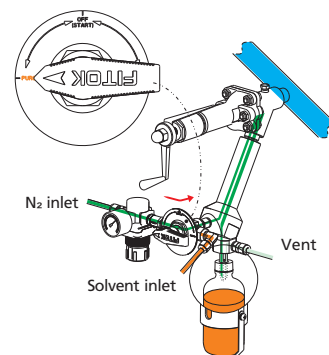

D Series


BLD1 - Threaded Connection Type

Features

- Sampling from medium or high pressure devices or process lines
- Fixed volume sampling
- System purge and needle purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (rod linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" FNPT
Others	Sample chamber (200 ml)

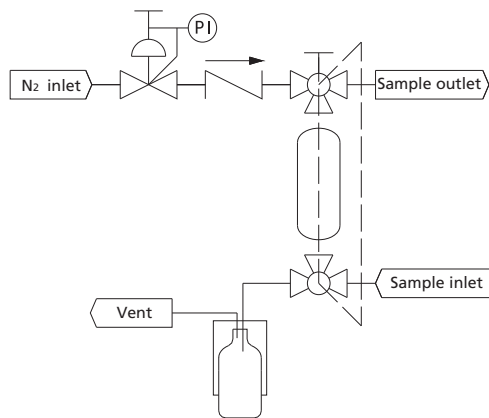

Note: Products of other specifications are available upon request.


Typical Installation Mode

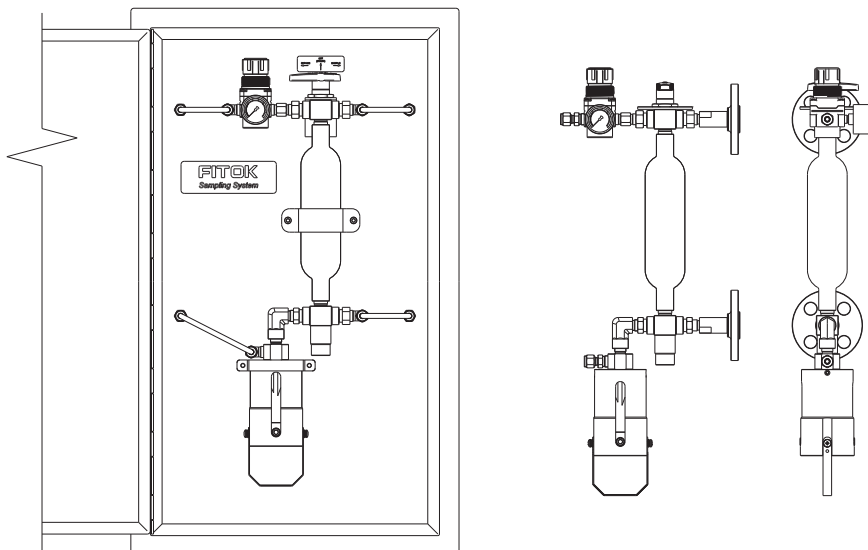

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

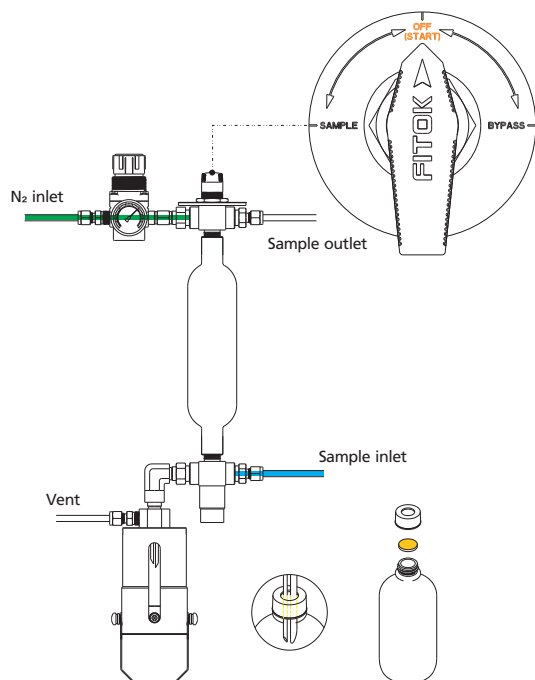


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the sample chamber. Hold for a period of time to ensure representative sampling.

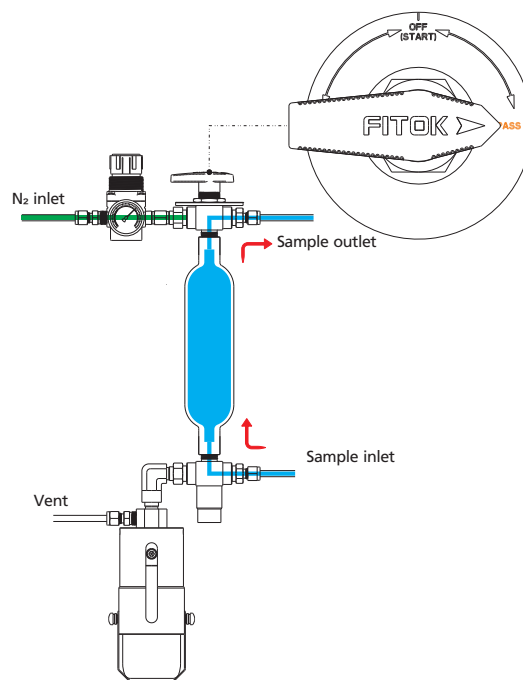


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the sample chamber and needle assembly. The amount of sample depends on the sample chamber volume.

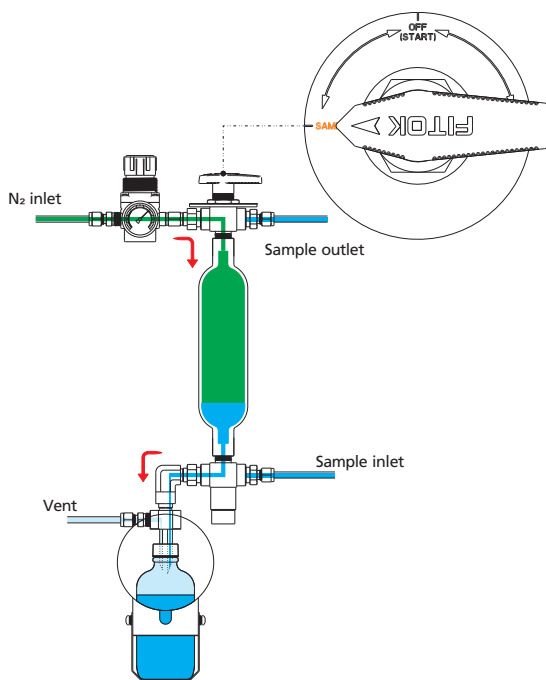

4 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

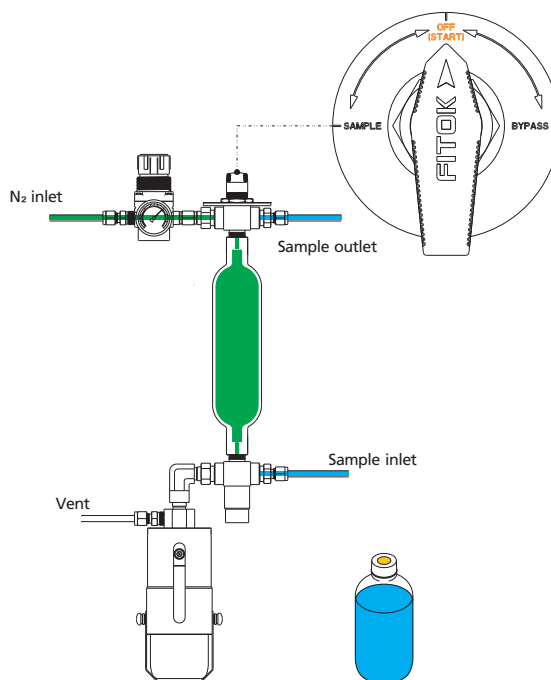


BLD2 - Continuous Needle Purge Type

Features

- Sampling from medium or high pressure devices or process lines
- Fixed volume sampling
- Continuous needle purge and system purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (rod linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves, NB series needle valves
	Pressure gauge
Connections	1/4" tube fitting
Others	Sample chamber (200 ml)

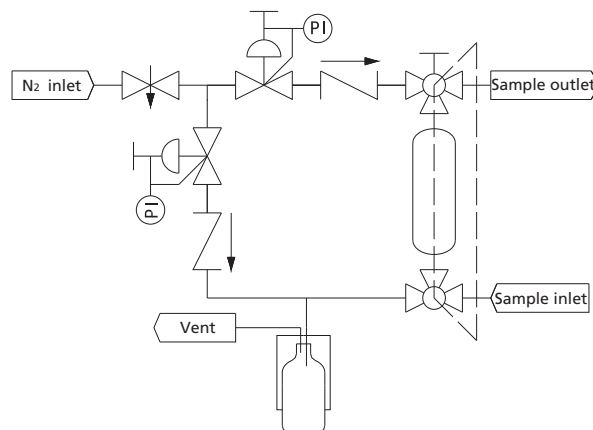

Note: Products of other specifications are available upon request.


Typical Installation Mode

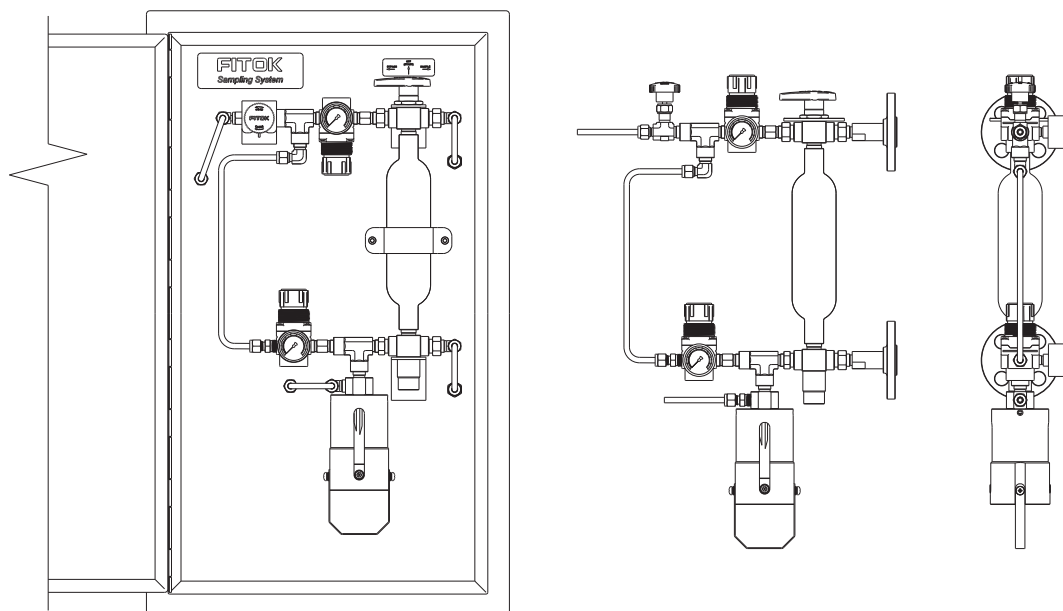

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

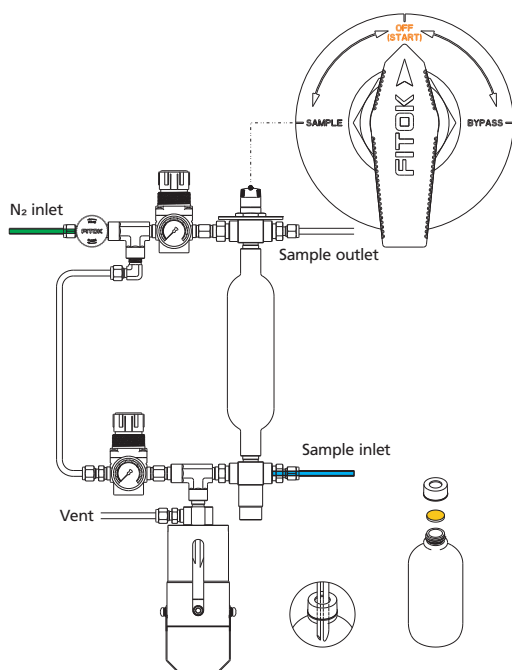


2 - Needle Purge and System Purge

Open the needle valve, allowing Nitrogen to purge the needle assembly and bottle continuously. Turn the handle to the "BYPASS" position to allow a continuous flow of sample through the sample chamber. Hold for a period of time to ensure representative sampling.

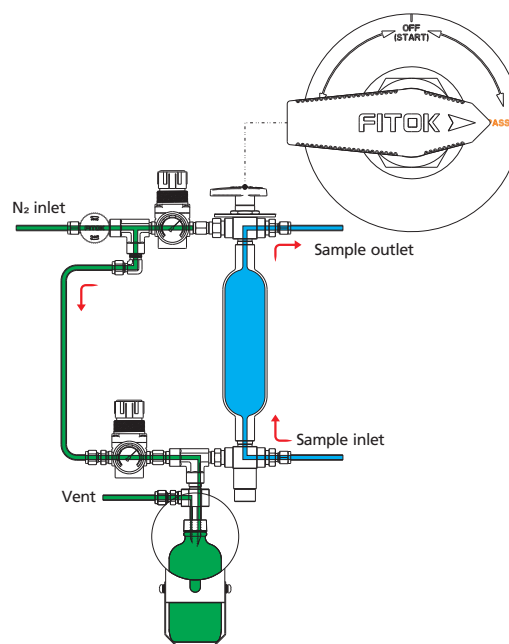


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the sample chamber and needle assembly. The amount of sample depends on the sample chamber volume.

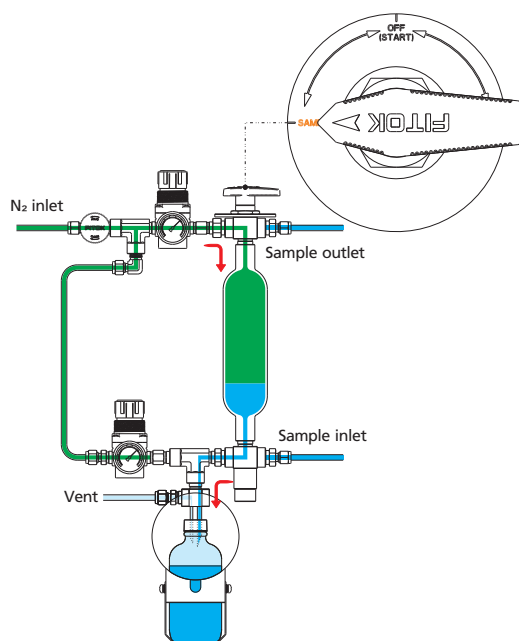

4 - Off

Close the needle valve. Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

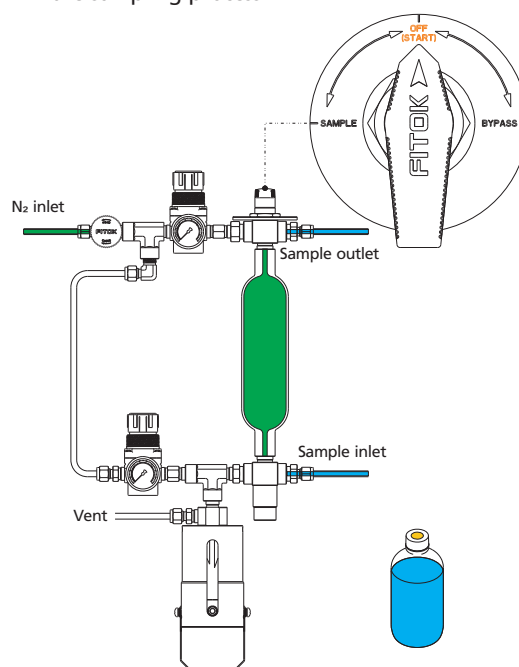


BLD3 - Heating/Cooling Type

Features

- Sampling from medium or high pressure devices or process lines
- Fixed volume sampling
- System purge and needle purge
- Heating/cooling jacket to ensure sampling within a certain range of temperature
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (rod linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	Process/vent/purge: 1/4" tube fitting
	Heating/cooling: 3/8" FNPT
Others	Heating/cooling jacket, sample chamber (200 ml)

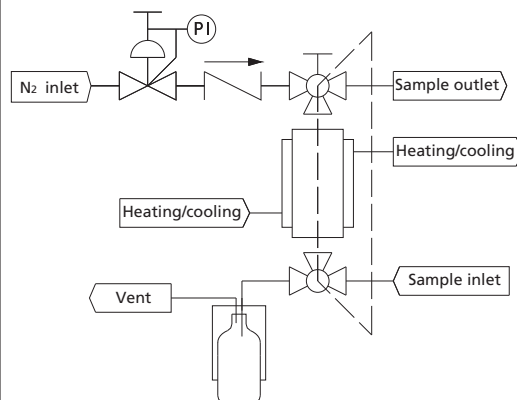

Note: Products of other specifications are available upon request.


Typical Installation Mode

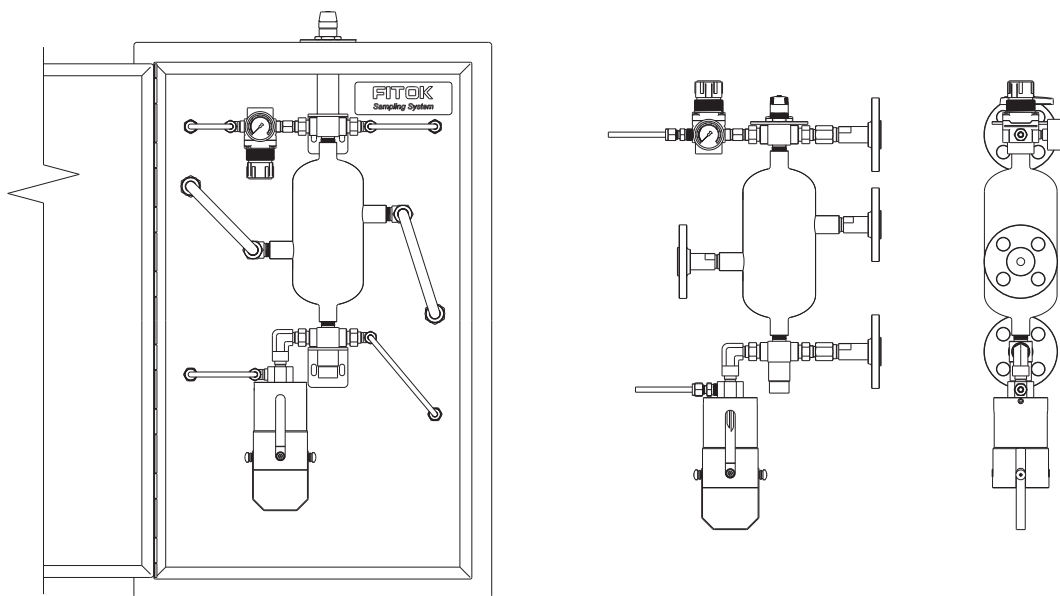

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

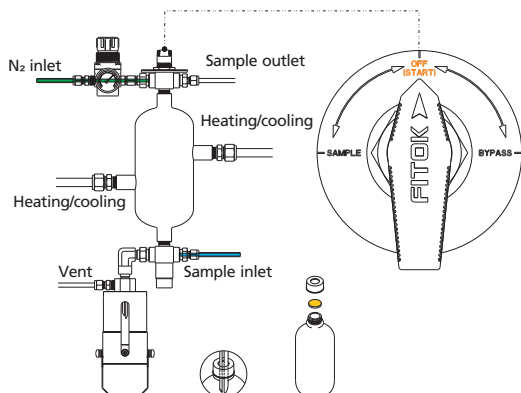


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the sample chamber. Hold for a period of time to ensure representative sampling.

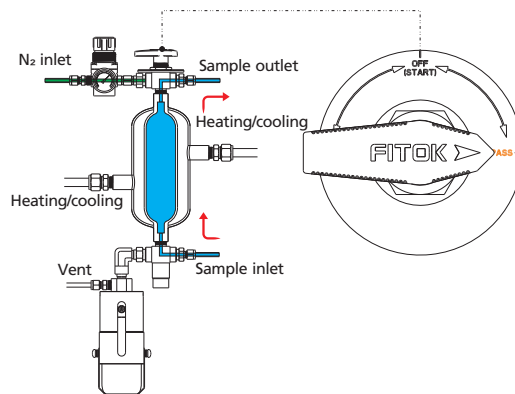


3 - Heating/cooling

Turn the handle to the "OFF" position, allowing the heating/cooling fluid to flow through the heating/cooling jacket. Hold for a sufficient time until the sample reaches the required temperature.

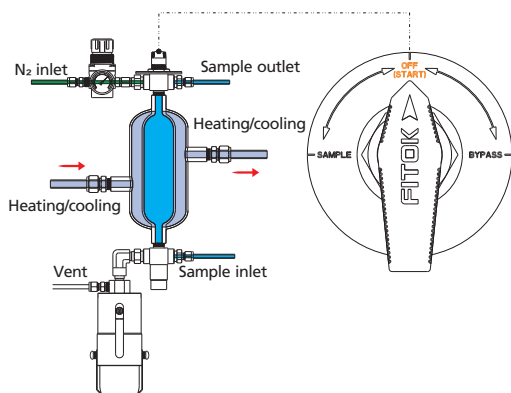


4 - Sampling

Turn the handle to the "SAMPLE" position, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the sample chamber and needle assembly. The amount of sample depends on the sample chamber volume.

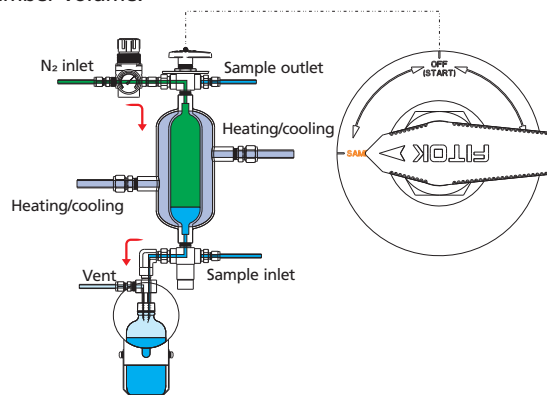

5 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the sample bottle from the sleeve. The septum reseals automatically to complete the sampling process.

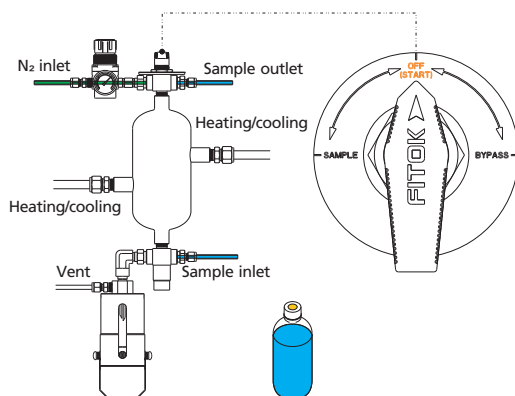


BLD4 - Sampling by Gravity Type

Features

- ⦿ Sampling from medium or high pressure devices or process lines
- ⦿ Fixed volume sampling
- ⦿ System purge
- ⦿ Sampling by gravity without Nitrogen purge
- ⦿ Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (rod linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Connections	1/4" tube fitting
Others	Sample chamber (200 ml)

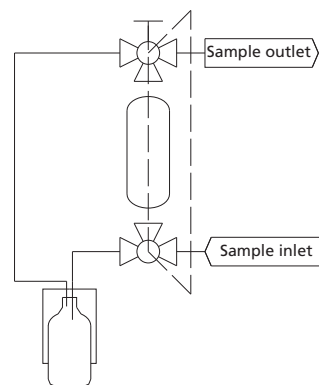

Note: Products of other specifications are available upon request.


Typical Installation Mode

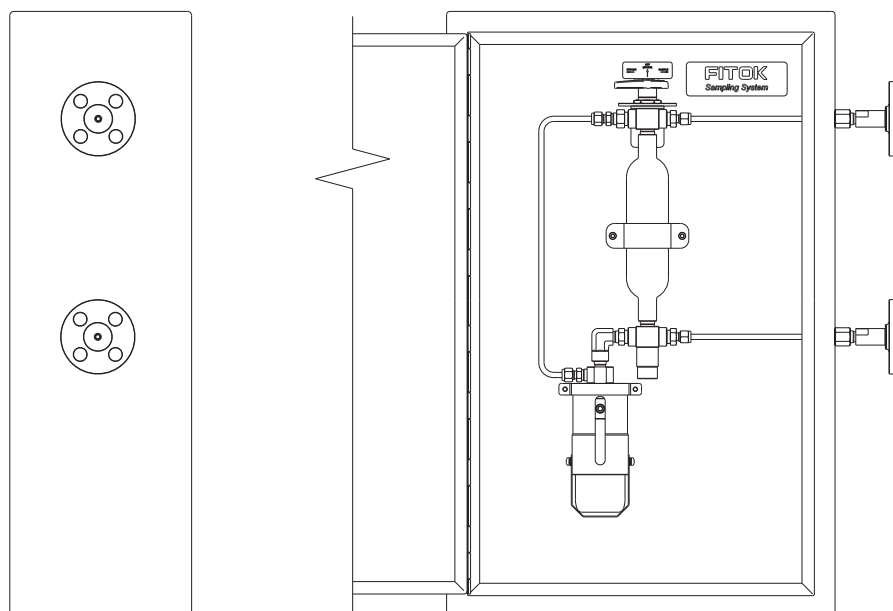

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

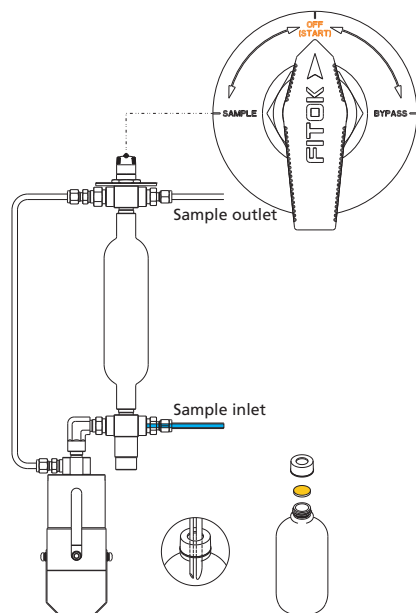


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the sample chamber. Hold for a period of time to ensure representative sampling.

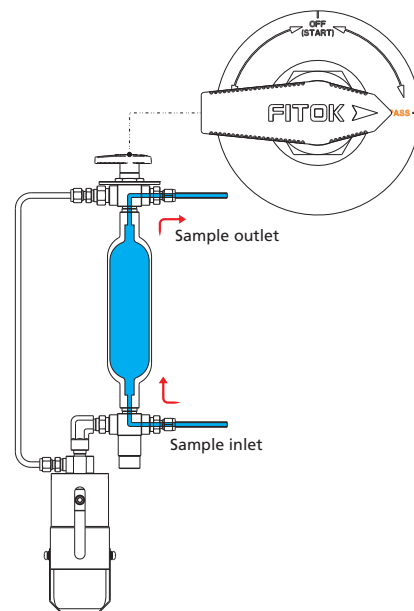


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle by gravity. Hold this position for a sufficient time. The amount of sample depends on the sample chamber volume.

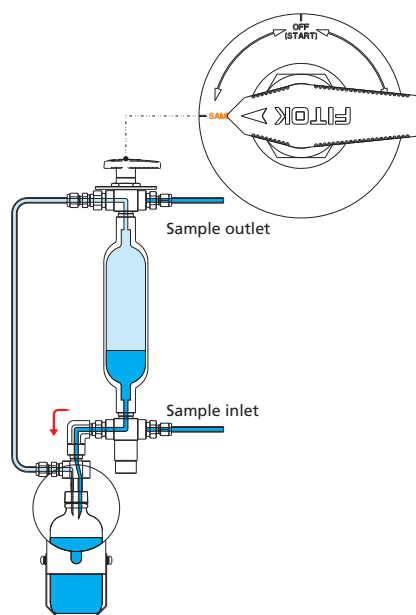

4 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

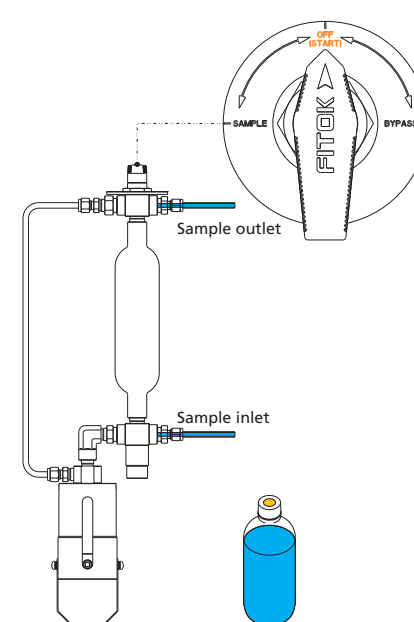


BLD5- Sampling by Gravity Type with Heating/Cooling Jacket

Features

- Sampling from medium or high pressure devices or process lines
- Fixed volume sampling
- System purge
- Sampling by gravity without Nitrogen purge
- Heating/cooling jacket to ensure sampling within a certain range of temperature
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (rod linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Connections	Process: 1/4" tube fitting
	Heating/cooling: 3/8" FNPT
Others	Heating/cooling jacket, sample chamber (200 ml)

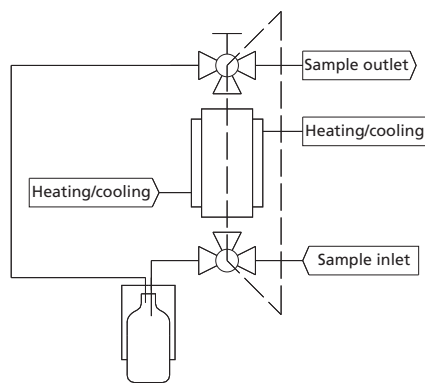

Note: Products of other specifications are available upon request.


Typical Installation Mode

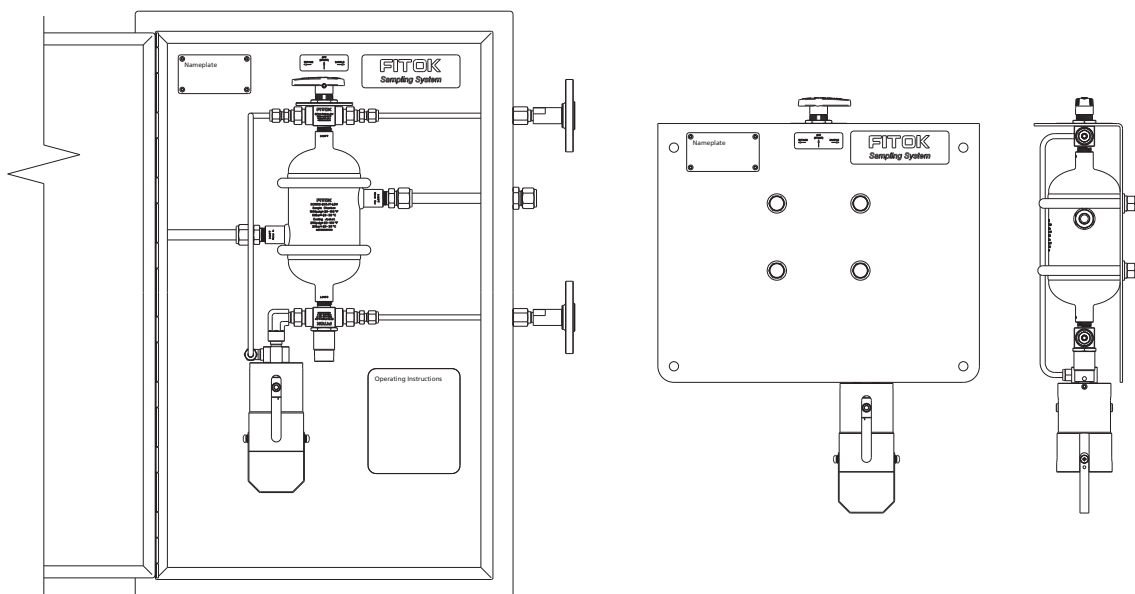

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

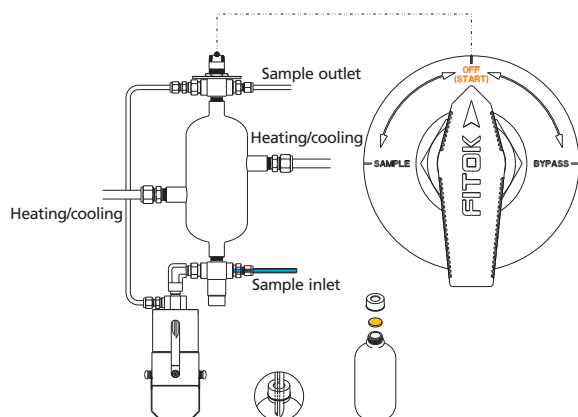


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the sample chamber. Hold for a period of time to ensure representative sampling.

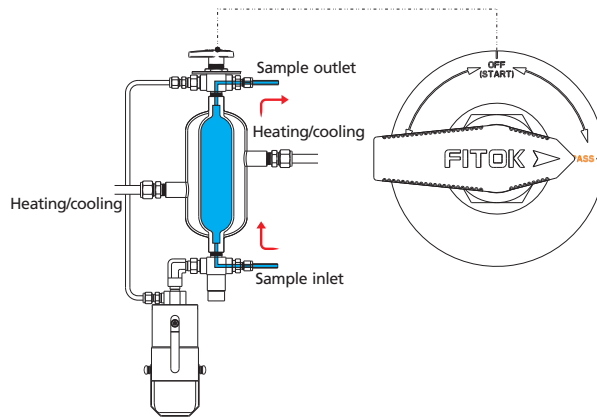


3 - Heating/cooling

Turn the handle to the "OFF" position, allowing the heating/cooling fluid to flow through the heating/cooling jacket. Hold for a sufficient time until the sample reaches the required temperature.

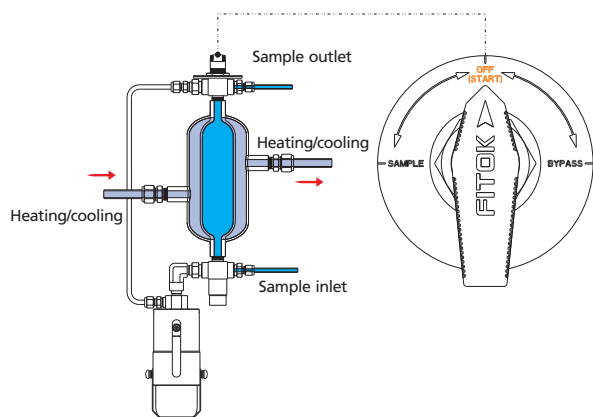


4 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle by gravity. Hold this position for a sufficient time. The amount of sample depends on the sample chamber volume.

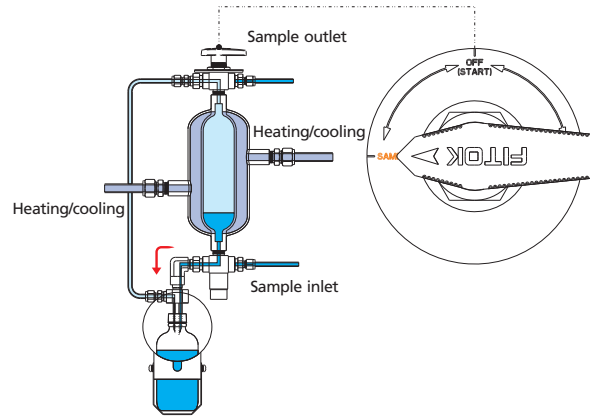

5 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

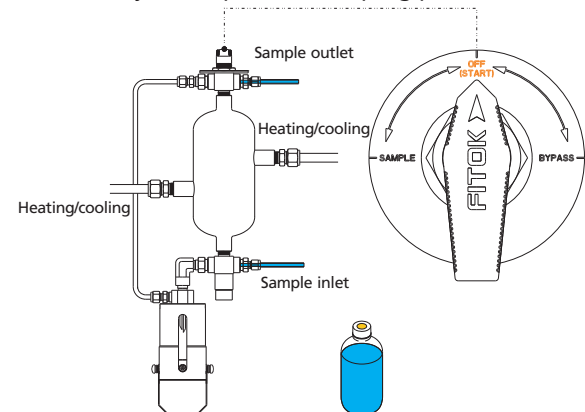

E Series


BLE1 - Back Purge Type with Vacuum Connection

Features

- Sampling from process lines at atmospheric pressure or vacuum condition
- Back purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting

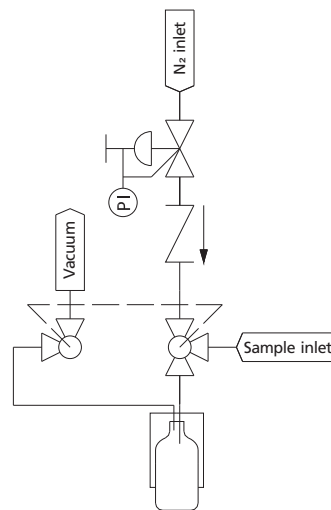

Note: Products of other specifications are available upon request.


Typical Installation Mode

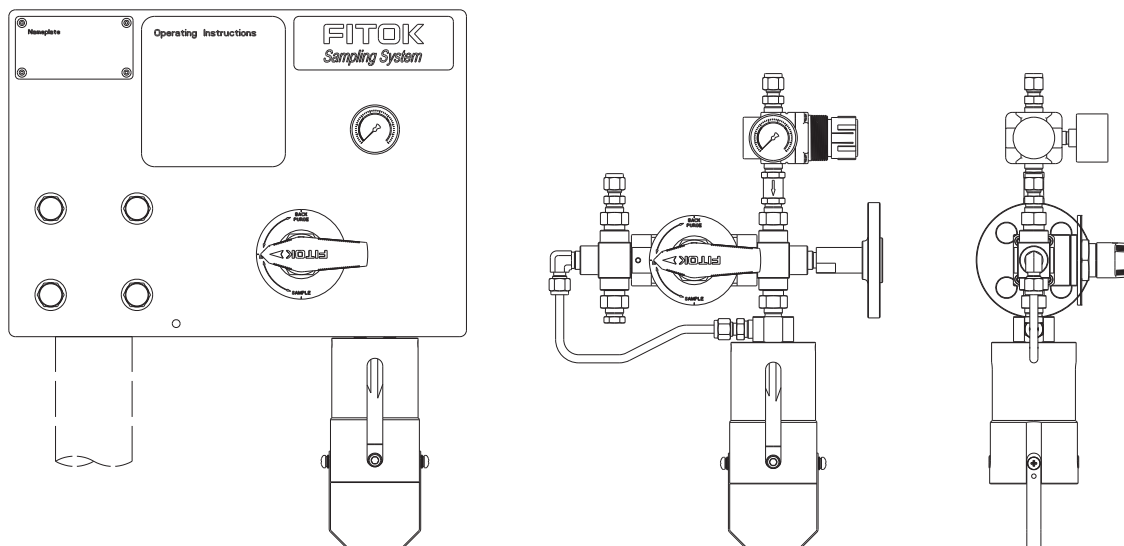

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

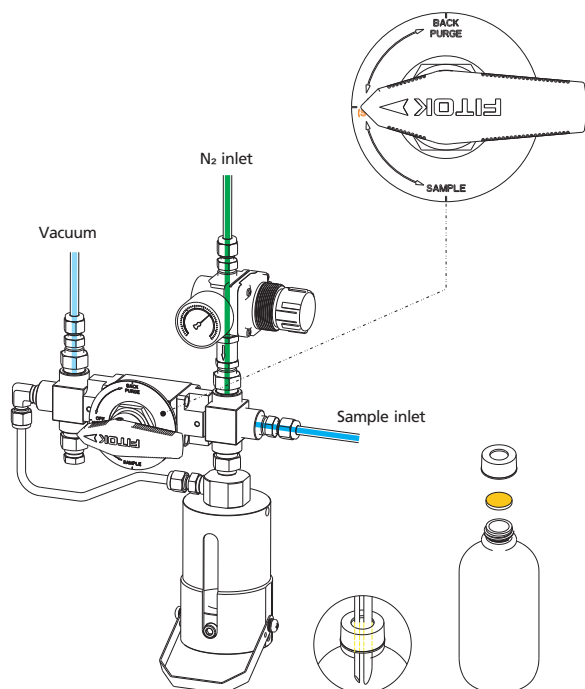


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

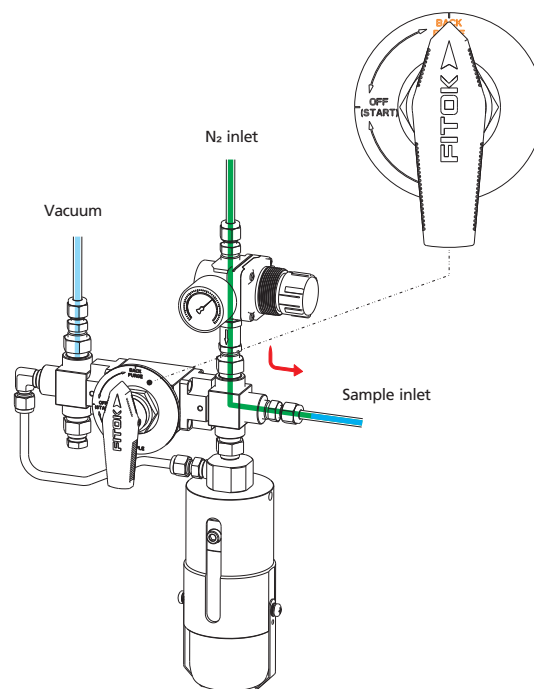


3 - Sampling

Turn the handle to the "SAMPLE" position, connecting the bottle with the vacuum connection to create a vacuum in the sample bottle. The sample flows into the bottle. When the required amount has been taken, turn the handle to the "OFF" position to close the sampling system.

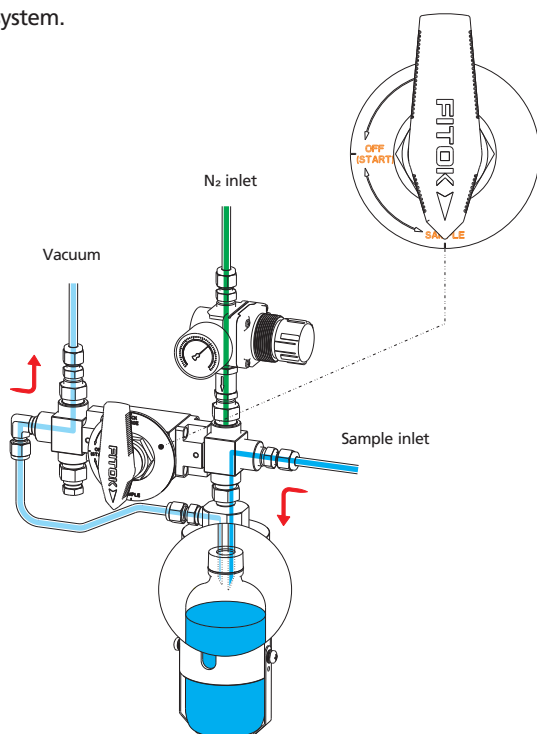

4 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

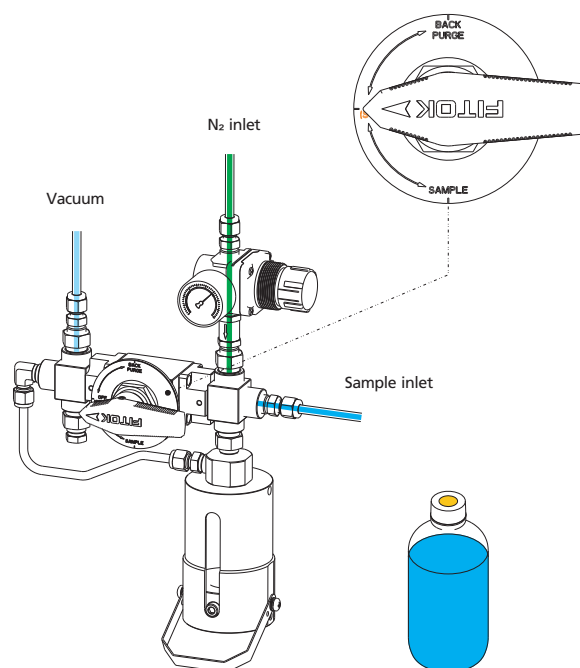


BLE2 - Back and Needle Purge Type with Vacuum Connection

Features

- Sampling from process lines at atmospheric pressure or vacuum condition
- Back purge and needle purge
- Easy operation with a single handle by linkage valve



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves and BO Series 4-way ball valves (gearbox linkage): PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 300°F (-18°C to 148°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting

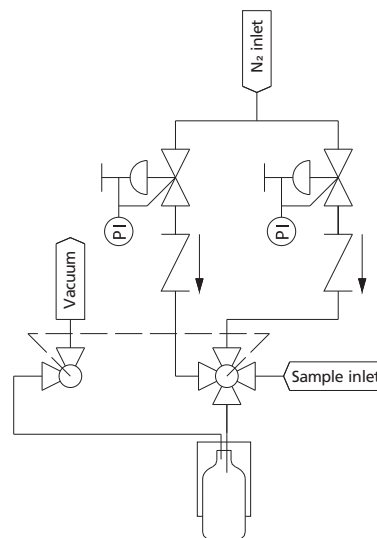

Note: Products of other specifications are available upon request.


Typical Installation Mode

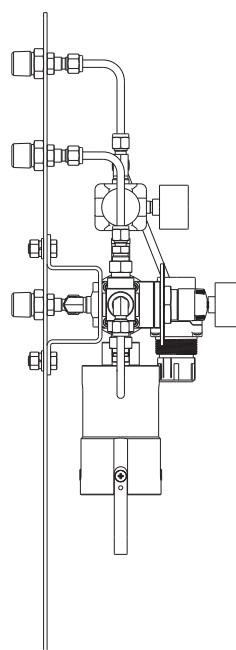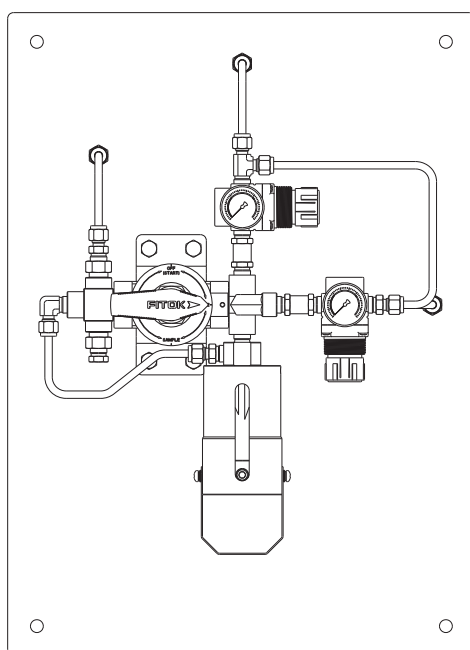

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

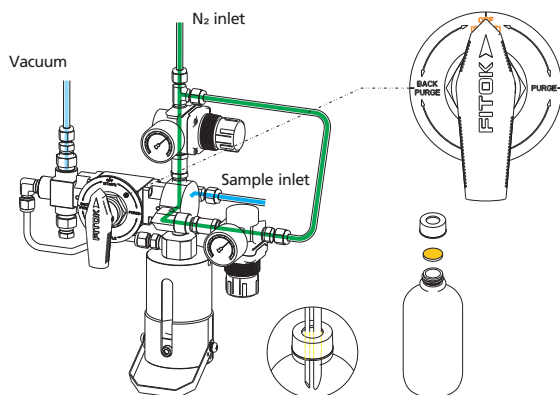


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

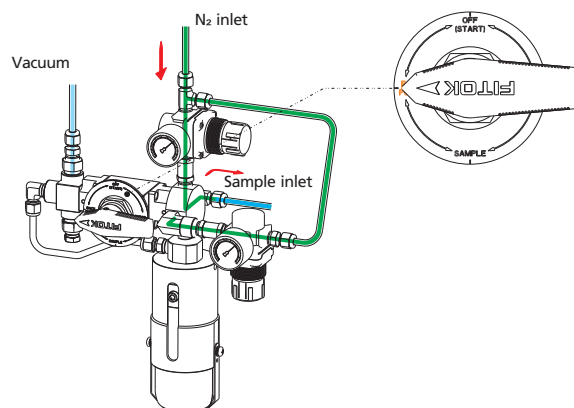


3 - Sampling

Turn the handle to the "SAMPLE" position, connecting the bottle with the vacuum connection to create a vacuum in the sample bottle. The sample flows into the bottle. When the required amount has been taken, turn the handle to the "PURGE" position.

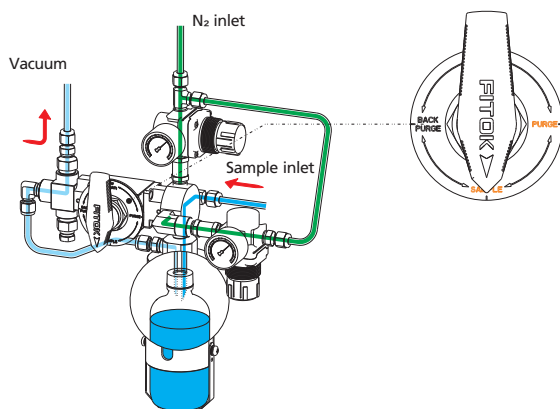


4 - Needle Purge

Allow Nitrogen to force the residual sample from the needle assembly into the bottle. Hold this position for a sufficient time.

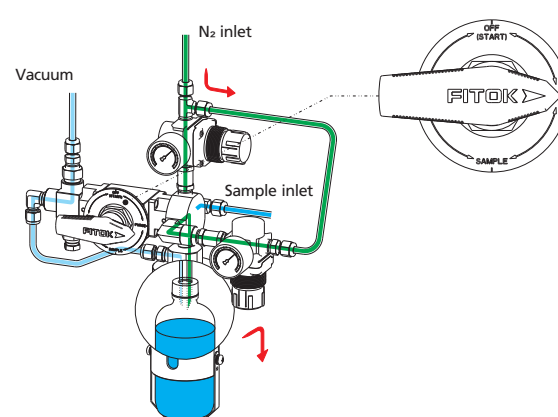

5 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

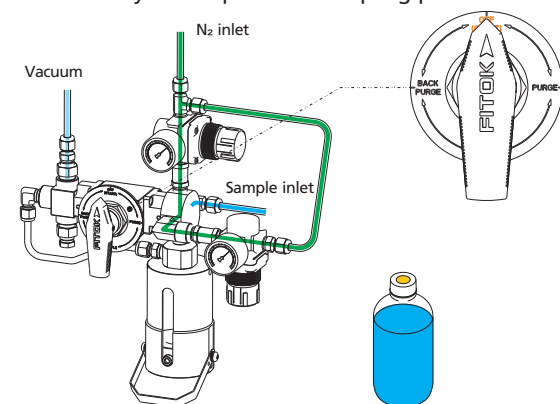


BLE3 - Back Purge Type with Venturi Unit

Features

- Sampling from process lines at atmospheric pressure or vacuum condition
- Back purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Venturi Unit	Creating a vacuum in the sample bottle; sampling at atmospheric pressure or vacuum condition
Connections	1/4" tube fitting

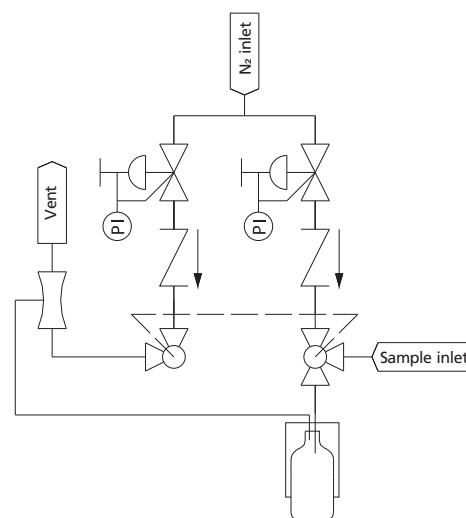

Note: Products of other specifications are available upon request.


Typical Installation Mode

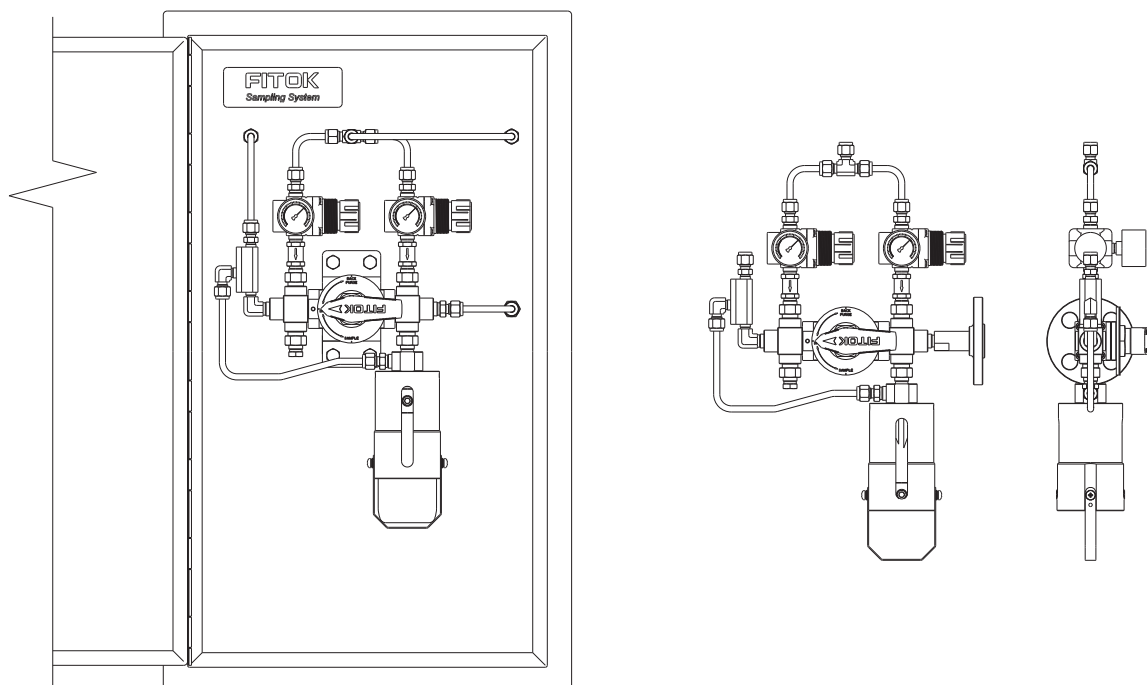

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

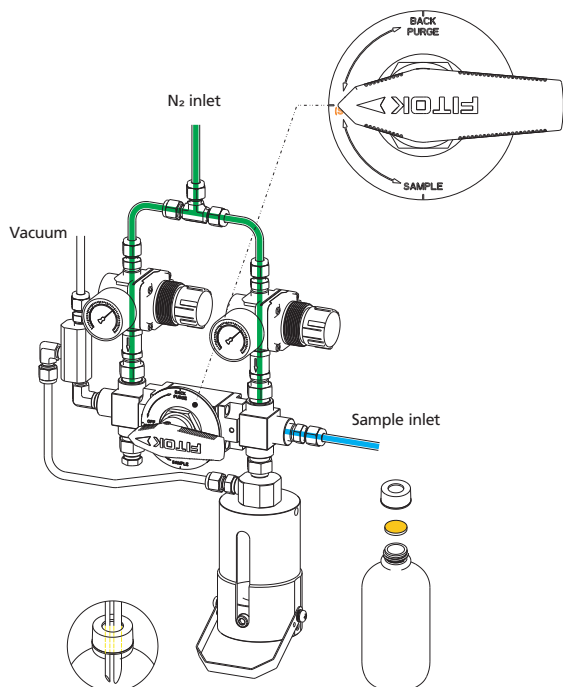


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle vacuumized by the venturi unit. When the required amount has been taken, turn the handle to the "OFF" position.

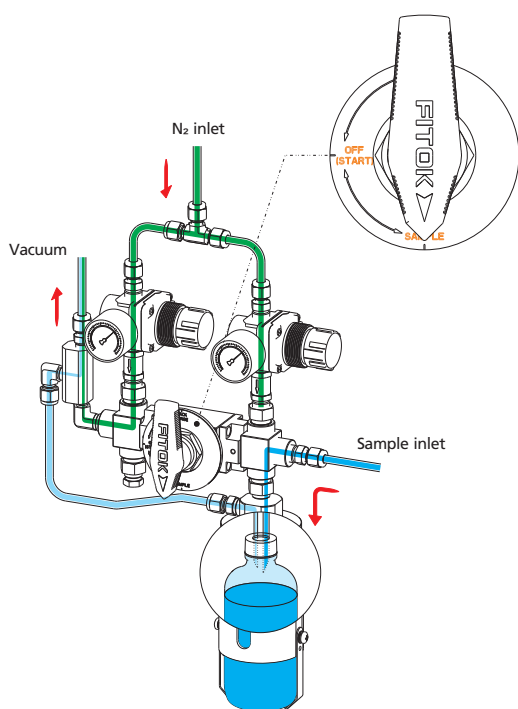


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

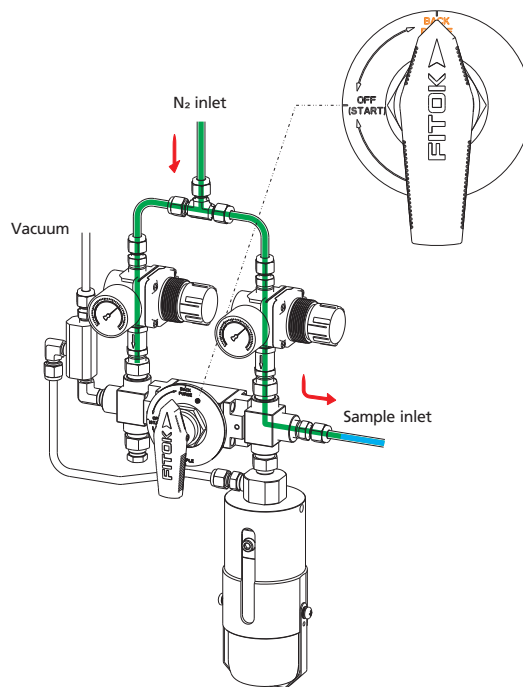

4 - Off

Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

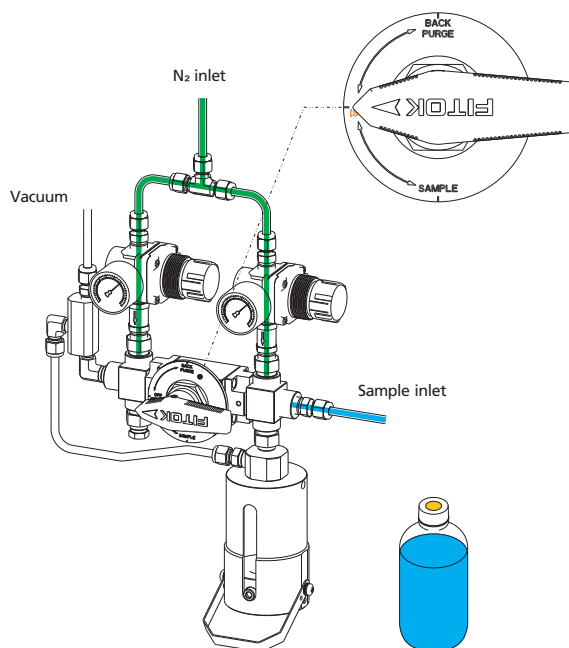


BLE4 - Back and Needle Purge Type with Venturi Unit

Features

- Sampling from process lines at atmospheric pressure or vacuum condition
- Back purge and needle purge
- Easy operation with a single handle by linkage valve



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves and BO Series 4-way ball valves (gearbox linkage): PTFE seat Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 300°F (-18°C to 148°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Venturi Unit	Creating a vacuum in the sample bottle, sampling at atmospheric pressure or vacuum condition
Connections	1/4" tube fitting

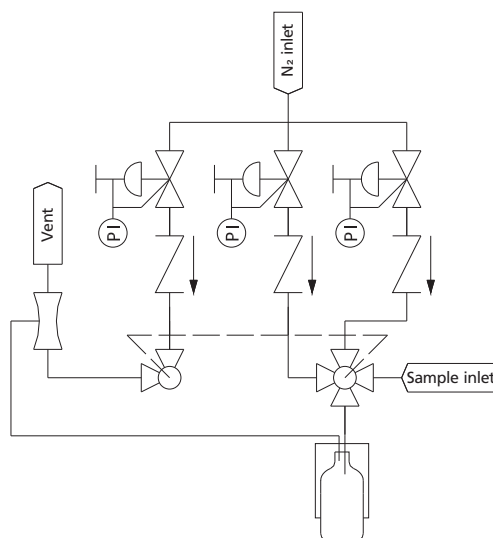

Note: Products of other specifications are available upon request.


Typical Installation Mode

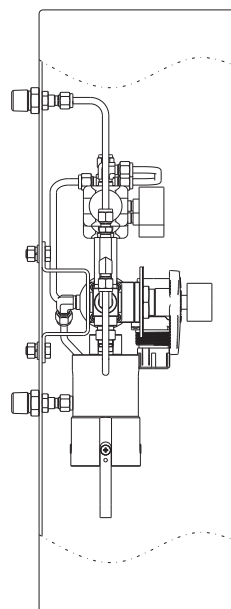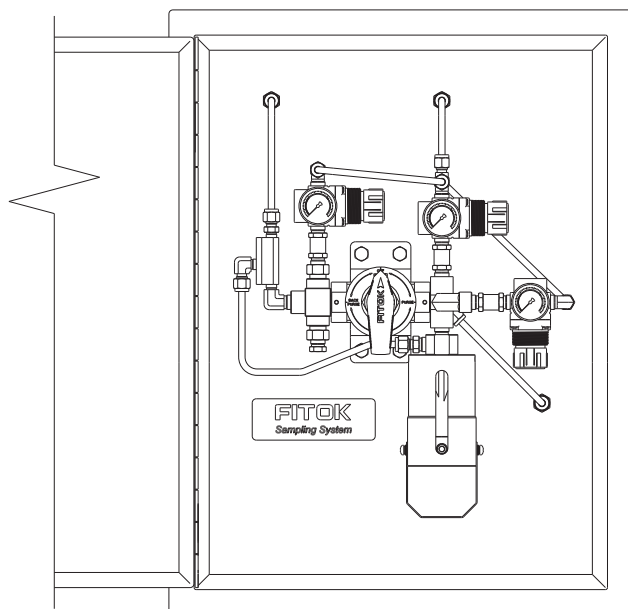

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

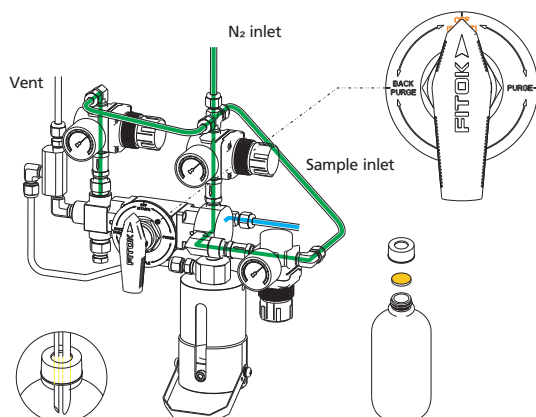


2 - Back Purge

Turn the handle to the "BACK PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line to ensure representative sampling.

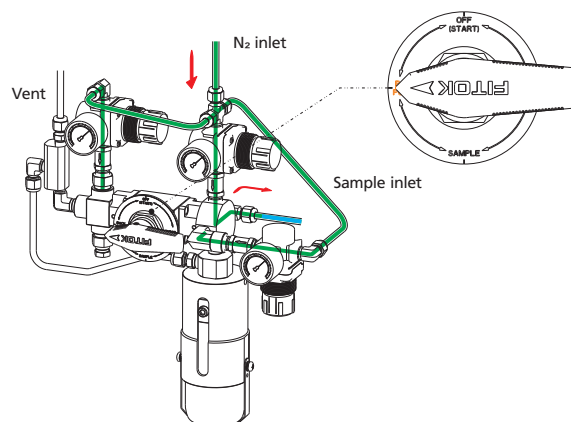


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing the sample to flow into the bottle vacuumized by the venturi unit. When the required amount has been taken, turn the handle to the "PURGE" position.

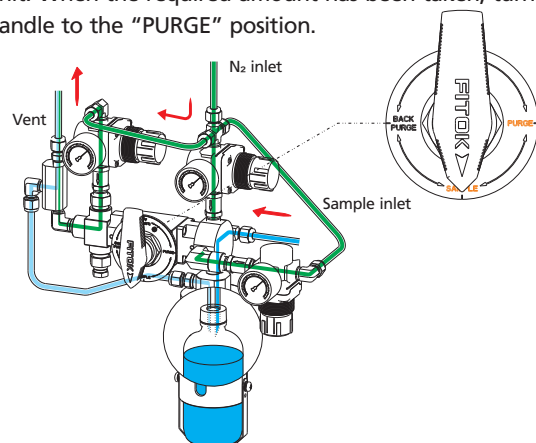


4 - Needle Purge

Allow Nitrogen to force the residual sample from the needle assembly into the bottle. Hold this position for a sufficient time.

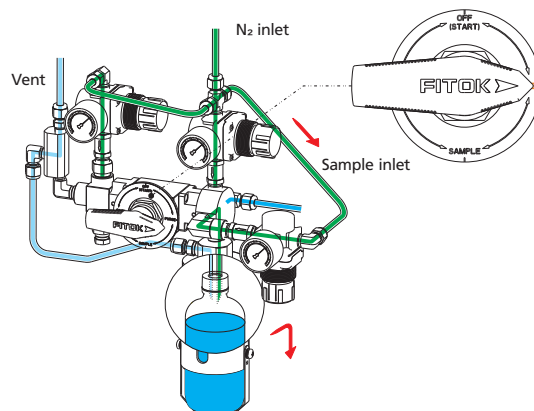

5 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

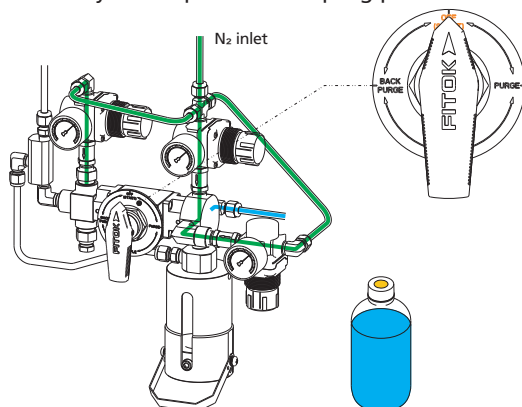


BLE5 - Overflow Type with Vacuum Connection

Features

- Sampling from process lines at atmospheric pressure or vacuum condition
- Fixed volume sampling
- Overflow sampling and back purge
- Easy operation with a single handle by linkage valve



Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting
Others	Overflow cylinder, sample chamber (200 ml), ball valve

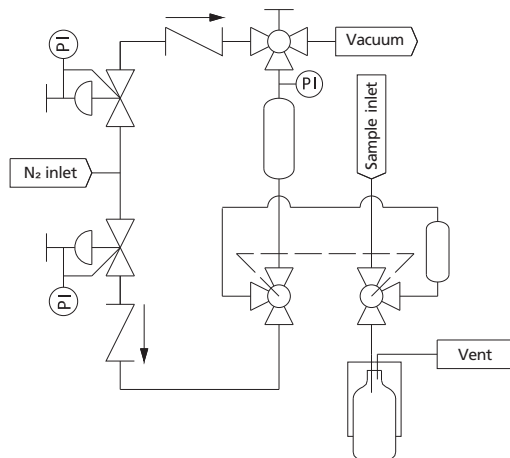

Note: Products of other specifications are available upon request.


Typical Installation Mode

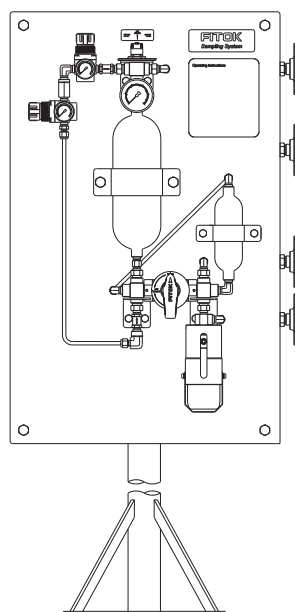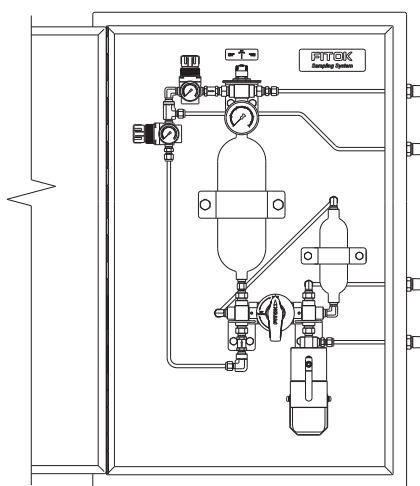

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

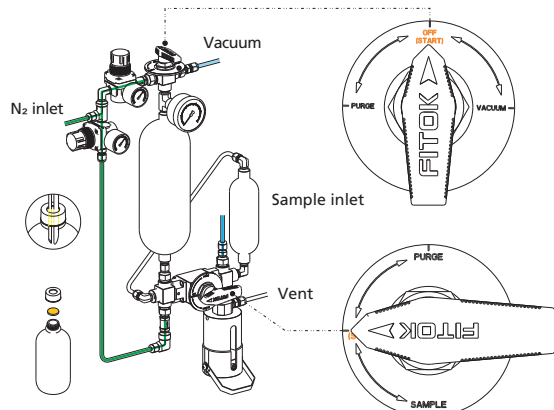


2 - Vacuum

Turn the handle on the top of the overflow cylinder to the "VACUUM" position to vacuumize the overflow cylinder. Turn the handle to the "OFF" position.

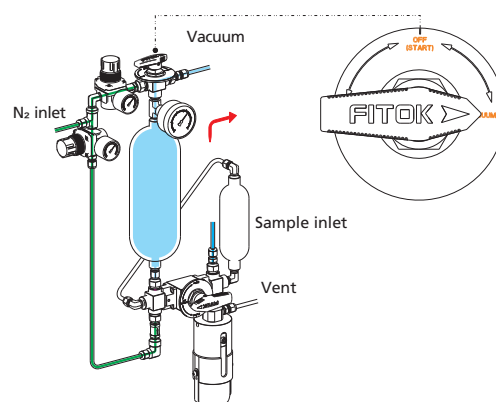


3 - System Purge

Turn the main handle to the "PURGE" position, allowing the sample to flow from the process line into the vacuumized overflow cylinder through the sample chamber to ensure representative sampling.

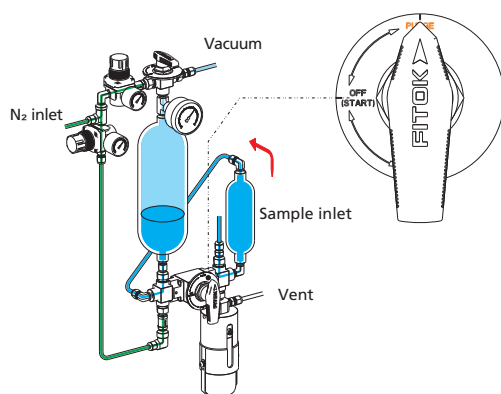


4 - Sampling

Turn the main handle to the "SAMPLE" position, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the sample chamber and needle assembly. The amount of sample depends on the sample chamber volume.

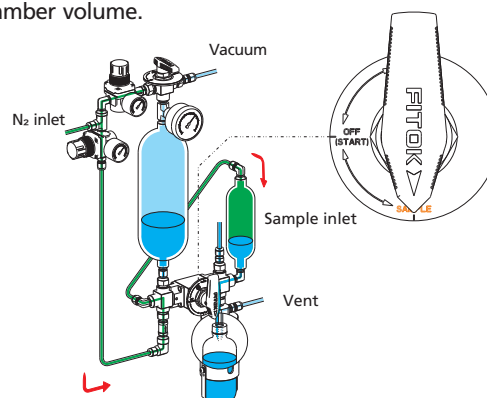


5 - Back Purge

Turn the main handle and the handle on the top of the overflow cylinder to the "PURGE" position, allowing Nitrogen to force the residual sample from the system into the process line.

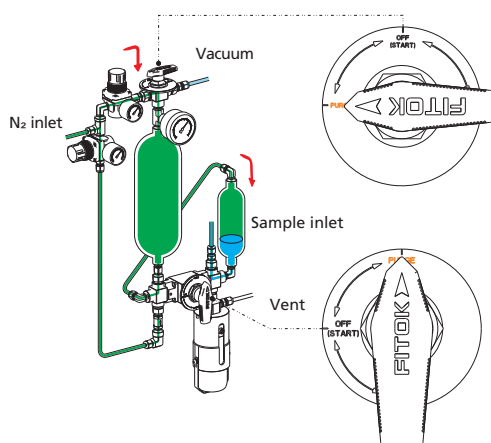

6 - OFF

Turn the two handles to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reveals automatically to complete the sampling process.

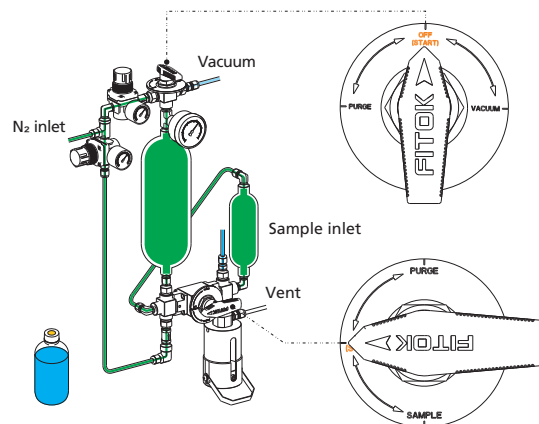


BLE6 - Fixed Volume Type

Features

- Sampling from medium or high pressure devices or process lines
- Fixed volume sampling
- System purge and needle purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Sleeve Assembly	250 ml sleeve with bottle retaining clip
Needle Assembly	Process/vent needle ID: 1.4 mm (0.06")
Sampling Valve	BF Series 3-way ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" tube fitting
Others	Sample chamber (200 ml)

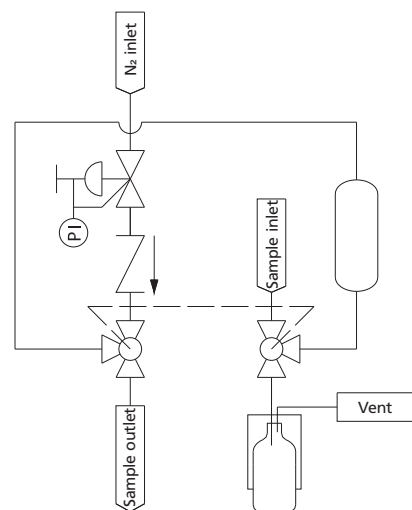

Note: Products of other specifications are available upon request.


Typical Installation Mode

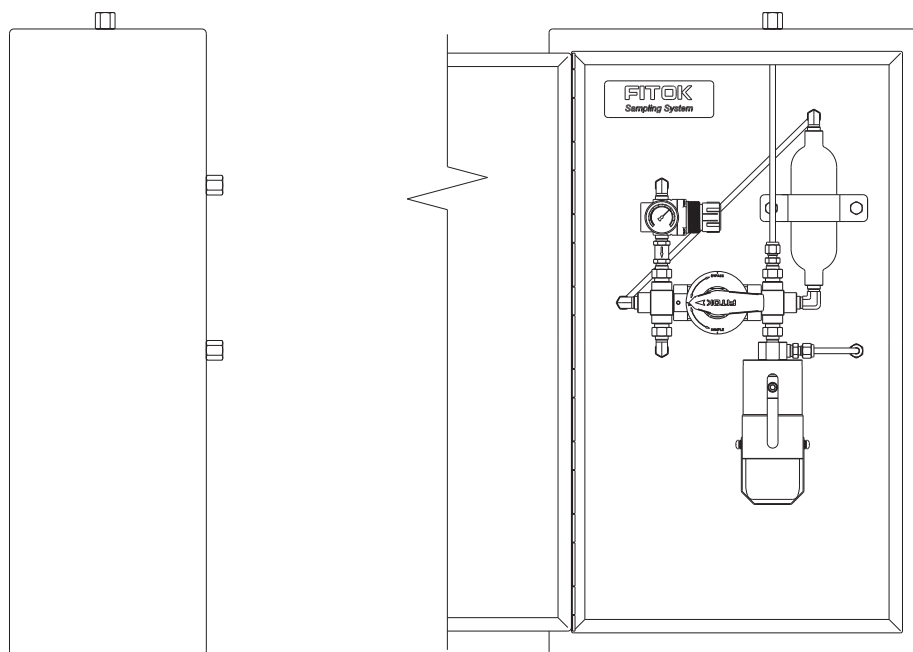

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Swing down the bottle retaining clip.

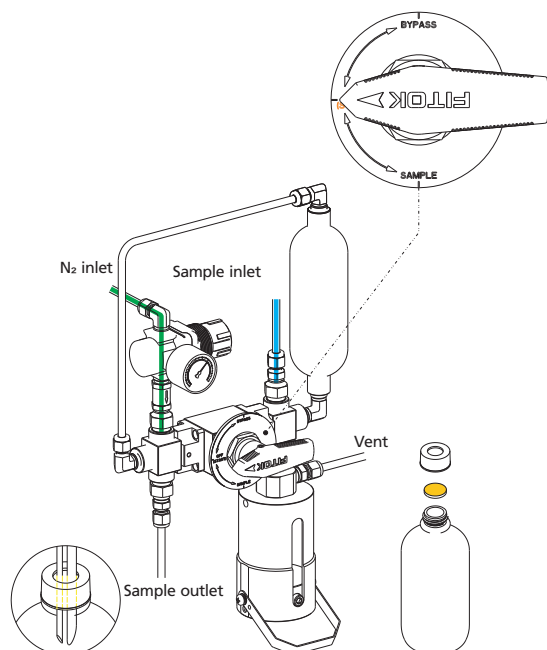


2 - System Purge

Turn the handle to the "BYPASS" position, allowing the sample to flow continuously through the sample chamber. Hold for a period of time to ensure representative sampling.

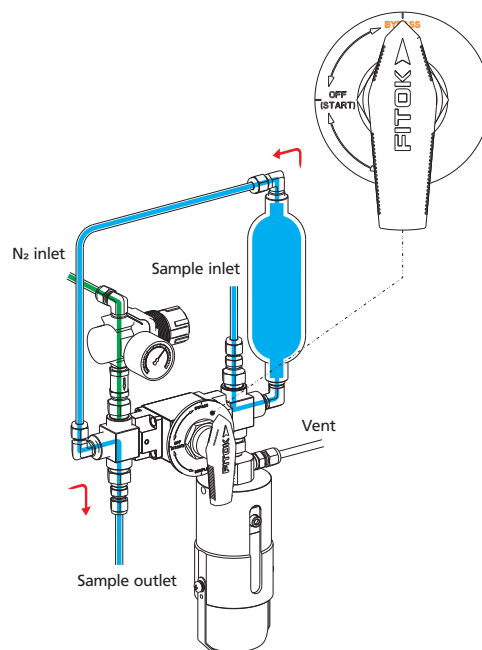


3 - Sampling

Turn the handle to the "SAMPLE" position, allowing Nitrogen to force the sample from the sample chamber into the bottle and purge the sample chamber and needle assembly. This position can be held for a sufficient time.

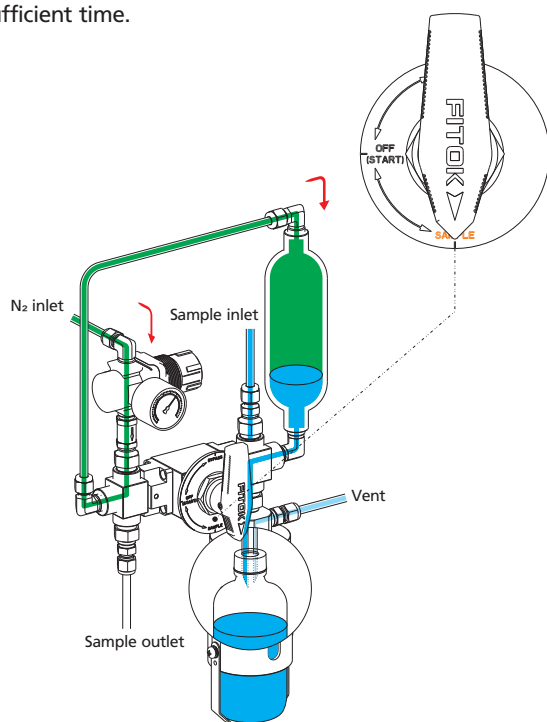

4 - Off

Turn the handle to the "OFF" position to close the sampling system. Remove the bottle retaining clip and take out the bottle from the sleeve. The septum reseals automatically to complete the sampling process.

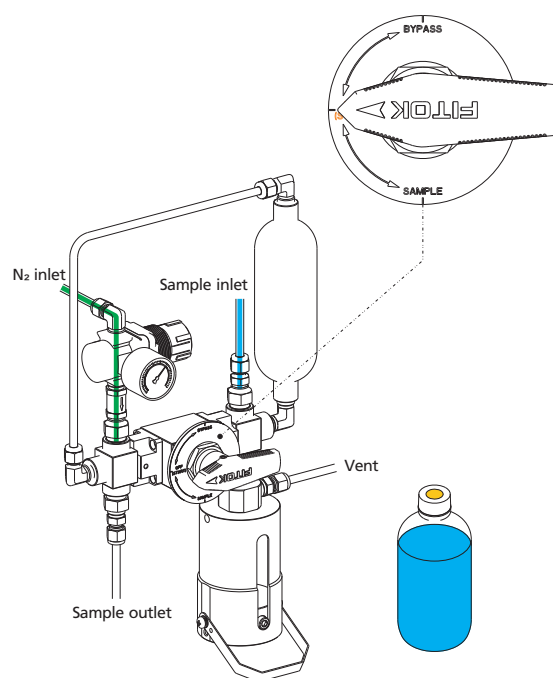

CS - Cylinder Configuration Sampling Systems for Liquefied Gases


CSF1 - System Purge Type with Expansion Chamber

Features

- ⦿ Sampling from devices or process lines
- ⦿ System purge
- ⦿ Predefined sampling volume controlled by an expansion chamber to ensure safe sampling
- ⦿ Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Expansion Chamber	100ml, to control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

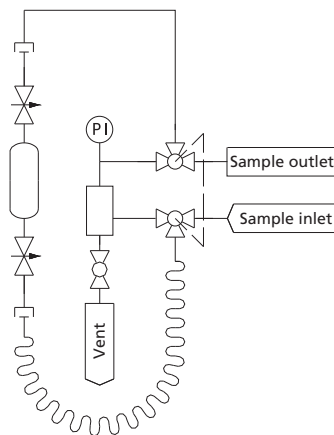

Note: Products of other specifications are available upon request.


Typical Installation Mode

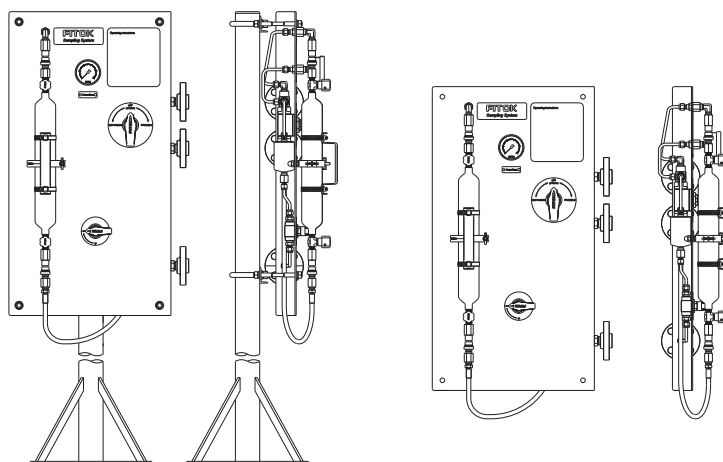

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

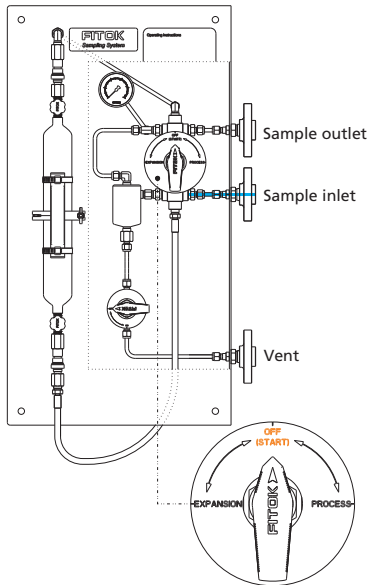


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

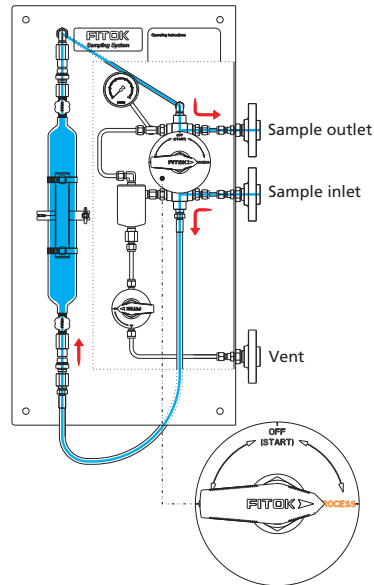


3 - Expansion

Turn the handle to the "EXPANSION" position, connecting the cylinder with the expansion chamber. Hold for a period of time to transfer a portion of sample to the expansion chamber. Close the needle valves at both ends of the cylinder.

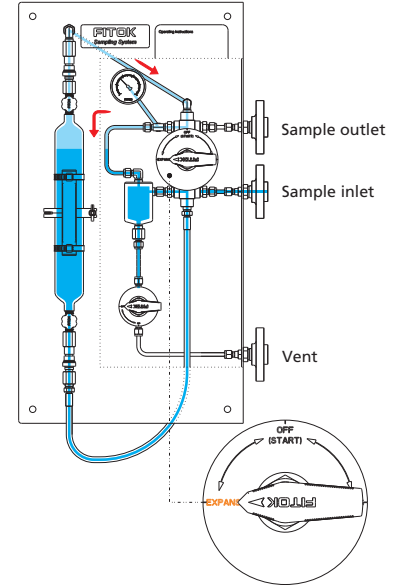


4 - Depressurization/vent

Open the ball valve on the expansion chamber to depressurize and discharge the residual sample out of the sampling line and the expansion chamber. Subsequently, close the ball valve.

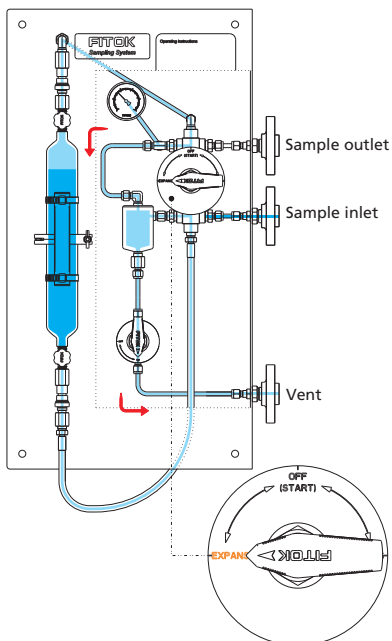

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

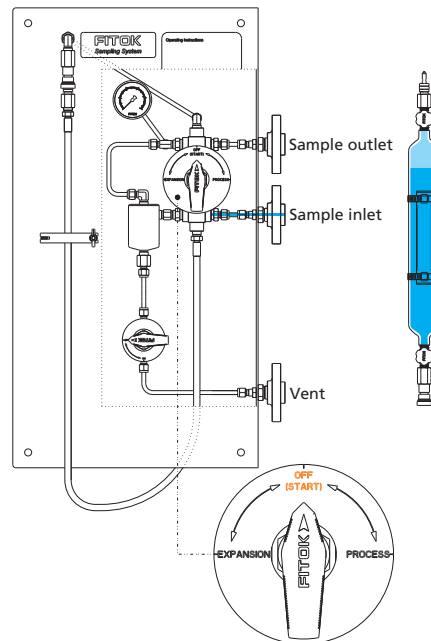


CSF2 - Expansion Chamber Purge Type

Features

- Sampling from devices or process lines
- System purge and expansion chamber purge
- Predefined sampling volume controlled by an expansion chamber to ensure safe sampling
- Easy operation with a single handle


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Expansion Chamber	100ml, to control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

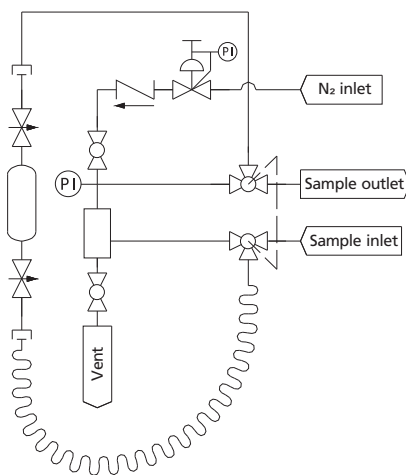

Note: Products of other specifications are available upon request.


Typical Installation Mode

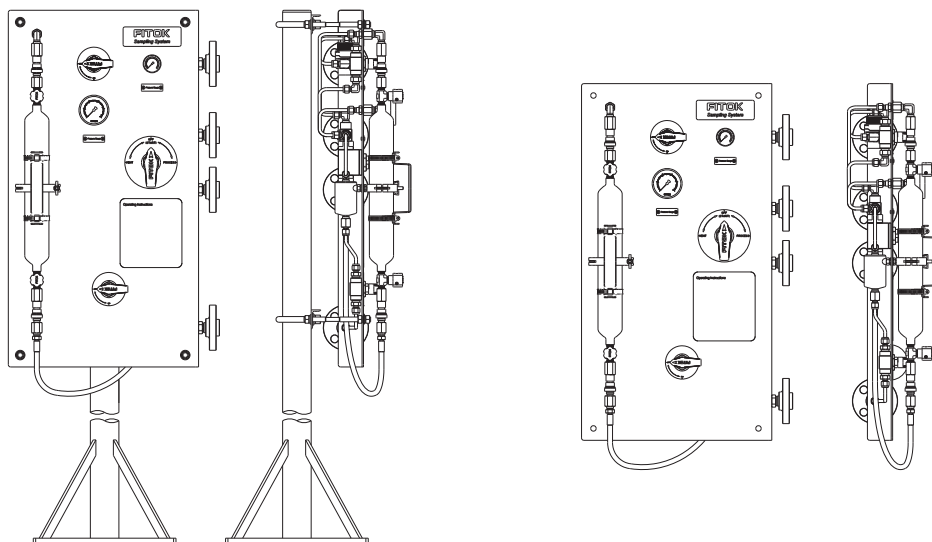

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

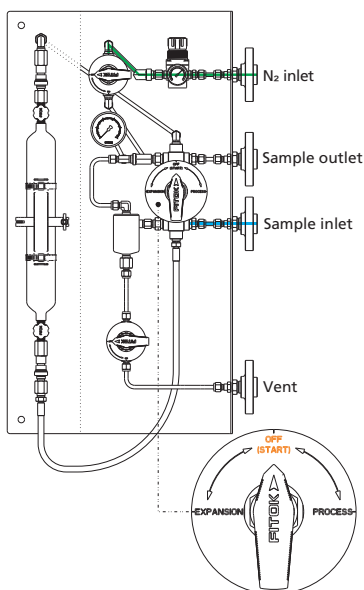


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

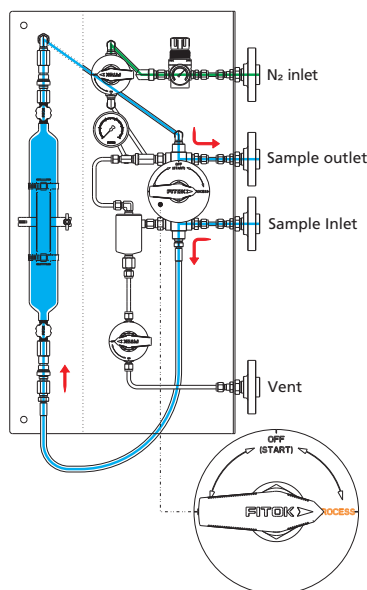


3 - Expansion

Turn the handle to the "EXPANSION" position, connecting the cylinder with the expansion chamber. Hold for a period of time to transfer a portion of sample to the expansion chamber. Close the needle valves at both ends of the cylinder.

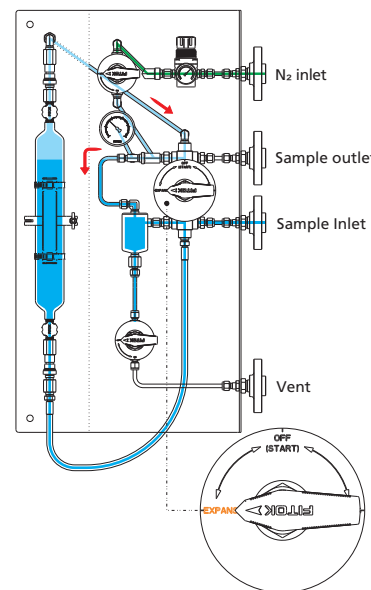


4 - Purge

Open the ball valve on the expansion chamber and the ball valve on the vent branch, allowing Nitrogen to purge the expansion chamber. Subsequently, close all the ball valves.

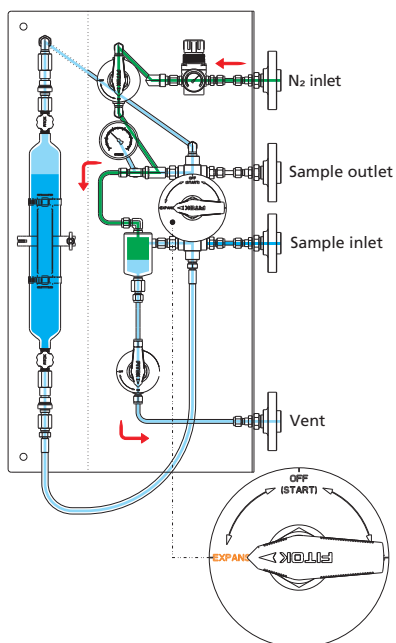

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

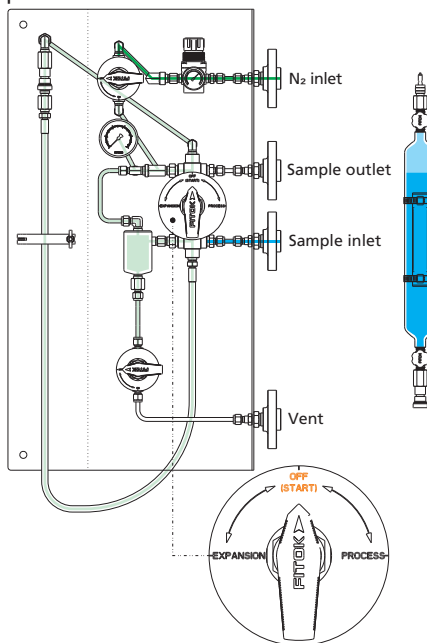


CSF3 - Bypass Purge Type with Expansion Chamber

Features

- Sampling from devices or process lines
- System purge and bypass purge
- Predefined sampling volume controlled by an expansion chamber to ensure safe sampling
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
	CV Series check valves
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Expansion Chamber	100ml, to control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

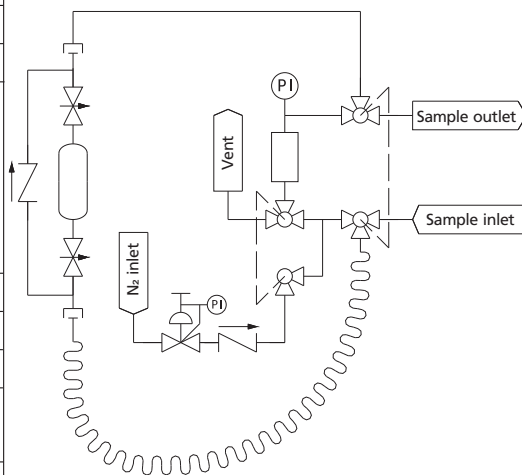

Note: Products of other specifications are available upon request.


Typical Installation Mode

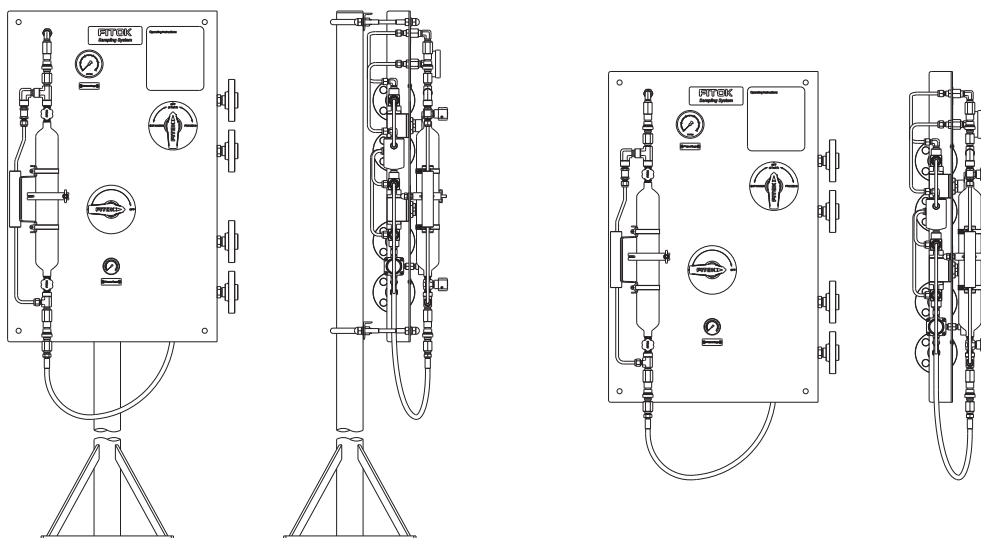

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

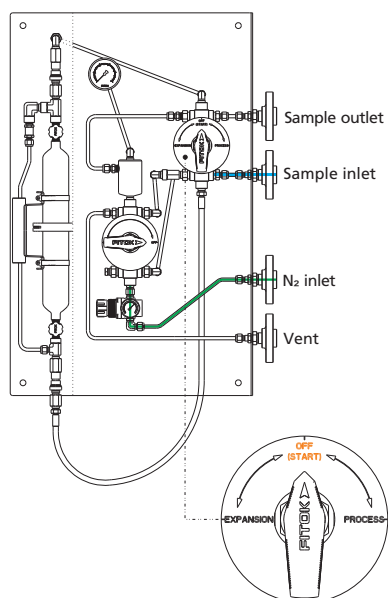


2 - Pre-sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

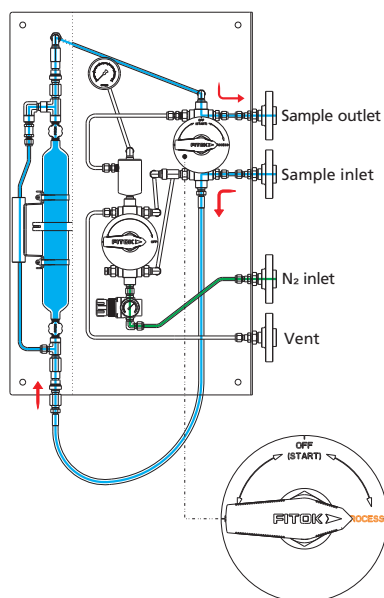


3 - Expansion

Turn the handle to the "EXPANSION" position, connecting the cylinder with the expansion chamber. Hold for a period of time to transfer a portion of sample to the expansion chamber. Close the needle valves at both ends of the cylinder.

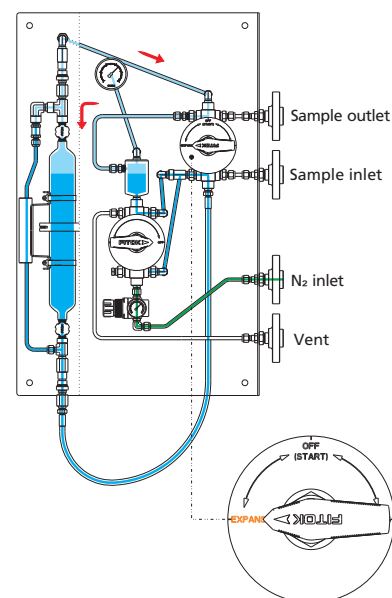


4 - Purge

Turn the handle of the valve on the purge line to the "PURGE" position, allowing Nitrogen to flow through the quick-connects and bypass to force the residual sample out of the system.

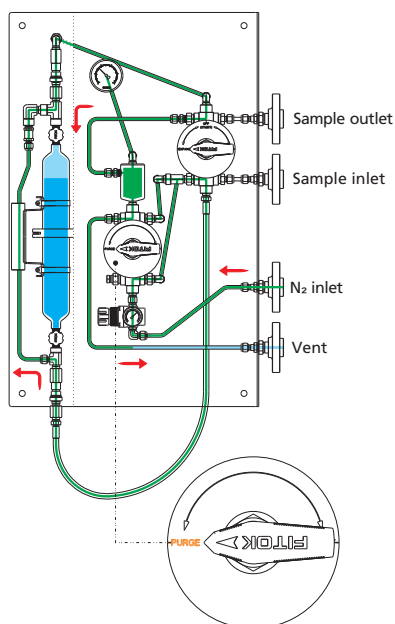

5 - Off

Turn the two handles to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

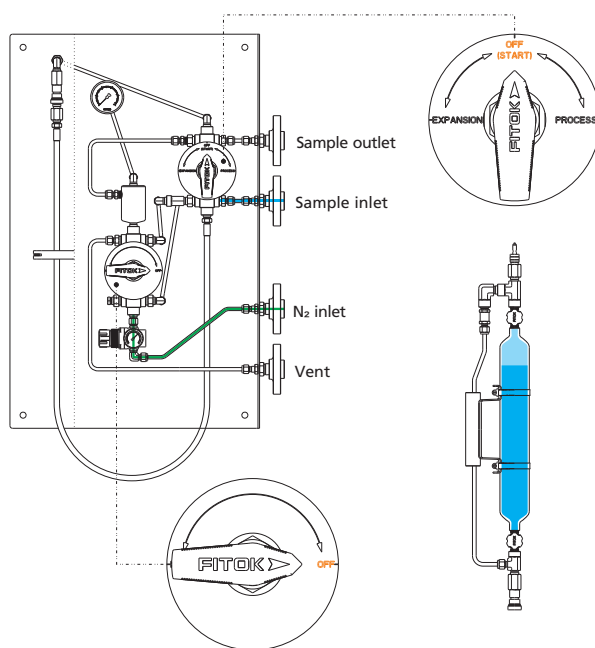


CSF4 - Vent to Flare Type with Expansion Chamber

Features

- Sampling from devices or process lines
- System purge to flare (no circulation loop)
- Predefined sampling volume controlled by an expansion chamber to ensure safe sampling
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Expansion Chamber	100 ml, to control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

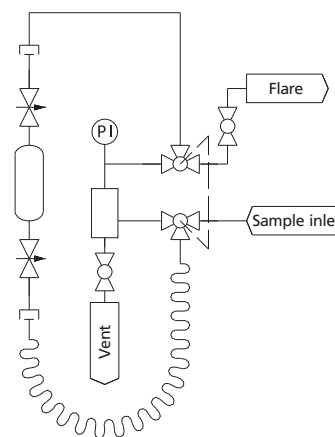

Note: Products of other specifications are available upon request.


Typical Installation Mode

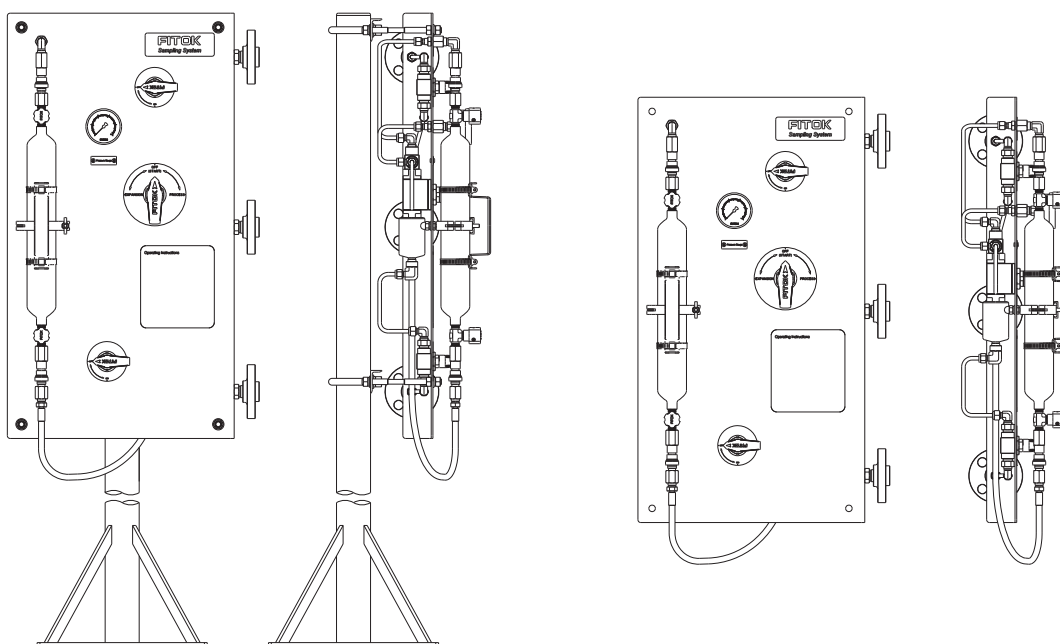

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

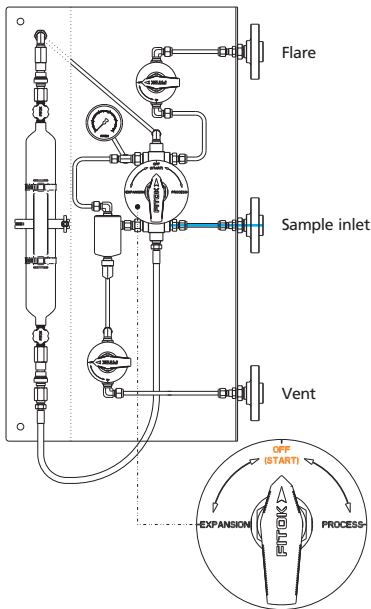


2 - Pre-sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow into and fill the cylinder.

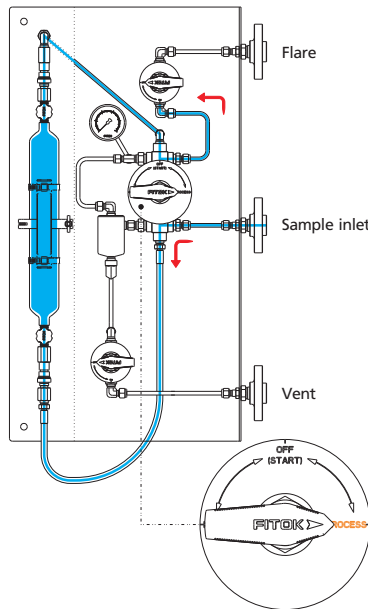


3 - Sampling

Open the ball valve on the flare line, connecting the sampling line to the flare to allow the sample to flow continuously into the cylinder. Hold for a period of time to ensure representative sampling. Subsequently, close the ball valve.

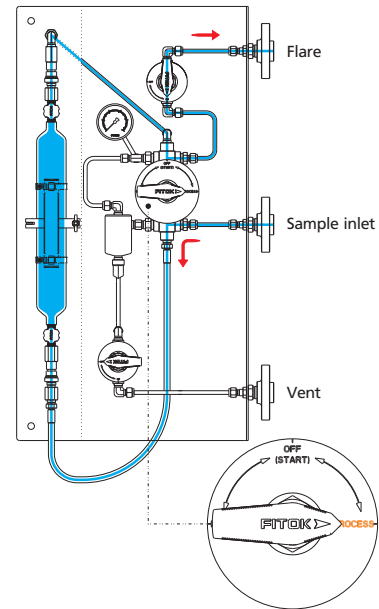


4 - Expansion

Turn the handle to the "EXPANSION" position, connecting the cylinder with the expansion chamber. Hold for a period of time to transfer a portion of sample to the expansion chamber. Close the needle valves at both ends of the cylinder.

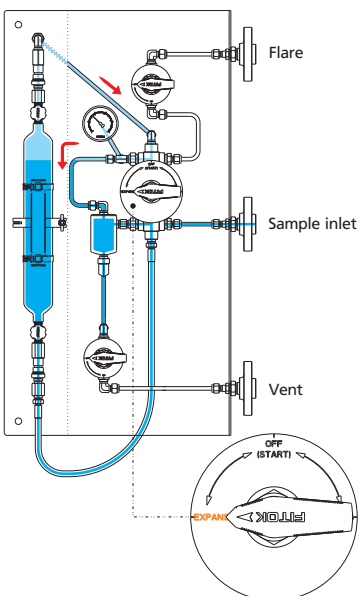


5 - Depressurization/vent

Open the ball valve on the expansion chamber, connecting with the vent line to depressurize and discharge the residual sample out of the system. Subsequently, close the ball valve.

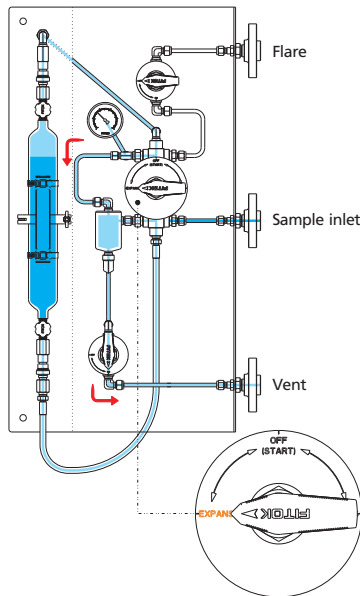

6 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

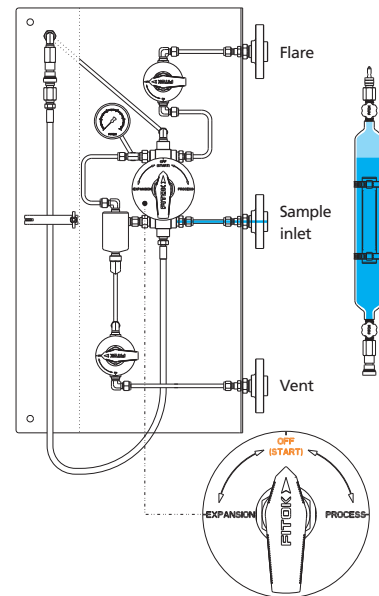


CSF5 - Outage Tube Type

Features

- Sampling from devices or process lines
- System purge
- Predefined sampling volume controlled by an outage tube to ensure safe sampling
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
	500 ml cylinder
Cylinder Assembly	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Outage Tube	To control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

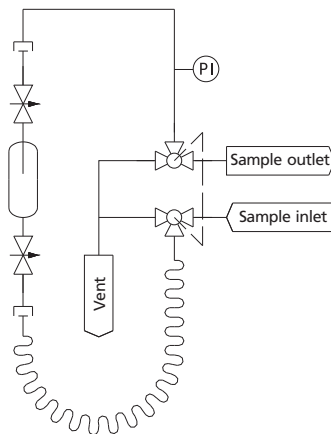

Note: Products of other specifications are available upon request.


Typical Installation Mode

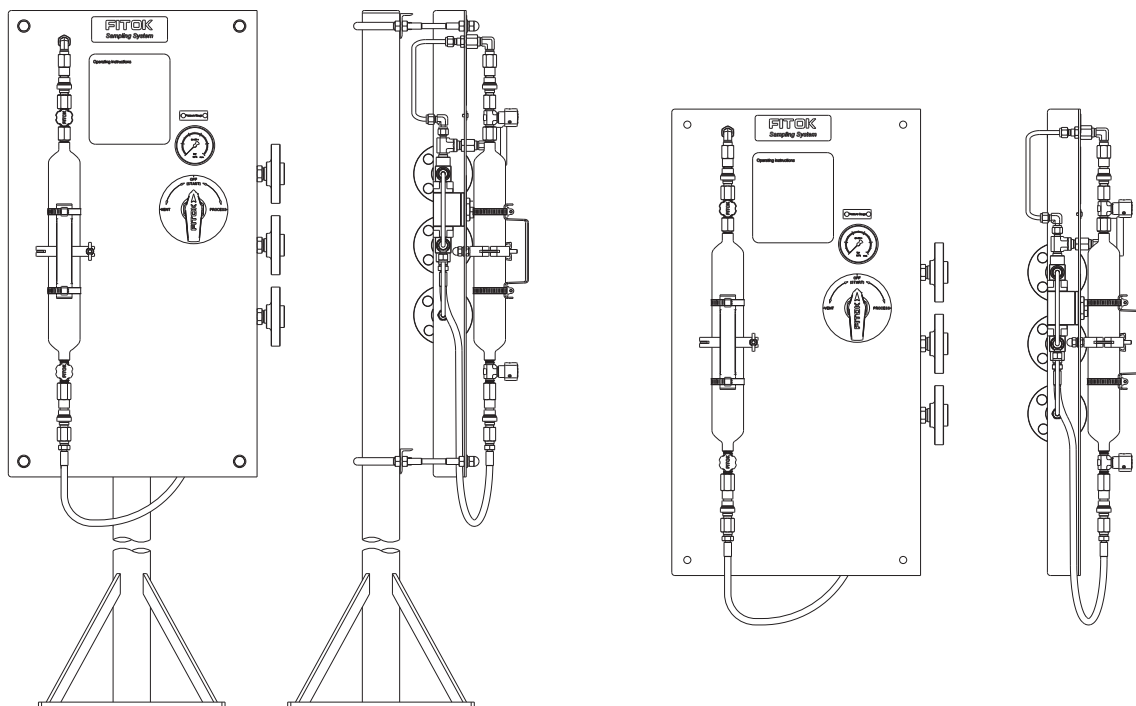

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

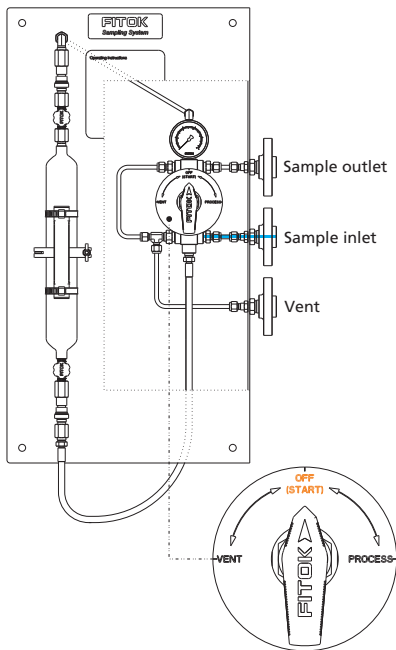


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the sample cylinder. Hold for a period of time to ensure representative sampling.

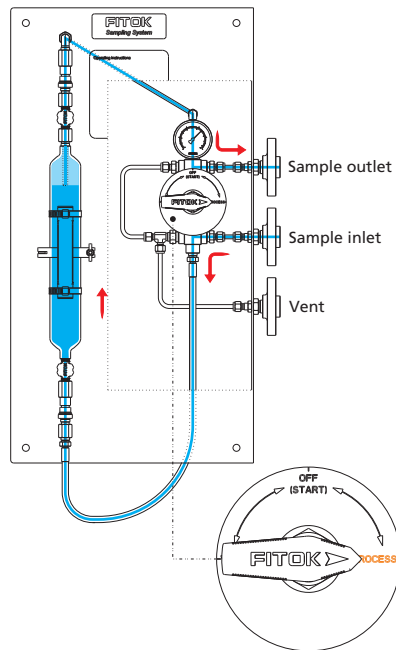


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both sides of the cylinder.

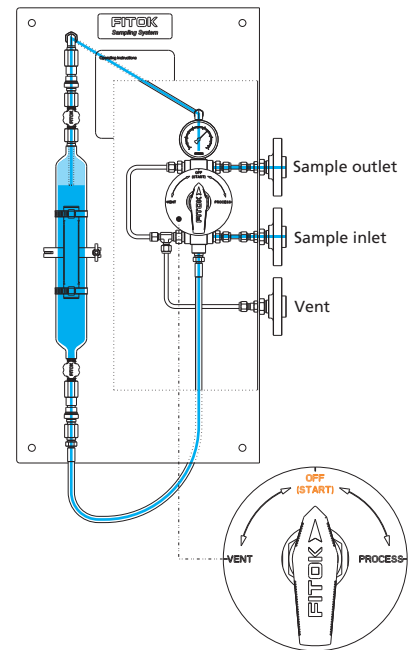


4 - Depressurization/vent

Turn the handle to the "VENT" position, connecting the sampling line with the vent line to depressurize and discharge the residual sample out of the system.

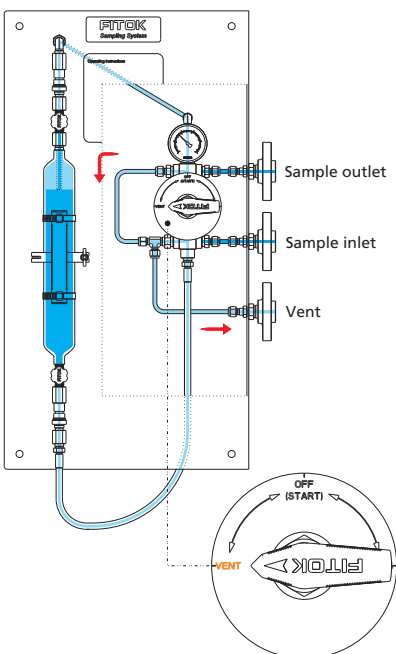

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

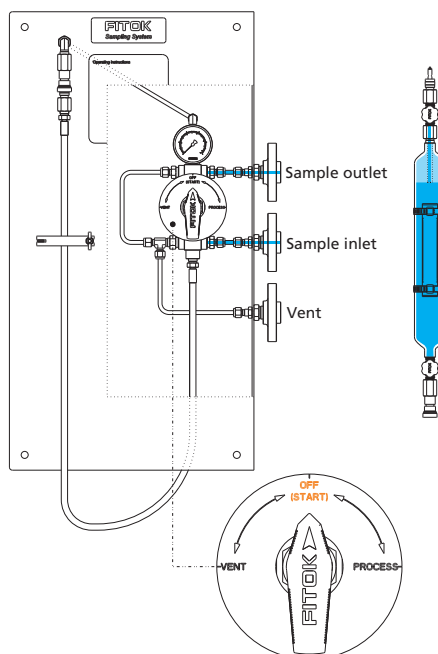


CSF6 - Bypass Purge Type with Outage Tube

Features

- Sampling from devices or process lines
- System purge and bypass purge
- Predefined sampling volume controlled by an outage tube to ensure safe sampling
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
	CV Series check valves
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Outage Tube	To control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

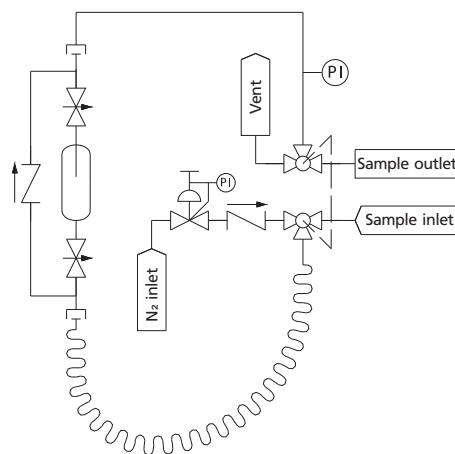

Note: Products of other specifications are available upon request.


Typical Installation Mode

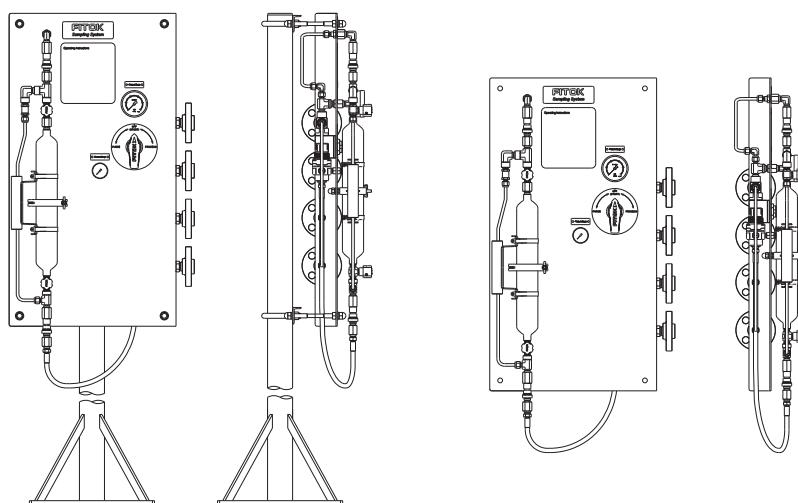

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

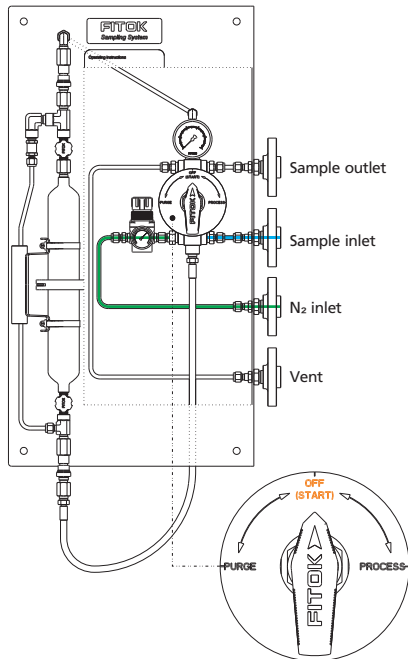


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

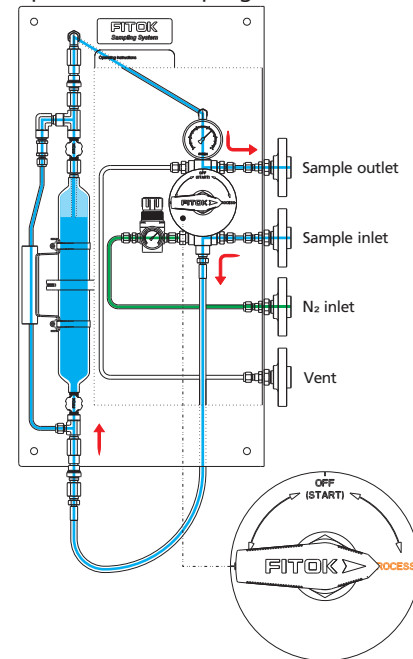


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both ends of the cylinder.

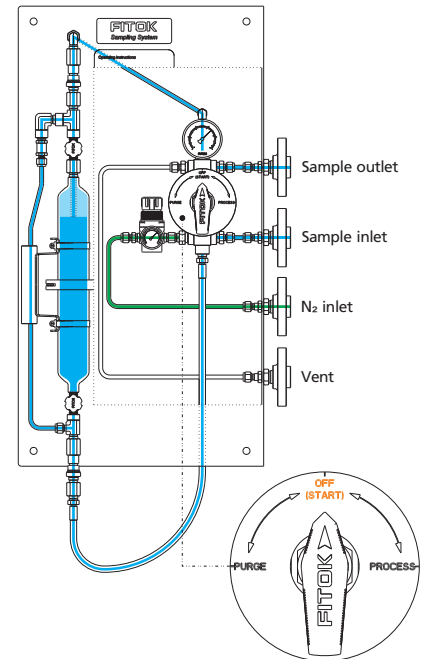


4 - Purge

Turn the handle to the "PURGE" position, allowing Nitrogen to force the residual sample out of the system.

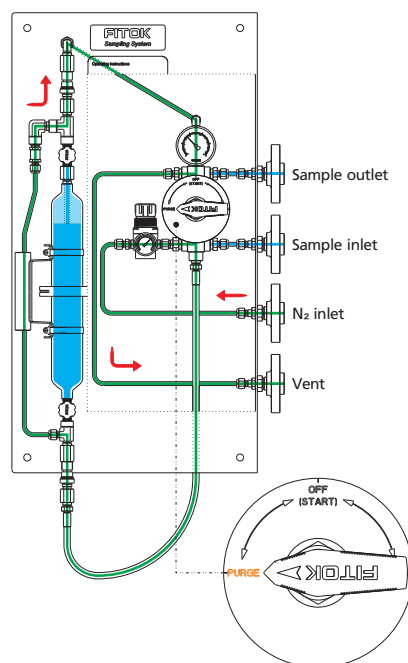

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

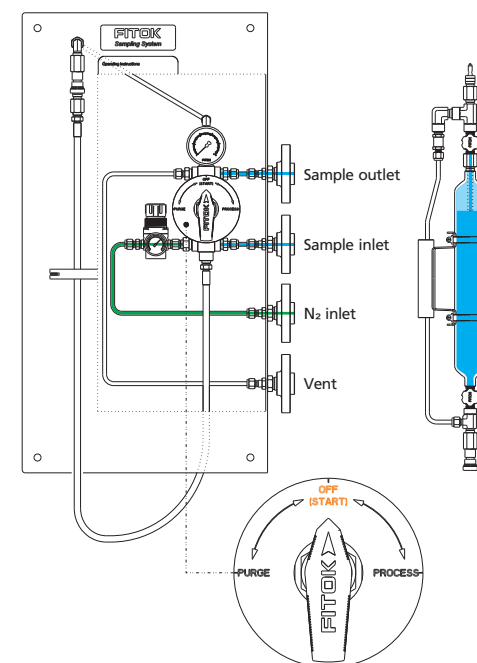


CSF7 - Vent to Flare Type with Outage Tube

Features

- Sampling from devices or process lines
- System purge to flare (no circulation loop)
- Predefined sampling volume controlled by an outage tube to ensure safe sampling
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Expansion Chamber	To control the predefined sampling volume to 80% of the cylinder volume
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

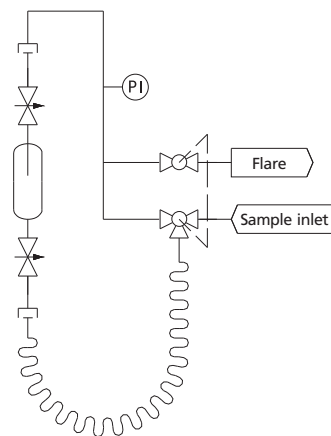

Note: Products of other specifications are available upon request.


Typical Installation Mode

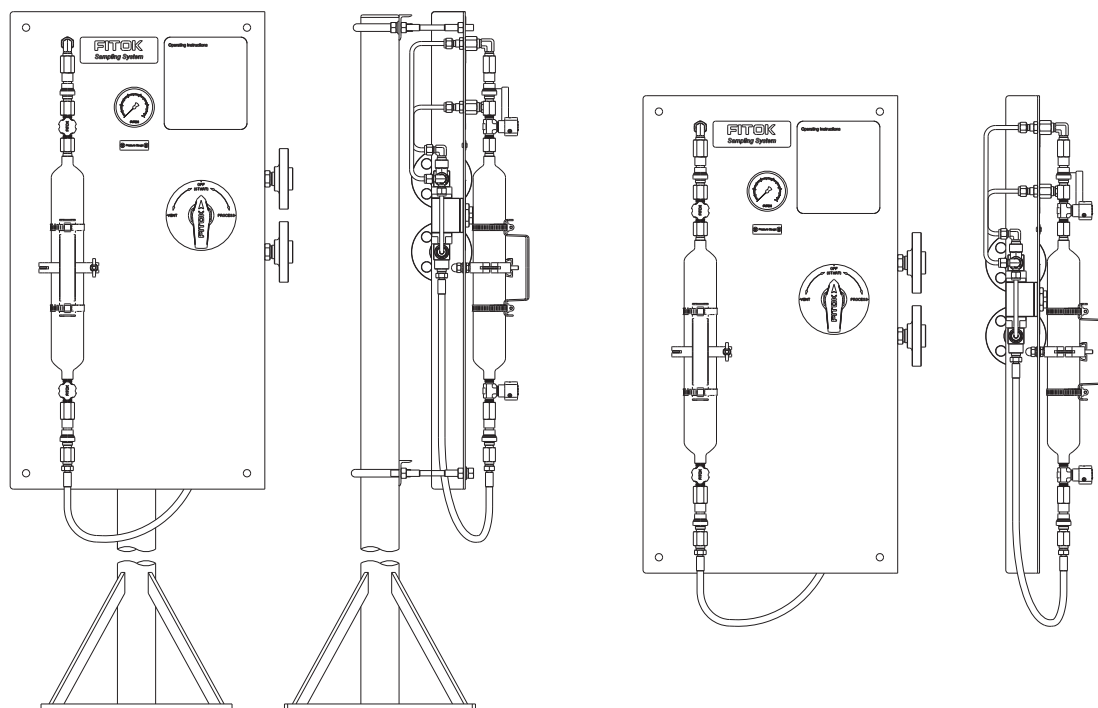

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

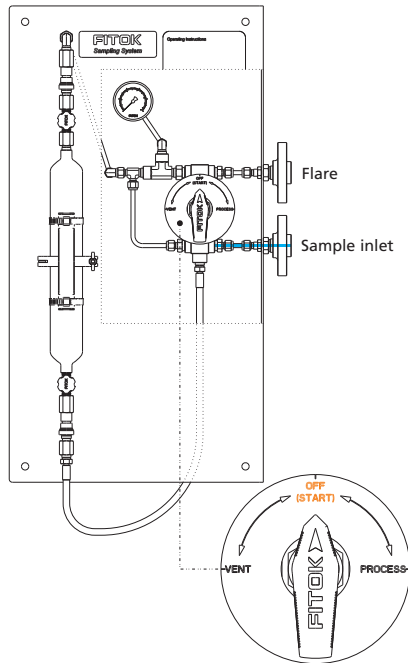


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the sample cylinder. Hold for a period of time to ensure representative sampling.

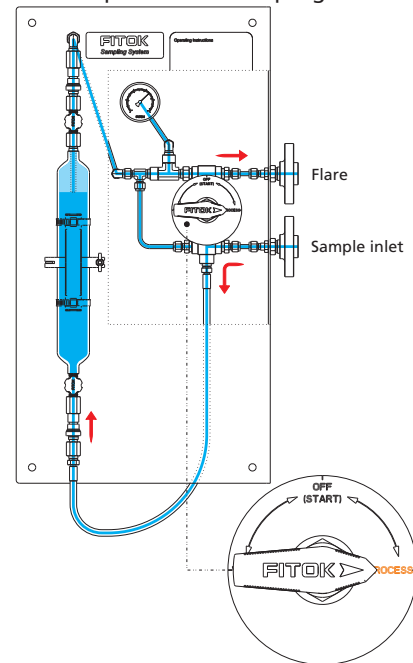


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both sides of the cylinder.

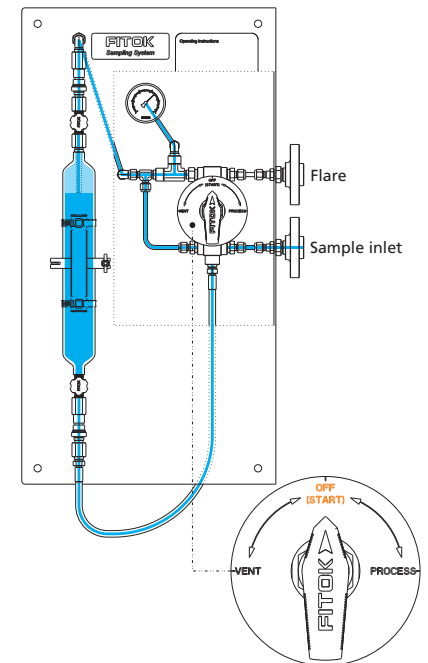


4 - Depressurization/vent

Turn the handle to the "VENT" position, connecting the sampling line to the flare to depressurize and discharge the residual sample out of the system.

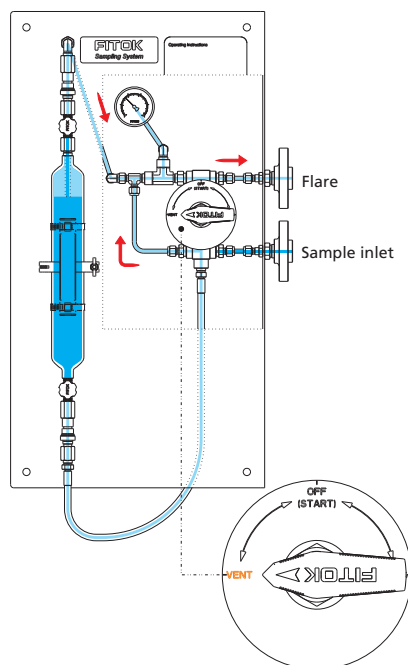

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

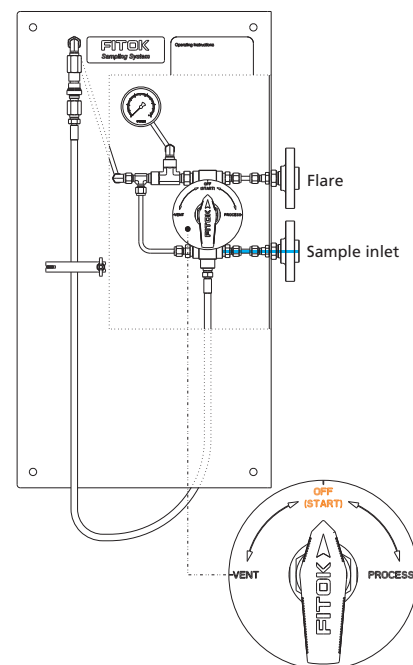

CG - Cylinder Configuration Sampling Systems for Gases


CGG1 - System Purge Type

Features

- Sampling from devices or process lines
- System purge
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

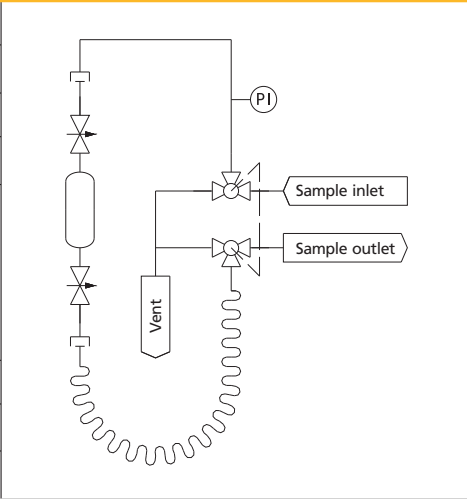

Note: Products of other specifications are available upon request.


Typical Installation Mode

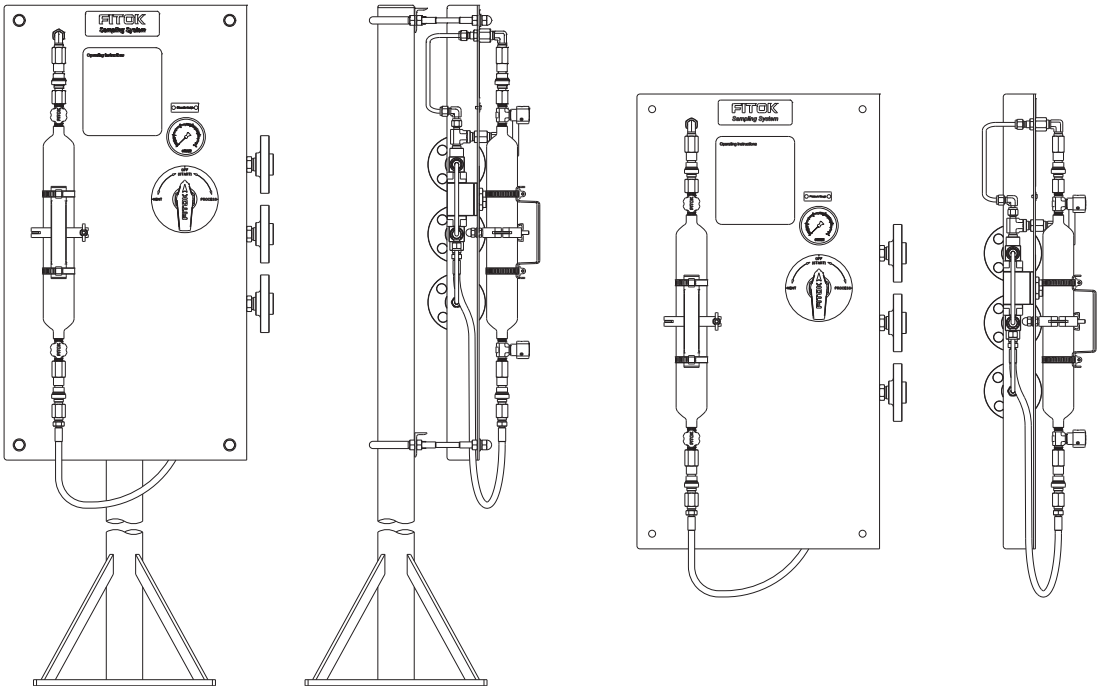

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

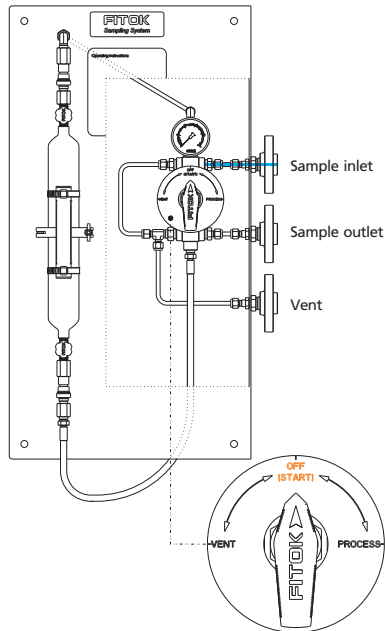


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

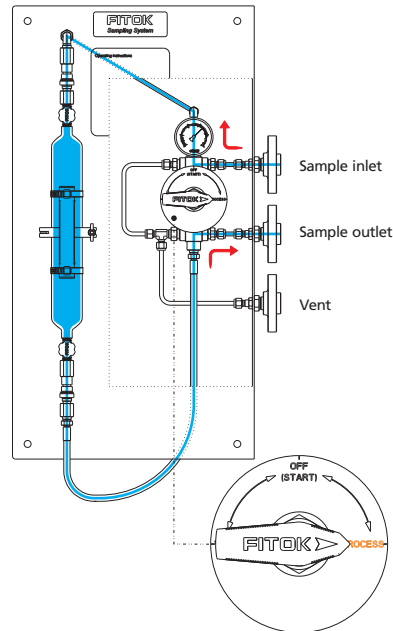


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both ends of the cylinder.

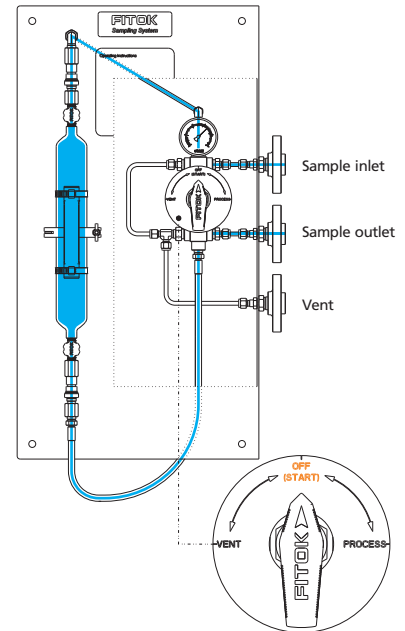


4 - Depressurization/vent

Turn the handle to the "VENT" position, connecting the sampling line with the vent line to depressurize and discharge the residual sample.

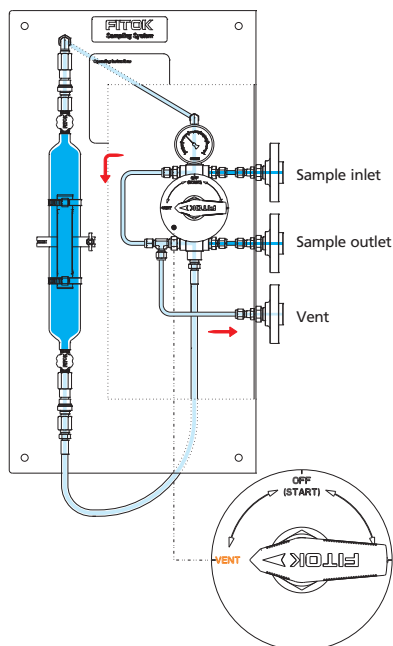

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

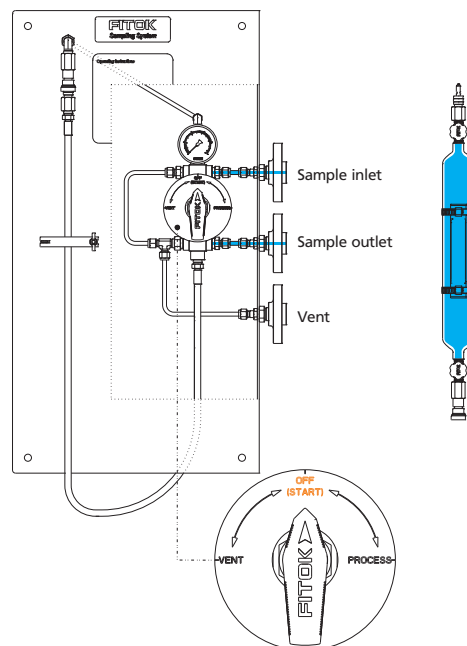


CGG2 - Bypass and System Purge Type

Features

- ⦿ Sampling from devices or process lines
- ⦿ System purge
- ⦿ Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Cylinder Assembly	500 ml cylinder
	ND Series needle valves
	QC4 Series quick-connects
	CV Series check valves
Sampling Valve	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Other Accessories	PS Series metal hoses
	Pressure gauge
Connections	NPS 1/2 flange

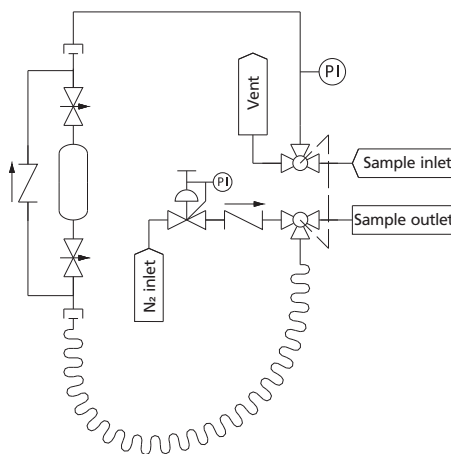

Note: Products of other specifications are available upon request.


Typical Installation Mode

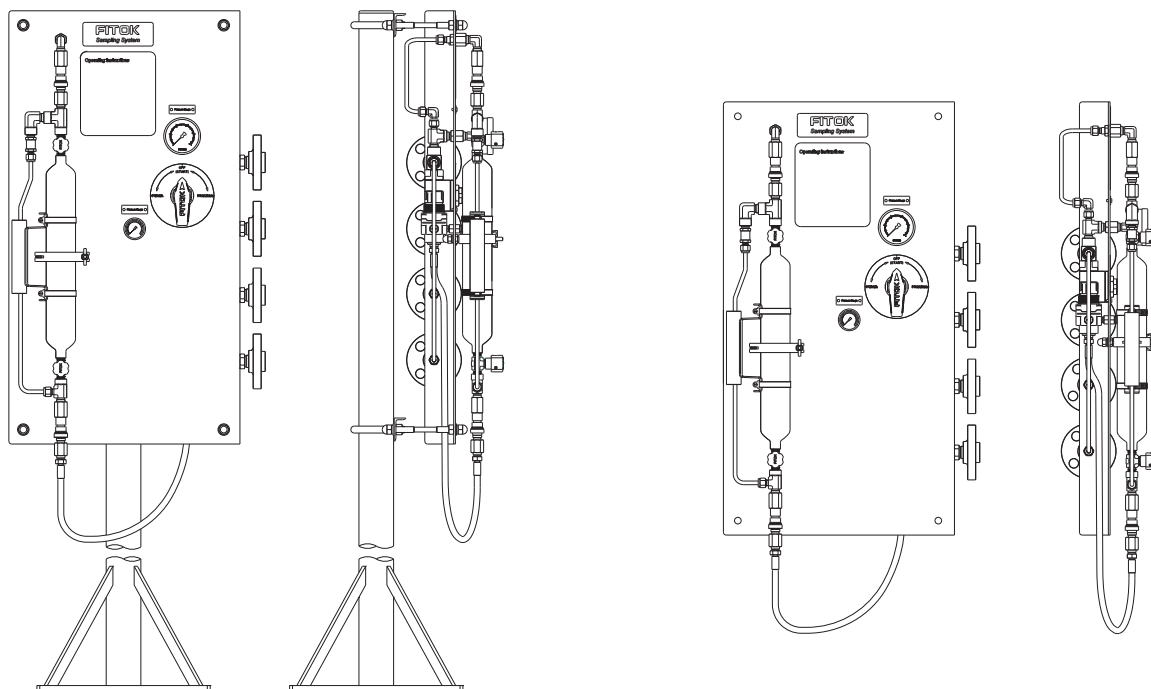

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

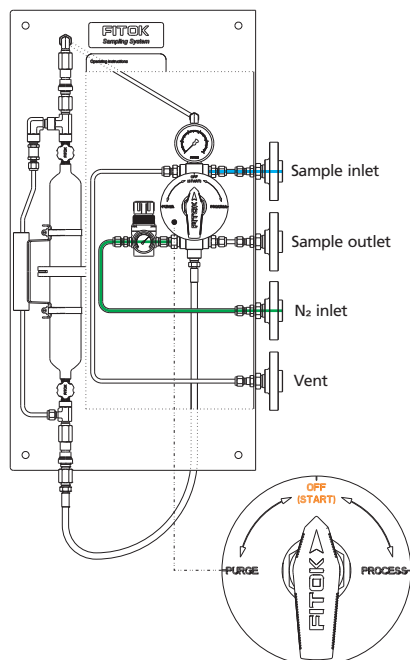


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

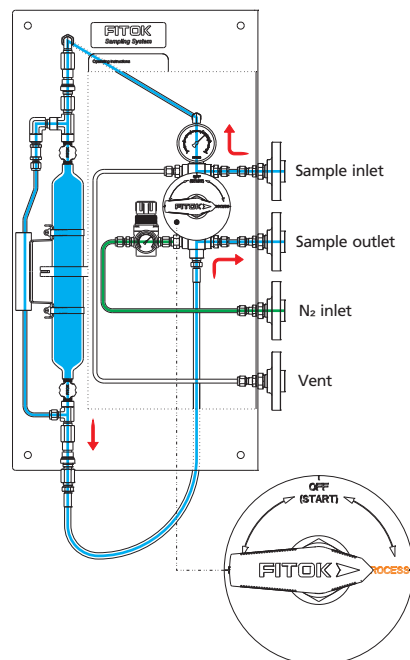


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both sides of the cylinder.

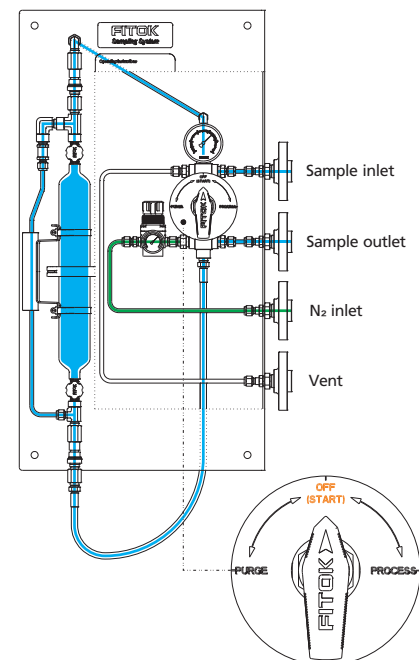


4 - Purge

Turn the handle to the "PURGE" position, allowing Nitrogen to flow through the quick-connects and bypass to force the residual sample out of the system.

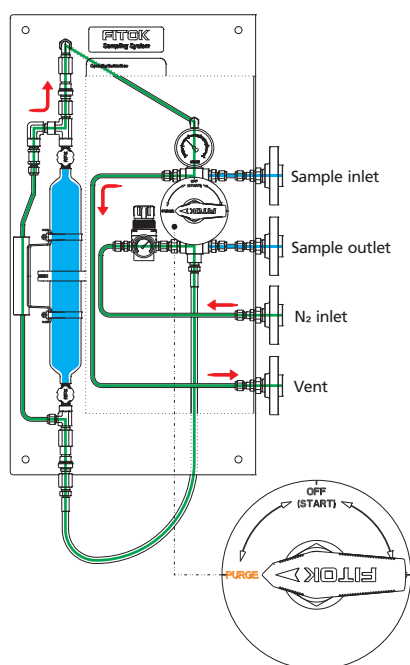

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

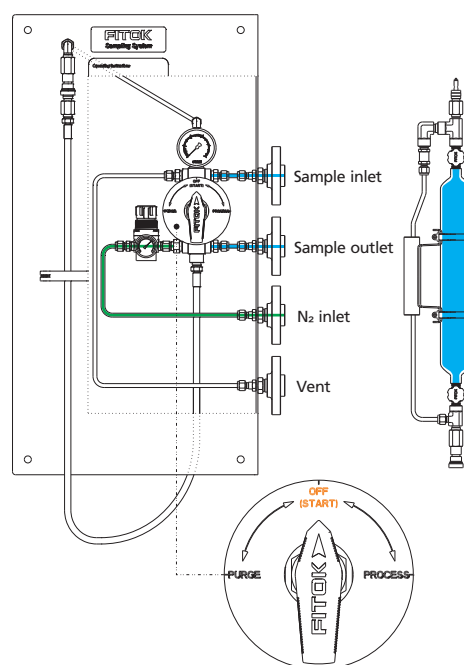


CGG3 - Vent to Flare Type

Features


- Sampling from devices or process lines
- System purge to flare (no circulation loop)
- Easy operation with a single handle by linkage valve

Basic Configuration

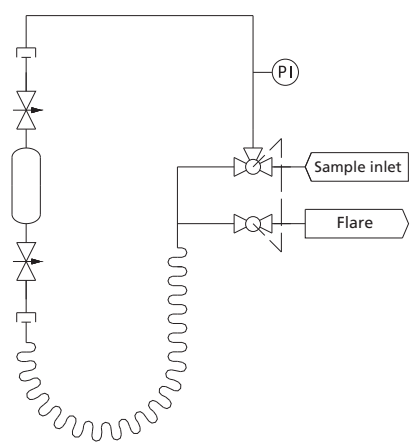Wetted Material	316 SS	
Cylinder Assembly	500 ml cylinder	
	ND Series needle valves	
Sampling Valve	QC4 Series quick-connects	
	BF Series ball valves (gearbox linkage): PTFE seat and FKM O-ring	
	Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)	
Other Accessories	PS Series metal hoses	
	Pressure gauge	
Connections	NPS 1/2 flange	

Note: Products of other specifications are available upon request.


Typical Installation Mode

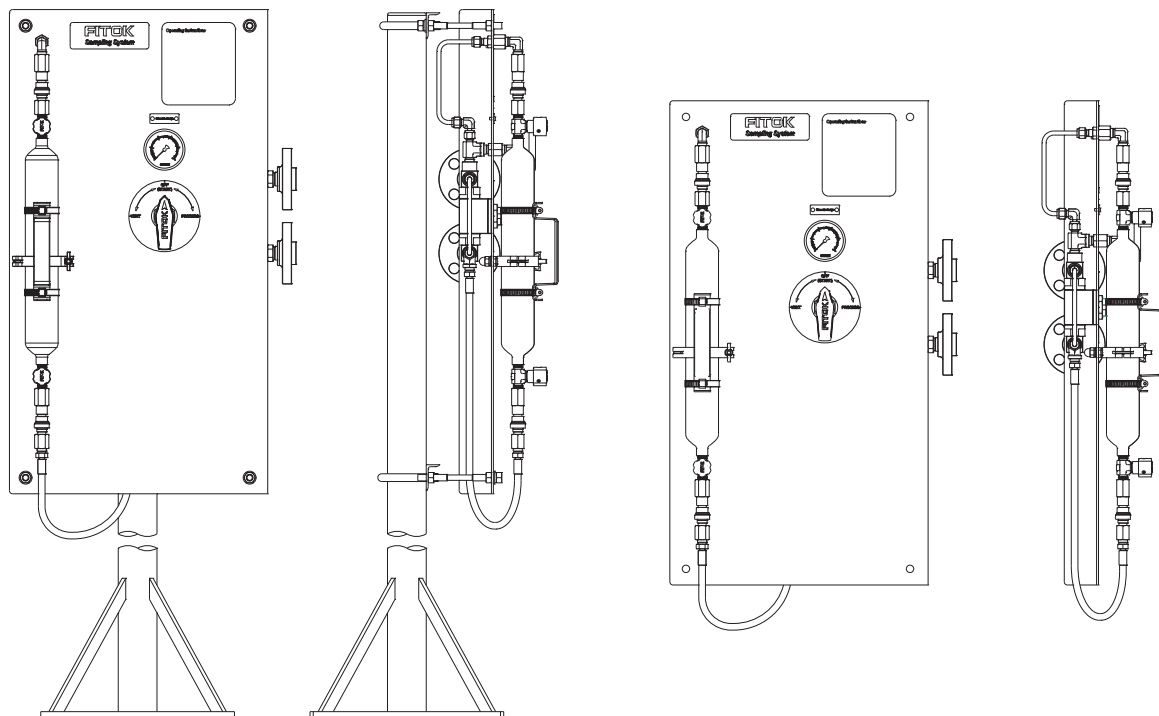

Operation


1 - Preparation

Install the sample cylinder and connect the hose to the bottom side of the cylinder. Open the needle valves at both ends of the cylinder.

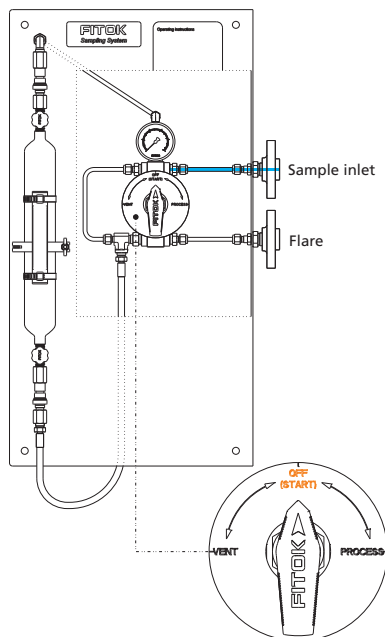


2 - Sampling

Turn the handle to the "PROCESS" position, allowing the sample to flow continuously into and fill the cylinder. Hold for a period of time to ensure representative sampling.

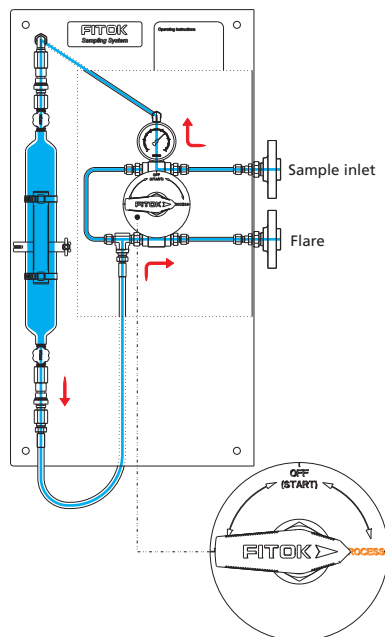


3 - Off

Turn the handle to the "OFF" position. Close the needle valves at both sides of the cylinder.

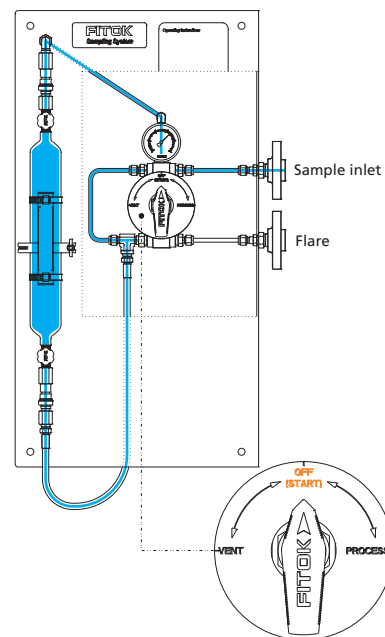


4 - Depressurization/vent

Turn the handle to the "VENT" position, connecting the sampling line to the flare to depressurize and discharge the residual sample out of the system.

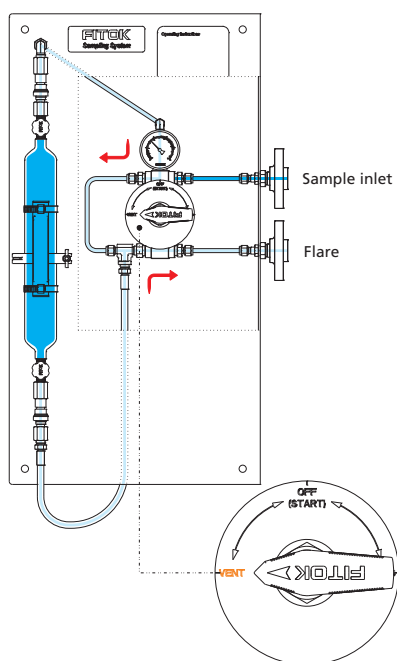

5 - Off

Turn the handle to the "OFF" position and disconnect the hose. Remove the cylinder and connect the hose to the top quick-connect to complete the sampling process.

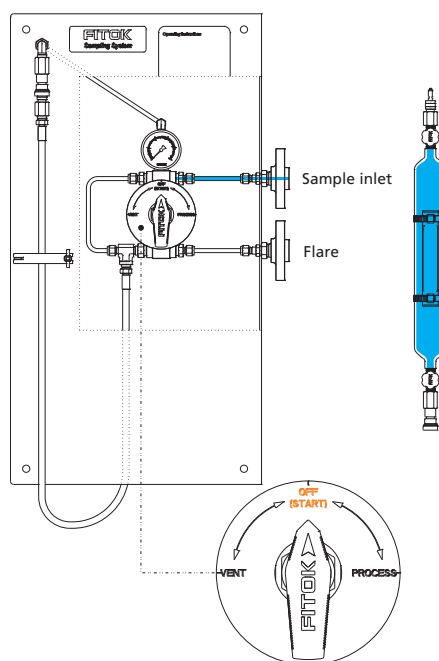

SR - Sample Handling Systems


SRB - Sample Recovery System for Bottle

Features

- Recover the sample from the sample bottle and purge the bottle
- Closed recovery without spillage
- Easy operation with a single handle by linkage valve


Basic Configuration

Wetted Material	316 SS
Needle Assembly	Process/vent needle ID: 3.0 mm (0.12")
Analysis Valve	BF Series 3-way ball valves (gearbox linkage): PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)
Nitrogen Branch	Nitrogen regulator
	CV Series check valves
	Pressure gauge
Connections	1/4" FNPT

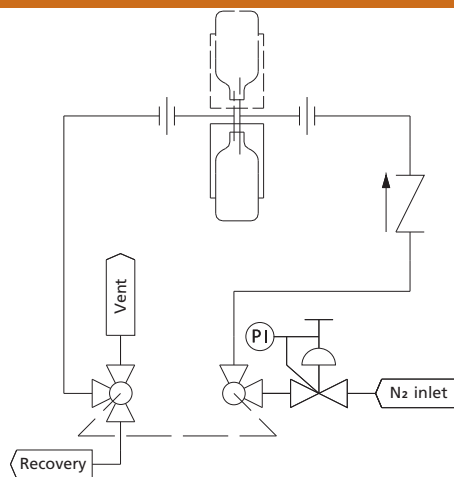

Note: Products of other specifications are available upon request.


Typical Installation Mode

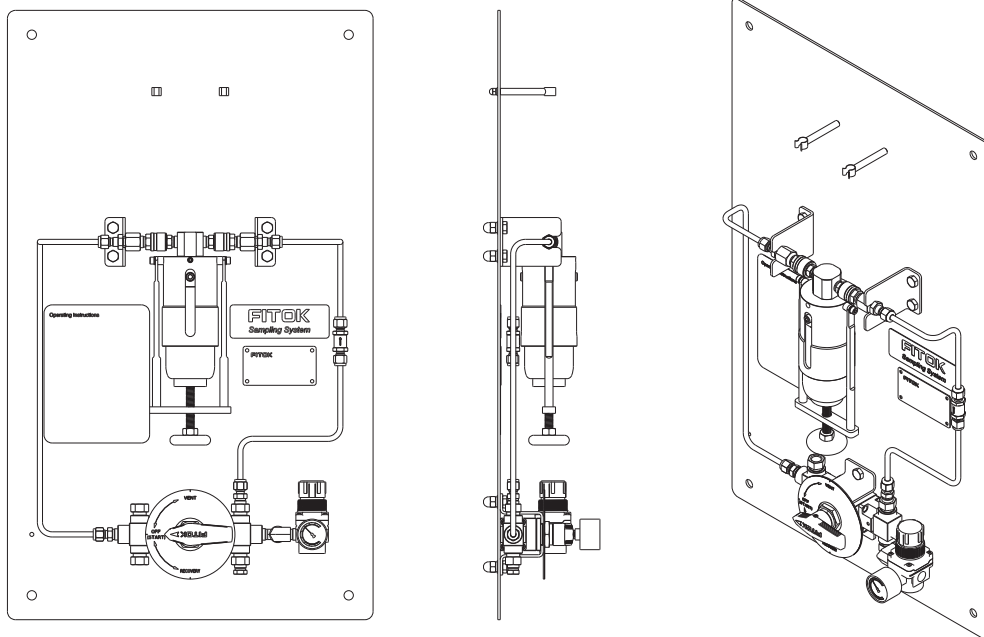

Operation


1 - Preparation

Place a new septum on the sample bottle. Insert the bottle with cap and septum into the sleeve until the septum is pierced by the needles. Turn the screw till the bottle is fixed in the sleeve.

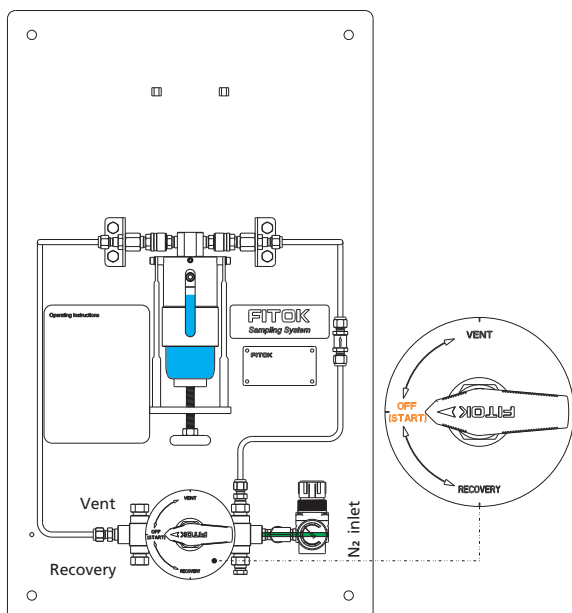


2 - Recovery

Turn the sleeve upside down and fix it by the retaining clips. Turn the handle to the "RECOVERY" position, allowing Nitrogen to drive liquids out of the bottle to the recovery connection. This position can be held for any required time.

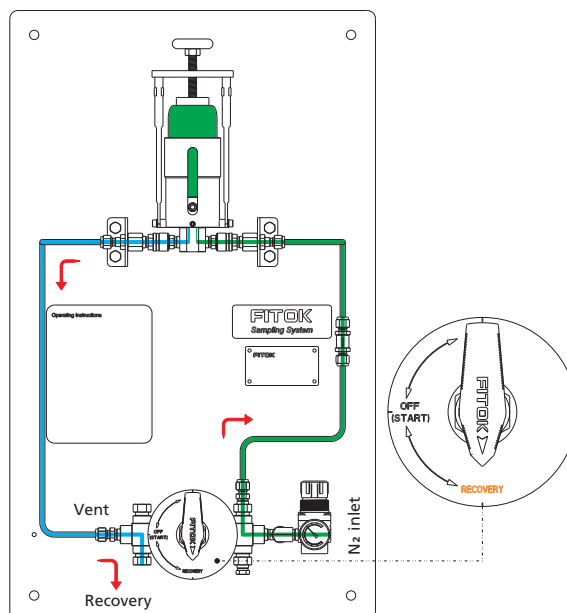


3 - Depressurization

Turn the handle to the "VENT" position to allow the bottle to depressurize.

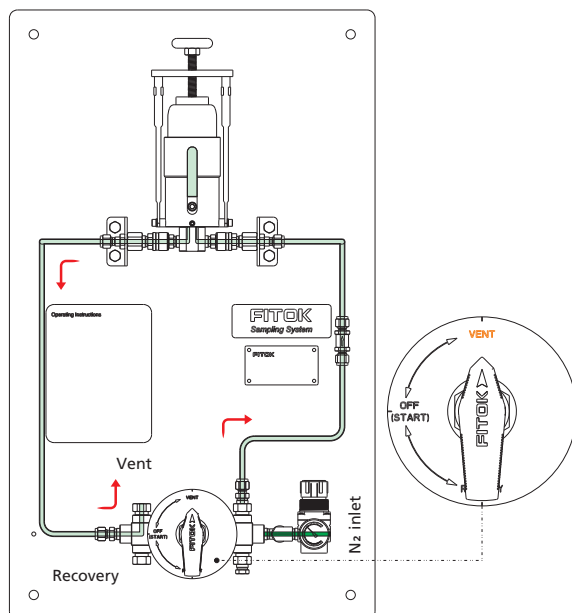

4 - Off

Turn the handle to the "OFF" position and turn the sleeve back to the initial position. Unfix the screw and remove the bottle. The septum reseals automatically to complete sample recovery.

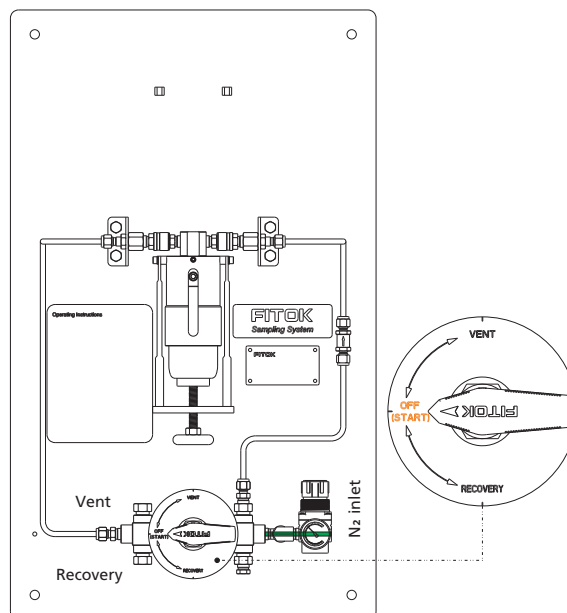


SRC - Sample Emptying System for Cylinder

Features


- Analyse the sample from the sample cylinder and empty the cylinder for application in the laboratory
- Closed emptying without spillage
- Depressurization of quick-connects

Basic Configuration

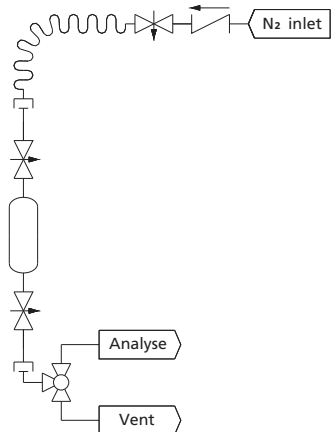Wetted Material	316 SS	
Cylinder Assembly	500 ml cylinder	
	ND Series needle valves	
	QC4 Series quick-connects	
Analysis/Vent Valve	BF Series 3-way ball valves: PTFE seat and FKM O-ring Max. working pressure: 1500 psig @ 70°F (103 bar @ 20°C) Temperature range: 0°F to 450°F (-18°C to 232°C)	
Other Accessories	CV Series check valves	
	NB Series needle valves	
	PS Series metal hoses	
Connections	Analyse/purge/vent: 1/4" FNPT	
	Cylinder: quick-connects	

Note: Products of other specifications are available upon request.


Typical Installation Mode

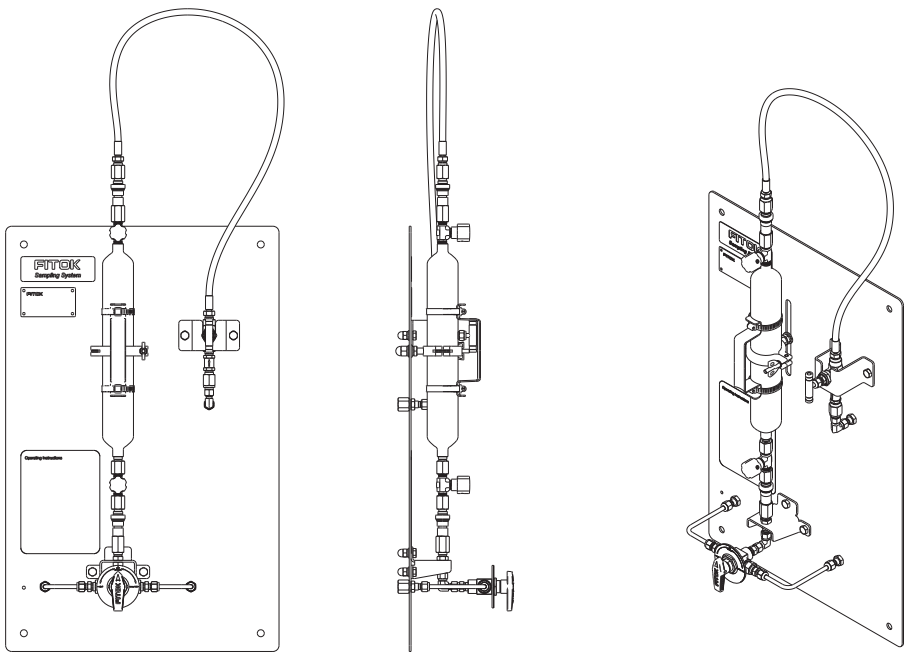

Operation


1 - Preparation

Install the sample cylinder. Connect the hose to the top quick-connect of the cylinder.

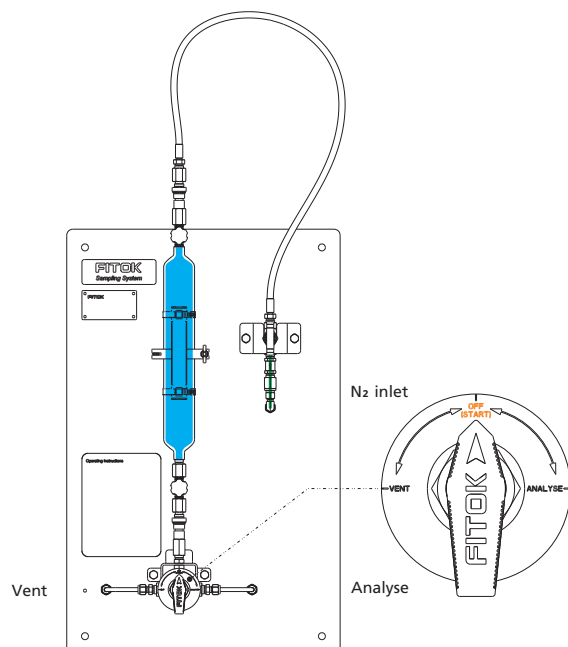


2 - Analyse

Open the needle valves of the cylinder. Turn the handle to the "ANALYSE" position, allowing the sample to flow into the analyser. When the required amount has been taken, turn the handle to the "OFF" position.

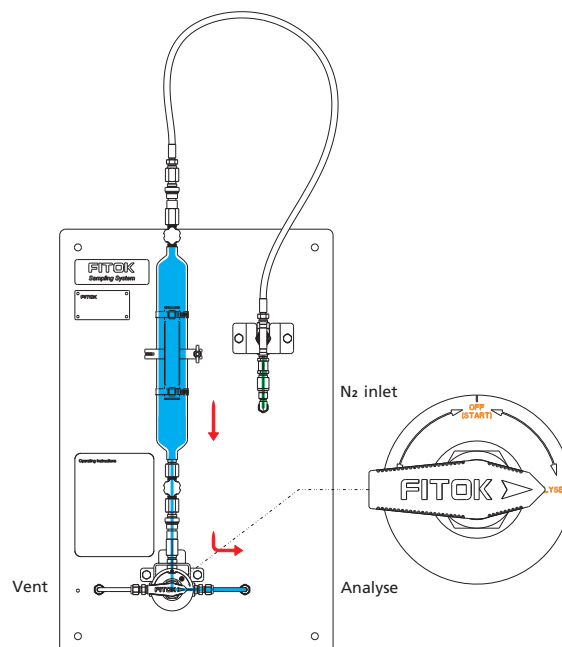


3 - Vent

Turn the handle to the "VENT" position. Open the needle valve on the Nitrogen branch, allowing Nitrogen to purge the cylinder to ensure that any residual fluid is removed from the cylinder. This position can be held for any required time.

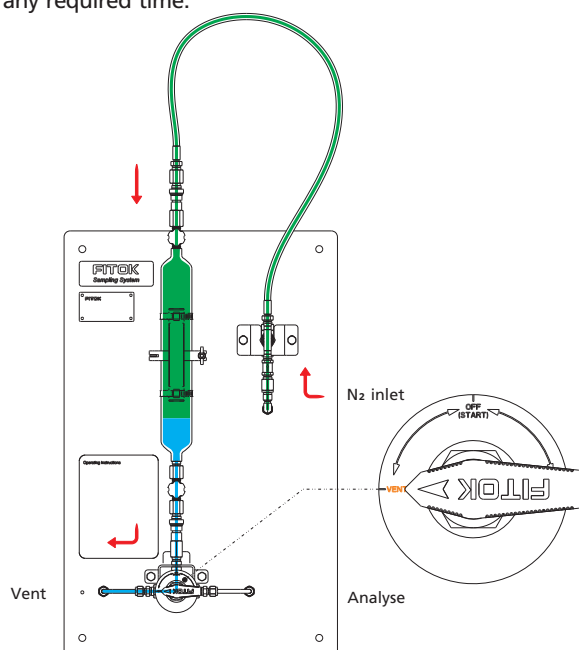

4 - Off

Turn the handle to the "OFF" position and close all the needle valves. Disconnect the hose, remove the cylinder and connect the hose to the bottom quick-connect.

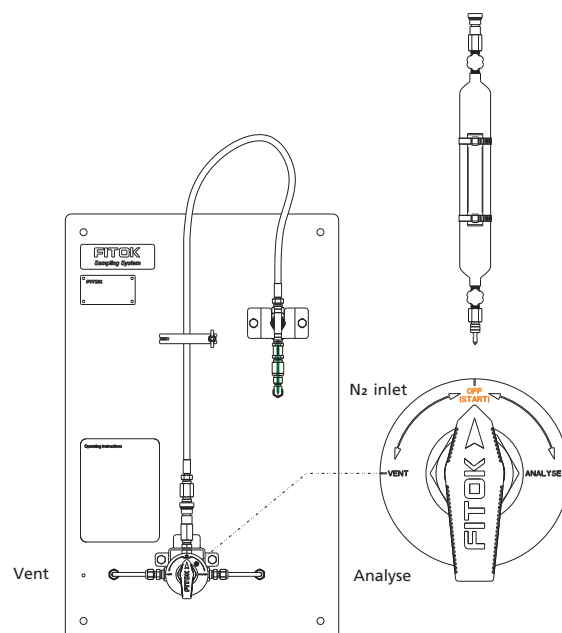

Accessories

Sample Bottles

- ◎ Material: Soda-lime glass, Amber soda-lime glass, Borosilicate glass, Polyethylene and Polypropylene
- ◎ Volume: 50 ml, 100 ml, 150 ml, 250 ml, 500 ml, 1000 ml, 2 oz, 4 oz, 8 oz, 16 oz and 32 oz



Septa

- ◎ Material: EPDM (Ethylene-Propylene-Diene Monomer), Silicone rubber, PTFE coated silicone and FKM (Viton)
- ◎ Size: $\varnothing 19$ mm, $\varnothing 21$ mm, $\varnothing 22$ mm, $\varnothing 23$ mm, $\varnothing 26$ mm, $\varnothing 29$ mm, $\varnothing 30$ mm, $\varnothing 42$ mm,



Caps

- ◎ Material: Polypropylene 304 SS and PBT
- ◎ Specification: ML20, ML22, ML24, ML28, ML33, GL25, GL32, GL45etc.



Needle Assemblies

- ◎ Material: 316L, 304L, Hastelloy C-276, etc.
- ◎ Process needle ID (mm) $\times$ Vent needle ID (mm):
1.4 $\times$ 1.4, 2.0 $\times$ 1.4, 2.0 $\times$ 2.0, 3.0 $\times$ 1.4, 3.0 $\times$ 3.0, 4.0 $\times$ 1.4 and 6.0 $\times$ 1.4
- ◎ Model: PTN, etc.



Sleeves

- ◎ Body material: 304 SS, 316 SS, etc.
- ◎ Matching bottle volume: 50 ml, 100 ml, 150 ml, 250 ml, 500 ml, 1000 ml, 2 oz, 4 oz, 8 oz, 16 oz and 32 oz



Valves

- ◎ Type: Ball valves, needle valves and in-line valves
- ◎ Body material: 316 SS, 304 SS, Hastelloy C-276, Alloy 400, etc.
- ◎ Seat material: PTFE, PCTFE and PEEK
- ◎ O-ring material: FKM (Viton), FFKM (Kalrez) and EPDM
- ◎ Size: Available in a variety of sizes
- ◎ Connection: Available in a variety of connection types



Cylinders and Sampling Assemblies

- ◎ Configuration: Standard configuration, outage tube configuration and bypass purge configuration
- ◎ Volume: 75 ml, 150 ml, 300 ml, 500 ml, 1000 ml and 2250 ml
- ◎ Material: 304L, 316L and Alloy 400
- ◎ Connection: Available in a variety of connection types
- ◎ TPED Cylinders or DOT cylinders optional



Metal Hoses

- ◎ Series: PS, MH series, etc.
- ◎ Core tube material: 316 SS and smooth PTFE
- ◎ Overbraid material: 304 SS
- ◎ Hose size: 1/4" to 1"
- ◎ Connection: Available in a variety of connection types



Quick-connects

- ◎ Series: QC, QTM series, etc.
- ◎ Body material: 316 SS, Brass, etc.
- ◎ O-ring material: FKM (Viton), FFKM (Kalrez) and EPDM
- ◎ Size: Available in a variety of sizes
- ◎ Connection: Available in a variety of connection types





Application Questionnaire for Selection of FITOK Sampling Systems

Customer Name				End User	
Project Name				Site Location	
Technical Parameters					
No.	Section	Specification			
1	Process Data	Sample/fluid name and composition			
2		Tag number			
3		Fluid phase state	☐ Liquid ☐ Gas ☐ Liquefied gas		
4		Design pressure	☐ psig ☐ bar		
5		Operating pressure* ¹	☐ psig ☐ bar		
6		Saturated vapor pressure* ²	☐ psig ☐ bar		
7		Design temp.	☐ °C ☐ °F		
8		Operating temp.* ³	☐ °C ☐ °F		
9		Particles* ⁴	Size and Content	_____ μm, _____ %	
10	Materials of Construction	Wetted material	☐ 316 SS (Std.) ☐ Alloy 400 ☐ Hastelloy C-276 ☐ Others _____		
11	Connection Type	Inlet/outlet type and size	Inlet _____ Outlet _____		
12		Vent type and size	Vent _____		
13		Nitrogen port type and size	Nitrogen port _____		
14	Sample Container	Container type	☐ Bottle ☐ Cylinder		
15	Bottle	Bottle volume	☐ 50 ml ☐ 100 ml ☐ 150 ml ☐ 250 ml ☐ 500 ml ☐ 1000 ml ☐ 2 oz ☐ 4 oz ☐ 8 oz ☐ 16 oz ☐ 32 oz ☐ Others _____		
16		Bottle material	☐ Glass (Std.) ☐ Polyethylene ☐ Polypropylene ☐ Others _____		
17		Septum material	☐ PTFE coated silicone (Std.) ☐ EPDM ☐ Others _____		
18	Cylinder	Cylinder volume	☐ 75 ml ☐ 150 ml ☐ 300 ml ☐ 500 ml ☐ 1000 ml ☐ 2250 ml ☐ Others _____		
19		Cylinder material	☐ 316L (Std.) ☐ 304L ☐ Alloy 400 ☐ Others _____		☐ PTFE coated
20	Accessories	Enclosure material	☐ 304 SS (Std.) ☐ 316 SS ☐ Others _____		
21		Panel	Material	☐ 316 SS ☐ 304 SS ☐ Others _____	
22		Pipe stand	Material	☐ 304 SS ☐ CS20 ☐ Others _____	
23		Cooler	Cooling inlet/outlet type and size	Inlet _____ Outlet _____	
24		Steam tracing	Steam inlet/outlet type and size	Inlet _____ Outlet _____	
25		Others* ⁵			



Application Questionnaire for Selection of FITOK Sampling Systems

26	P&ID	Please provide comments or sketch if necessary.
27	Documentation	☐ Material Certification EN10204:2004-3.1 ☐ Inspection & testing report
28		☐ Others, please specify:

Remarks: *1 Fixed volume sampling system is recommended when inlet pressure > 150 psig (10.3 bar).

*2 Cylinder configuration sampling system is recommended when vapor pressure > 10 psia (0.69 bar).

*3 Cooler is recommended when sample temperature > 140°F (60°C).



*4 Filter is recommended when particle size >100 µm.

*5 If other accessories (such as: check valve, carbon canister, spring return handle, etc.) are needed, please specify.

☐ Single choice
 ☐ Optional

Warranty Information

FITOK products are backed by The FITOK Limited Lifetime Warranty. For a copy, contact FITOK Group or our authorized distributors.

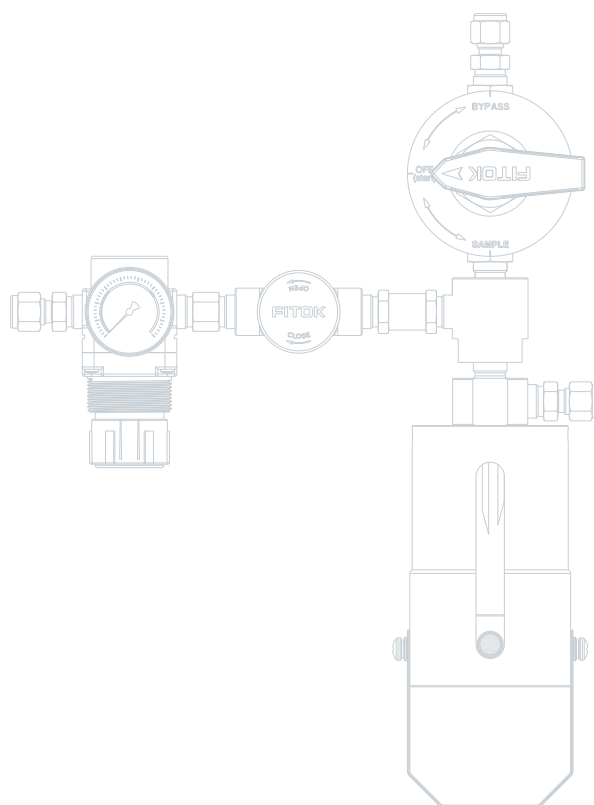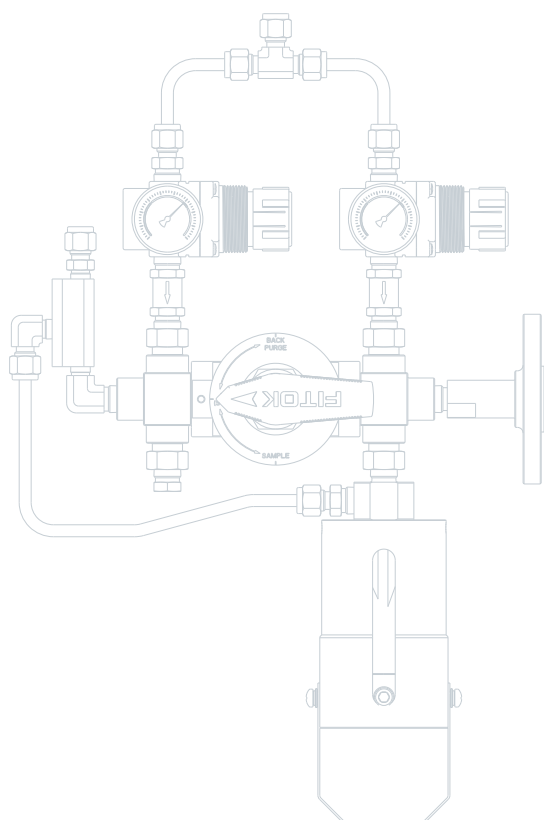

info@fitok.com
www.fitok.com



Copyright © 2024 FITOK Group

FK-FC-C-01-EN-240426

